

KBox B-201-RPL

Doc. Preliminary User Guide, Rev 0.5

Doc. ID: 1073-0628



This page has been intentionally left blank

► KBOX B-201-RPL - USER GUIDE

Disclaimer

Kontron would like to point out that the information contained in this user guide may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the user guide or any product characteristics set out in the user guide. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this user guide are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this user guide only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This user guide is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this user guide is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this user guide only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners.

©2023 by Kontron Europe GmbH

Kontron Europe GmbH

Gutenbergstraße 2 85737 Ismaning Germany www.kontron.com

Intended Use

THIS DEVICE AND ASSOCIATED SOFTWARE ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE FOR THE OPERATION OF NUCLEAR FACILITIES, THE NAVIGATION, CONTROL OR COMMUNICATION SYSTEMS FOR AIRCRAFT OR OTHER TRANSPORTATION, AIR TRAFFIC CONTROL, LIFE SUPPORT OR LIFE SUSTAINING APPLICATIONS, WEAPONS SYSTEMS, OR ANY OTHER APPLICATION IN A HAZARDOUS ENVIRONMENT, OR REQUIRING FAIL-SAFE PERFORMANCE, OR IN WHICH THE FAILURE OF PRODUCTS COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY, "HIGH RISK APPLICATIONS").

You understand and agree that your use of Kontron devices as a component in High Risk Applications is entirely at your risk. To minimize the risks associated with your products and applications, you should provide adequate design and operating safeguards. You are solely responsible for compliance with all legal, regulatory, safety, and security related requirements concerning your products. You are responsible to ensure that your systems (and any Kontron hardware or software components incorporated in your systems) meet all applicable requirements. Unless otherwise stated in the product documentation, the Kontron device is not provided with error-tolerance capabilities and cannot therefore be deemed as being engineered, manufactured or setup to be compliant for implementation or for resale as device in High Risk Applications. All application and safety related information in this document (including application descriptions, suggested safety measures, suggested Kontron products, and other materials) is provided for reference only.

NOTICE

You find the most recent version of the "General Safety Instructions" online in the download area of this product.

NOTICE

This product is not suited for storage or operation in corrosive environments, in particular under exposure to sulfur and chlorine and their compounds. For information on how to harden electronics and mechanics against these stress conditions, contact Kontron Support.

Revision History

Revision	Brief Description of Changes	Date of Issue	Author/ Editor
1.0	Initial version	2023-XXX-XX	CW
0.1	Initial version with hardware updates	2023-Aug-29	CW
0.2	Confirmed 24 VDC, rear panel and reference cards.	2023-Oct-10	CW
0.3	Added Rear panel DC figures	2023-Nov-24	CW
0.4	New figures for dimensions	2023-Dec-08	CW
0.5	New figures for Raid Module	2023-Dec 20	CW

Terms and Conditions

Kontron warrants products in accordance with defined regional warranty periods. For more information about warranty compliance and conformity, and the warranty period in your region, visit https://www.kontron.com/terms-and-conditions.

Kontron sells products worldwide and declares regional General Terms & Conditions of Sale, and Purchase Order Terms & Conditions. Visit https://www.kontron.com/terms-and-conditions.

For contact information, refer to the corporate offices contact information on the last page of this user guide or visit our website <u>CONTACT US</u>.

Customer Support

Find Kontron contacts by visiting: https://www.kontron.com/en/support-and-services.

Customer Service

As a trusted technology innovator and global solutions provider, Kontron extends its embedded market strengths into a services portfolio allowing companies to break the barriers of traditional product lifecycles. Proven product expertise coupled with collaborative and highly-experienced support enables Kontron to provide exceptional peace of mind to build and maintain successful products.

For more details on Kontron's service offerings such as: enhanced repair services, extended warranty, Kontron training academy, and more visit https://www.kontron.com/en/support-and-services.

Customer Comments

If you have any difficulties using this user guide, discover an error, or just want to provide some feedback, contact <u>Kontron Support</u>. Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website.

Symbols

The following symbols may be used in this user guide

ADANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

▲WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

NOTICE indicates a property damage message.

ACAUTION

CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Electric Shock!

This symbol and title warn of hazards due to electrical shocks (> 60 V) when touching products or parts of products. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.



ESD Sensitive Device!

This symbol and title inform that the electronic boards and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.



HOT Surface!

Do NOT touch! Allow to cool before servicing.



Laseri

This symbol inform of the risk of exposure to laser beam and light emitting devices (LEDs) from an electrical device. Eye protection per manufacturer notice shall review before servicing.



This symbol indicates general information about the product and the user guide.

This symbol also indicates detail information about the specific product configuration.



This symbol precedes helpful hints and tips for daily use.

For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

High Voltage Safety Instructions

As a precaution and in case of danger, the power connector must be easily accessible. The power connector is the product's main disconnect device.

ACAUTION

Warning

All operations on this product must be carried out by sufficiently skilled personnel only.

ACAUTION

Electric Shock!



Before installing a non hot-swappable Kontron product into a system always ensure that your mains power is switched off. This also applies to the installation of piggybacks. Serious electrical shock hazards can exist during all installation, repair, and maintenance operations on this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing any work on this product.

Earth ground connection to vehicle's chassis or a central grounding point shall remain connected. The earth ground cable shall be the last cable to be disconnected or the first cable to be connected when performing installation or removal procedures on this product.

Special Handling and Unpacking Instruction

NOTICE

ESD Sensitive Device!



Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

ACAUTION

Handling and operation of the product is permitted only for trained personnel aware of the associated dangers, within a work place that is access controlled and fulfills all necessary technical and environmental requirements. Follow the "General Safety Instructions" supplied with the product.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the product is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the product.

Lithium Battery Precautions

If your product is equipped with a lithium battery, take the following precautions when replacing the lithium battery.



CAUTION: Risk of Explosion if the lithium battery is replaced by an incorrect type. Dispose of used lithium batteries according to the Instructions.

ATTENTION: Risque d'explosion si la pile au lithium est remplacée par une pile de type incorrect. Éliminez les piles au lithium usagées conformément aux instructions.

General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the product, that are not explicitly approved by Kontron and described in this user guide or received from Kontron Support as a special handling instruction, will void your warranty.

This product should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This also applies to the operational temperature range of the specific board version that must not be exceeded.

In performing all necessary installation and application operations, only follow the instructions supplied by the present user guide.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the product, then re-pack it in the same manner as it was delivered.

Special care is necessary when handling or unpacking the product. See Special Handling and Unpacking Instruction.

Quality and Environmental Management

Kontron aims to deliver reliable high-end products designed and built for quality, and aims to complying with environmental laws, regulations, and other environmentally oriented requirements. For more information regarding Kontron's quality and environmental responsibilities, visit http://www.kontron.com/about-kontron/corporate-responsibility/quality-management.

Disposal and Recycling

Kontron's products are manufactured to satisfy environmental protection requirements where possible. Many of the components used are capable of being recycled. Final disposal of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

WEEE Compliance

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to:

- Reduce waste arising from electrical and electronic equipment (EEE)
- Make producers of EEE responsible for the environmental impact of their products, especially when the product become waste
- Encourage separate collection and subsequent treatment, reuse, recovery, recycling and sound environmental disposal of EEE
- Improve the environmental performance of all those involved during the lifecycle of EEE



Environmental protection is a high priority with Kontron. Kontron follows the WEEE directive.

Table of Contents

Sym	nbols	6
For'	Your Safety	7
High	h Voltage Safety Instructions	7
Spec	cial Handling and Unpacking Instruction	7
	ium Battery Precautions	
	neral Instructions on Usage	
Qua	ality and Environmental Management	8
	posal and Recycling	
WEE	EE Compliance	8
Tabl	le of Contents	9
	of Tables	
List	of Figures	
1/	Introduction	
2/	General Safety Instructions	
	Instructions générales de sécurité	
	Electrostatic Discharge (ESD)	
	Grounding Methods	
2.4.	Instructions for the Lithium Battery	
3/	Shipment and Unpacking	
	Packaging	
	Unpacking	
	Scope of Delivery	
	Accessories	
	Product Identification Type Label	
4/	Product Features	
	Front Panel	
	1. Power Button	
	2. USB 3.2 Gen 1 Ports	
	1. USB 3.2 Gen 2 /Gen1 Ports	
	2. USB 3.2 Gen 2 Type-C Port	
	3. USB 2.0 Ports	
	4. Display Port (DP)	24
	5. LAN Ports	
	6. Audio (Line-In, Line-Out)	
	7. COM Port	
	8. Wi-Fi Antenna (option)	
	9. DC IN (default)	
	10. DC IN 24VDC (option)	
	11. Potential Equalization Stud	
	Left and Right Side	
	. Top Cover and Bottom Side	
5/	System Expansion	
	Before Expanding	
	Drive Bay	
	Internal Expansion	
5.4.	Reference Expansion Devices	30

6/	Thermal Management	31
6.1.	Active Cooling	31
6.2.	Mount orientation	32
6.3.	Minimum Clearance (Keep out Area)	32
6.4.	. Third Party Components	32
7/	Assembly	33
7.1. [Before Assembling	33
7.2.	Opening the Product	33
7.2.1	1. Installing and Removing an M.2 Module	34
7.3.	Opening the Drive Bay	35
7.3.1	1. Installing and Removing 2.5" SSD Drive	36
7.3.2	2. Installing and Removing 2.5" SSD Dual M.2 RAID Module	37
7.4.	Connecting the Wi-Fi Antenna (option)	39
8/	Installation	40
8.1.	Before Installing	40
8.2.	. Chassis Feet	41
	. Vertical Stand (option)	
	. Mounting Brackets (option)	
8.4.	.1. Mounting Brackets Desktop	44
8.4.	.2. Mounting Brackets Wall	45
8.5.	. VESA 100 Mount Assembly (option)	46
8.5.	1. VESA 100 Mount	
9/	Starting Up	50
9.1. 1	Before Starting	50
	Connecting the External AC/DC (150 W) Power Supply	
9.3.	Connecting to a 24 VDC Power Supply (option)	51
	1. Wiring the 3-pin Mating Power Connector	
	2. Connecting to a DC Power Supply	
	. Switching On/Off	
	1. Forced Shutdown	
9.5.	Operating System (OS) and Hardware Component Drivers	
10/		
10.1.	l. Starting the uEFI BIOS	54
	2. BIOS Setup Menus	
10.3	B. BIOS Navigation	55
	4. BIOS Update	
	4.1. Updating the BIOS	
10.5	5. Recover BIOS	
11/	_	
	Drive Bay RAID Array	
	1. Drive Bay RAID Configuration	
11.1.2	.2. Drive Bay RAID Software	
12/		
	. Block Diagrams	
	2. Hardware Specification	
	3. Software Specification	
	4. Power Specification	
	4.1. AC/DC (150 W) Power Supply	
12.4	4.2. 24 VDC Connector (option)	62

12.4.3. Power Protection	63
12.4.4. Power Consumption	63
12.4.5. Potential Equalization	64
12.5. Environmental Specification	
12.6. Mechanical Specification	
12.6.1. Dimension Diagrams	
12.6.2. Dimension Diagrams- Wall Mount Brackets	
12.7. Compliance	
13/ Connectors and LEDs	70
13.1. DC IN 12 VDC, Power Connector (default)	70
13.2. DC IN 24 VDC, 120 W (option)	70
13.3. USB 3.2 Gen 2/1 Port Pin Assignment	71
13.4. USB-C 3.2 Gen 2 Port Pin Assignment	
13.5. USB 2.0 Port Pin Assignment	
13.6. Display Port (DP) V1.4a Pin Assignment	
· ·	
13.7. LAN 2.5 GbE/1GbE Connector Pin Assignment	
13.8. COM Port Pin Assignment	
13.9. Audio Line-out and Line-in Connector Pin Assignment	
13.10. Jumpers	74
13.10.1. Recovery BIOS Jumper	74
14/ Maintenance	75
14.1. Cleaning	75
14.2. Replacing Lithium Battery	
15/ Storage and Transportation	
15.1. Storage	
15.2. Transportation	
·	
16/ Technical Support	
16.1. Returning Defective Merchandise	
16.2. Warranty	
16.2.1. Limitation/Exemption from Warranty Obligation	
About Kontron	81
Itak aftablas	
List of Tables	
Table 1: Scope of Delivery	20
Table 2: Accessories	
Table 3: Drive Bay Options	29
Table 4: Internal Expansion Options	29
Table 5: Navigation Hot Keys Available in the Legend Bar	55
Table 6: Drive Bay RAID	57
Table 7: RAID Module Jumper Settings	
Table 8: S.M.A.R.T. Information Memory Attributes Examples	
Table 9: Notifications Examples	
Table 10: Event List Examples	
Table 11: Hardware Specification	
Table 12: Software Specification	
Table 13: External AC/DC 150 W Power Supply Electrical Specification	
Table 14: 24 VDC Connector Electrical Specification	
Table 16: Power Consumption Estimation	
Table 17: Environmental Specification	

Table 18: Mechanical Specifications	64
Table 19: Compliance	
Table 20: International Compliance	
Table 21: DC IN 12 VDC Power Jack Pin Assignment	
Table 22: DC IN 24 VDC 3-pin Power Connector Pin Assignment	70
Table 23: USB 3.1 Gen 2/1 (Type-A) Pin Assignment	71
Table 24: USB 3.2 Gen 2 Type-C Pin Assignment	71
Table 25: USB 2.0 Connector Pin Assignment	72
Table 26: Display Port (DP) Connector Pin Assignment	72
Table 27: LAN (2.5 GbE/1 GbE) Connector Pin Assignment	72
Table 28: RS232 Connector Pin Assignment	73
Table 29: Audio Line-out Audio Line-in Pin Assignment	73
Table 30: Recover BIOS Jumper	
Table 31: List of Acronyms	80
List of Figures	
Figure 1: KBox B-201-RPL	14
Figure 2: Type Label Examples	
Figure 3: Front Panel	
Figure 4: Rear Panels	
Figure 5: Left Side and Right Side	
Figure 6: Top Cover	
Figure 7: Bottom Side	
Figure 8: Drive Bay Options	
Figure 9: Ventilation Openings (intake)	
Figure 10: Ventilation Openings (output)	31
Figure 11: External Drive Bay with 2.5" SSD Drive	36
Figure 12: 2.5" SSD Dual RAID M.2 Module	37
Figure 13: Drive Bay with 2.5" SSD dual M.2 RAID Module	
Figure 14: Chassis Feet	
Figure 15: Vertical Stand	
Figure 16: Vertical Stand Screws	
Figure 17: Vertical Stand Mount Options	
Figure 18: Mounting Bracket	
Figure 19: Keep Out Areas – with Top Cover facing the Mount Surface	
Figure 20: Keep Out Areas – with Bottom Side facing the Mount Surface	
Figure 21: Mounting Brackets Desktop Mount Options	
Figure 22: Mounting Brackets Wall Mount Options	
Figure 23: VESA Mounting Assembly Kit	
Figure 24: KBox B-201-RPL Mounting Position	
Figure 25: Inserting the Velcro® Band	
Figure 26: Positioning the Power Supply	
Figure 27: VESA Mount Assembly with KBox B-201-RPL and Power Supply	
Figure 28: Non VESA Stand Monitor Assembly	
Figure 29: Installed VESA 100 Mount Assembly – non VESA Stand Monitor	
Figure 30: VESA Monitor Stand Assembly	
Figure 31: Installed VESA 100 Mount Assembly – non VESA Stand Monitor	
Figure 32: DC IN Power connector	
Figure 34: DC IN 3-pin Power Connector and 3-pin Mating Power Connector	
Figure 35: BIOS FTP Server Example	
Figure 36: 2.5" SSD dual RAID M.2 Module Settings	
Figure 37: Block Diagram KBox B-201-RPL	
Figure 38: Dimensions Front Panel	
Figure 39: Dimensions Rear Panel	

Figure 40: Dimensions Top Cover	65
Figure 41: Dimensions Bottom Side	
Figure 42: Dimensions Right Side and Left Side	
Figure 43: Dimensions with Mounting Brackets	
Figure 44: Recover BIOS Jumper	
Figure 45: Vertical Battery Holder	

1/ Introduction

This user guide describes the KBox B-201-RPL high performance Box PCs, also known as product within this user guide. This user guide focuses on describing the product's special features, including how to assemble, install, operate and maintain the product properly. Kontron recommends users to study the instructions within this user guide before switching on the product.

Figure 1: KBox B-201-RPL



The KBox B-201-RPL is equipped with powerful 13th Gen Intel® Core $^{\text{TM}}$ processors with up to 24 processor cores. The product is characterized not only by its powerful computing performance, but also by maximum expandability in a compact design and a low noise level ('Whisper Quiet Operation') with a maximum of 34 dB(A).

At the heart of the KBox B-201-RPL is the Kontron mITX motherboard K3833-Q, designed and manufactured in Germany that supports 13th Gen Intel® Core™ i3/i5/i7/i9 processors. The motherboard is equipped with the Intel® Q670E chipset and offers two DIMM sockets for high-performance DDR5 memory with up to 64 GBytes. Fast NVMe SSDs with up to 1 TByte are used as mass storage. In addition, the product offers an easily accessible drive bay, allowing a 2.5-inch SSD or two M.2 SSDs (RAID 1) to be integrated.

With two GbE ports, of which one offers up to 2.5 GbE, and ten USB ports (including USB-C), the KBox B-201-RPL ensures high data throughput and connectivity. The product also features four DisplayPorts, a serial interface, and supports an input voltage of 230 VAC or 24 VDC. Furthermore, fast wireless connections can be enabled via WiFi 6.

The KBox B-201-RPL can be used in a variety of ways due to various mounting options and the compact design. The product can be suspended behind a monitor using a VESA mount. Alternatively, the product can be operated on a table (vertically and horizontally), under a table, on a wall or in a control cabinet using special mounting brackets.

The thermal concept with a low-noise fan ensures smooth operation at temperatures up to $+45^{\circ}$ C and thus permanent, high-availability use around the clock.

General features overview:

- Kontron mITX K3833-Q
- Processors
 - 13th Generation Intel Core™ Processors
 - Pentium® Gold Processors
- Chipset
 - ► Intel® Q670E
- System Memory
 - 2x DIMM sockets for DDR5 up to 64 GB
- Storage:
 - 1x SSD (M.2 2242 Key M, PCle x4 /NVME) (option)
 - 1x 2.5" SSD / 1x 2.5" SSD RAID module with dual SSDs (M.2 2280) (option)
- I/O Rear:
 - ► 4x DP
 - > 3x USB 3.2 Gen 2
 - 1x USB-C 3.2 Gen 2
 - 2x USB 3.2 Gen1
 - 2x USB 2.0
 - 1x 2.5 GbE

- 1x 1 GbE
- > 1x Audio
- 1x COM
- ► IO Front:
 - 2x USB 3.2 Gen 1
- System Expansion
 - > 1x Wi-Fi /Bluetooth M.2 2230 Key E Module (option)
- Software
 - Windows 10 LTSC
 - Linux
- Power Supply
 - 90 VAC to 264 VAC, 150 W
 - > 24 VDC (option)



This preliminary version of the user guide may contain information requiring rework or unknown <TBD>. Yellow highlighted item may be subject to change and figures may not represent the final product.

2/ General Safety Instructions

Please read this passage carefully and take careful note of the instructions, which have been compiled for your safety and to ensure to apply in accordance with intended regulations. If the following general safety instructions are not observed, it could lead to injuries to the operator and/or damage of the product; in cases of non-observance of the instructions Kontron Europe is exempt from accident liability, this also applies during the warranty period.

The product has been built and tested according to the basic safety requirements for low voltage (LVD) applications and has left the manufacturer in safety-related, flawless condition. To maintain this condition and to also ensure safe operation, the operator must not only observe the correct operating conditions for the product but also the following general safety instructions:

- The product must be used as specified in the product documentation, in which the instructions for safety for the product and for the operator are described. These contain guidelines for setting up, installation and assembly, maintenance, transport or storage.
- The on-site electrical installation must meet the requirements of the country's specific local regulations.
- If a power cable comes with the product, only this cable should be used. Do not use an extension cable to connect the product.
- To guarantee that sufficient air circulation is available to cool the product, please ensure that the ventilation openings are not covered or blocked. If a filter mat is provided, this should be cleaned regularly. Do not place the product close to heat sources or damp places. Make sure the product is well ventilated.
- Only connect the product to an external power supply providing the voltage type (AC or DC) and the input power (max. current) specified on the Kontron Product Label and meeting the requirements of the Limited Power Source (LPS) and Power Source (PS2) of UL/IEC 62368-1.
- Only products or parts that meet the requirements for Power Source (PS1) of UL/IEC 62368-1 may be connected to the product's available interfaces (I/O).
- Before opening the product, make sure that the product is disconnected from the mains.
- Switching off the product by its power button does not disconnect it from the mains. Complete disconnection is only possible if the power cable is removed from the wall plug or from the product. Ensure that there is free and easy access to enable disconnection.
- The product may only be opened for the insertion or removal of add-on cards (depending on the configuration of the product). This may only be carried out by qualified operators.
- If extensions are being carried out, the following must be observed:
 - lack all effective legal regulations and all technical data are adhered to
 - the power consumption of any add-on card does not exceed the specified limitations
 - the current consumption of the product does not exceed the value stated on the product label.
- Only original accessories that have been approved by Kontron Europe can be used.
- Please note: safe operation is no longer possible when any of the following applies:
 - the product has visible damages or
 - the product is no longer functioning In this case the product must be switched off and it must be ensured that the product can no longer be operated.
- Handling and operation of the product is permitted only for trained personnel within a work place that is access controlled.
- CAUTION: Risk of explosion if the lithium battery is replaced incorrectly (short-circuited, reverse-poled, wrong lithium battery type). Dispose of used batteries according to the manufacturer's instructions.
- This product is not suitable for use in locations where children are likely to be present.

Additional Safety Instructions for DC Power Supply Circuits

- To guarantee safe operation, please observe that:
 - the external DC power supply must meet the criteria for LPS and PS2 (UL/IEC 62368-1)
 - no cables or parts without insulation in electrical circuits with dangerous voltage or power should be touched directly or indirectly
 - a reliable protective earthing connection is provided

- a suitable, easily accessible disconnecting device is used in the application (e.g. overcurrent protective device), if the product itself is not disconnectable
- a disconnect device, if provided in or as part of the product, shall disconnect both poles simultaneously
- interconnecting power circuits of different products cause no electrical hazards
- A sufficient dimensioning of the power cable wires must be selected according to the maximum electrical specifications on the product label as stipulated by EN62368-1 or VDE0100 or EN60204 or UL61010-1 regulations.

2.1. Instructions générales de sécurité

Veuillez lire attentivement ce passage et prendre bonne note des instructions, qui ont été compilées pour votre sécurité et pour assurer une application conforme aux réglementations prévues. Le non-respect des consignes de sécurité générales suivantes peut entraîner des blessures pour l'utilisateur et/ou des dommages pour le produit. En cas de non-respect des consignes, Kontron Europe est exonéré de la responsabilité en cas d'accident, ceci s'applique également pendant la période de garantie.

Le produit a été construit et testé conformément aux exigences de sécurité de base pour les applications basse tension (DBT) et a quitté le fabricant dans un état impeccable en matière de sécurité. Pour maintenir cet état et pour garantir également un fonctionnement sûr, l'opérateur doit non seulement respecter les conditions d'utilisation correctes du produit, mais aussi les consignes de sécurité générales suivantes :

- Le produit doit être utilisé conformément à la documentation du produit, dans laquelle sont décrites les instructions de sécurité pour le produit et pour l'opérateur. Celles-ci contiennent des directives pour la mise en place, l'installation et le montage, la maintenance, le transport ou le stockage.
- L'installation électrique sur place doit répondre aux exigences des réglementations locales spécifiques du pays.
- Si un câble d'alimentation est fourni avec le produit, seul ce câble doit être utilisé. N'utilisez pas de rallonge pour connecter le produit.
- Afin de garantir une circulation d'air suffisante pour refroidir le produit, veuillez vous assurer que les ouvertures de ventilation ne sont pas couvertes ou obstruées. Si un élément filtrant est fourni, celui-ci doit être nettoyé régulièrement. Ne placez pas le produit à proximité de sources de chaleur ou d'endroits humides. Veillez à ce que le produit soit bien ventilé.
- Ne connectez le produit qu'à une alimentation externe fournissant le type de tension (AC ou DC) et la puissance d'entrée (courant max.) spécifiés sur le Label Produit Kontron et répondant aux exigences de la source d'alimentation limitée (LPS) et de la source d'alimentation (PS2) de la norme UL/IEC 62368-1.
- Seuls les produits ou les pièces qui répondent aux exigences de la source d'alimentation (PS1) de la norme UL/IEC 62368-1 peuvent être connectés aux interfaces (E/S) disponibles du produit.
- Avant d'ouvrir le produit, assurez-vous qu'il est bien débranché du secteur.
- Le fait d'éteindre le produit par son bouton de mise en marche ne le déconnecte pas du secteur. Une déconnexion complète n'est possible que si le câble d'alimentation est retiré de la prise murale ou du produit. Veillez à ce que l'accès soit libre et facile pour permettre la déconnexion.
- Le produit ne peut être ouvert que pour l'insertion ou le retrait de cartes supplémentaires (selon la configuration du produit). Cette opération ne peut être effectuée que par des opérateurs qualifiés.
- Si des extensions sont effectuées, les points suivants doivent être respectés :
 - toutes les réglementations légales en vigueur et toutes les données techniques sont respectées
 - la consommation électrique d'une carte supplémentaire ne dépasse pas les limites spécifiées
 - la consommation actuelle du produit ne dépasse pas la valeur indiquée sur l'étiquette du produit.
- Seuls les accessoires d'origine approuvés par Kontron Europe peuvent être utilisés.
- Veuillez noter que la sécurité des opérations n'est plus possible lorsque l'une des conditions suivantes s'applique.
 - le produit présente des dommages visibles ou
 - le produit ne fonctionne plus. Dans ce cas, le produit doit être éteint et il faut s'assurer que le produit ne puisse plus être utilisé.
- La manipulation et le fonctionnement du produit ne sont autorisés que pour le personnel formé dans un lieu de travail dont l'accès est contrôlé.
- ATTENTION: Risque d'explosion si la pile au lithium est remplacée par une pile de type incorrect. Éliminez les piles au lithium usagées conformément aux instructions.

- Ce produit n'est pas adapté à une utilisation dans des endroits où des enfants sont susceptibles d'être présents Instructions de sécurité supplémentaires pour les circuits d'alimentation en courant continu
- Pour garantir un fonctionnement sûr, veuillez observer ce qui suit:
 - l'alimentation électrique externe en courant continu doit répondre aux critères des LPS et PS2 (UL/IEC 62368-1)
 - aucun câble ou pièce non isolée dans les circuits électriques ayant une tension ou une puissance dangereuse ne doit être touché directement ou indirectement
 - une connexion fiable à la terre de protection est fournie
 - un dispositif de déconnexion approprié et facilement accessible est utilisé dans l'application (par exemple, un dispositif de protection contre les surintensités), si le produit lui-même n'est pas en mesure d'être déconnecté.
 - un dispositif de déconnexion, s'il est prévu dans le produit ou s'il en fait partie, doit déconnecter les deux pôles simultanément
 - l'interconnexion des circuits électriques de différents produits ne présente aucun risque électrique
- Un dimensionnement suffisant des fils du câble d'alimentation doit être choisi en fonction des spécifications électriques maximales figurant sur l'étiquette du produit - comme stipulé par les réglementations EN62368-1 ou VDE0100 ou EN60204 ou UL61010-1.

2.2. Electrostatic Discharge (ESD)



A sudden discharge of electrostatic electricity can destroy static-sensitive devices or microcircuitry.

Proper packaging and grounding techniques are necessary precautions to prevent damage. Always take the following precautions:

- 1. Transport boards in ESD-safe containers such as boxes or bags.
- 2. Keep electrostatic sensitive parts in their containers until they arrive at the ESD-safe workplace.
- 3. Always be properly grounded when touching a sensitive board, component, or assembly.
- 4. Store electrostatic-sensitive boards in protective packaging or on antistatic mats.

2.3. Grounding Methods

By adhering to the guidelines below, electrostatic damage to the product can be avoided:

- 1. Cover workstations with approved antistatic material. Always wear a wrist strap connected to workplace. Always use properly grounded tools and equipment.
- 2. Use antistatic mats, heel straps, or air ionizers for more protection.
- 3. Always handle electrostatically sensitive components by their edge or by their casing.
- 4. Avoid contact with pins, leads, or circuitry.
- 5. Turn off power and input signals before inserting and removing connectors or connecting test equipment.
- **6.** Keep work area free of non-conductive materials such as ordinary plastic assembly aids and Styrofoam.
- 7. Use only field service tools that are conductive, such as cutters, screwdrivers, and vacuum cleaners.
- **8.** Always place drives and boards PCB-assembly-side down on the foam.

2.4. Instructions for the Lithium Battery

The product is equipped with a CR2032 lithium battery and is not designed to operate without a lithium battery. If the lithium battery is empty or disconnected, the BIOS settings will be set to the factory defaults. Replace the Kontron specific lithium battery assembly only with the same type of lithium battery or with a Kontron recommended lithium battery type.

To replace the lithium battery observe the instructions described in Chapter 14.2: Replacing Lithium Battery.

ACAUTION

Danger of Explosion if the lithium battery is incorrectly placed!

- Replace only with the same or equivalent type recommended by the manufacturer
- Dispose of used batteries according to the manufacture's instructions

VORSICHT- Explosionsgefahr bei unsachgemäßem Austausch der Batterie!

- Ersatz nur durch denselben oder einen vom Hersteller empfohlenen gleichwertigen Typ
- Entsorgung gebrauchter Batterien nach Angaben des Herstellers

ATTENTION- Risque d'explosion avec l'échange inadéquat de la batterie!

- Remplacement seulement par le même ou un type équivalent recommandé par le producteur
- L'évacuation des batteries usagées conformément à des indications du fabricant

PRECAUCION- Peligro de explosión si la batería se sustituye incorrectamente!

- Sustituya solamente por el mismo o tipo equivalente recomendado por el fabricante
- Disponga las baterías usadas según las instrucciones del fabricante

ADVARSEL- Lithiumbatteri -- Eksplosionsfare ved fejlagtig håndtering!

- Udskiftning må kun ske med batteri af samme fabrikat og type
- Levér det brugte batteri tilbage til leverandøren

ADVARSEL- Eksplosjonsfare ved feilaktig skifte av batteri!

- Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten
- Brukte batterier kasseres i henhold til fabrikantens instruksjoner

VARNING- Explosionsfara vid felaktigt batteribyte!

- nvänd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren
- assera använt batteri enligt fabrikantens instruktion

VAROITUS- Paristo voi räjähtää, jos se on virheellisesti asennettu!

- Vaihda paristo ainoastaan lalteval- mistajan suosittelemaan tyyppiln
- Hävitä käytetty paristo valmistajan ohjeiden mukaisesti

After removing the lithium battery, dispose of the lithium battery according to the regulations within your region.



Do not dispose of lithium batteries in general trash collection. Dispose of the lithium battery according to the local regulations dealing with the disposal of these special materials, (e.g. to collecting points for lithium battery disposal).



The product is not designed to operate without a lithium battery. If the lithium battery is empty or disconnected, the BIOS settings will be set to the factory defaults.

3/ Shipment and Unpacking

3.1. Packaging

The KBox B-201-RPL is packaged together with all parts, in a product specific cardboard package designed to provide adequate protection and absorb shock.

3.2. Unpacking

To unpack the product, perform the following:

- 1. Remove packaging.
- 2. Do not discard the original packaging. Keep the original packaging for future transportation or storage.
- 3. Check the delivery for completeness by comparing the delivery with the original order.
- 4. Keep the associated paperwork. It contains important information for handling the product.
- 5. Check the product for visible shipping damage.

If you notice any shipping damage or inconsistencies between the contents and the original order, contact your dealer.

3.3. Scope of Delivery

The scope of delivery describes the parts included in your delivery. Check that the delivery is complete, and contains the items listed. If damaged or missing items are discovered, contact your dealer.

Table 1: Scope of Delivery

Product	Description
KBox B-201-RPL (AC/DC PSU)	KBox B -201-RPL with K3833-Q mITX motherboard, Intel® Q670E chipset and installed requested configuration (M.2 & SSD) with AC/DC 150 W PSU.
KBox B-201-RPL (24 VDC option)	KBox B -201-RPL with K3833-Q mITX motherboard, Intel® Q670E chipset and installed requested configuration (M.2 & SSD) with 24 VDC mating power connector.

3.4. Accessories


Table 2: Accessories

Part Number	Part	Part Description		
1064-8948 AC Power Supply		External AC/DC power supply 90 to 264 VAC, 150 W PSU		
0-0062-3268	3-pin Power Connector	Phoenix 3-pin power connector (PSC 1.5/3-F)		
0-0064-2173	Power Cord EU	Euro (Type-A), 2.5 m		
0-0064-4173	Power Cord UK	UK (Type-C), 2.5 m		
0-0064-4317 Power Cord US		US, 2m		
1065-3431 Vertical Stand Kit		Metal stand and two screws (M3x6)		
1065-3430	Wall Mount Set	Two wall mount brackets and four screws (M3x6)		
1062-5317 VESA Mount Kit		VESA 100 mounting frame, Velcro® band, 4x screws (M3x 8 mm), 4x screws (M4x 20 mm) and 4x spacers		
0-0067-006 Chassis feet		Four round adhesive rubber chassis feet		

3.5. Product Identification Type Label

The KBox B-201-RPL has two type labels including information for the ordered configuration. One Type label includes product specific information such as the electrical specification and the second type label includes product compliance and disposal information.

Figure 2: Type Label Examples

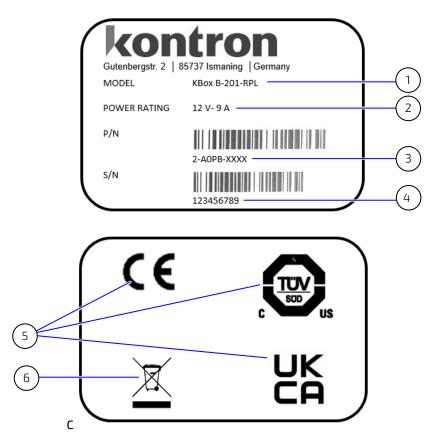

- 1 Product family
- 2 Electrical specification (12V DC or 24 VDC)
- 3 Part Number with bar code
- 4 Serial number with barcode
- 5 Certification label (separate)
- 6 Disposal

4/ Product Features

Before working with the KBox B-201-RPL, Kontron recommends that users take a few minutes to study this chapter and learn about the various parts and features.

4.1. Front Panel

The front panel features the power button, two USB 3.2 Gen 1 ports, and ventilation openings for air-output.

Figure 3: Front Panel



- 1 2x USB 3.2 Gen 1 ports
 - Ventilation openings (air-output)
- 3 Power button with LED

4.1.1. Power Button

The power button switches 'on' or switches 'off' the product and includes an integrated power LED that illuminates blue in the 'on' state. Pressing the power button for longer than four seconds initiates a forced system shutdown, and switches the product from the 'on' to the 'off' state.



Performing a forced system shutdown can lead to loss of data or other undesirable effects!

4.1.2. USB 3.2 Gen 1 Ports


The two front panel USB 3.2 Gen 1 ports are USB 2.0 backward compatible allowing for the connection of both USB 3.0 or USB 2.0 devices. Further USB ports are available on the rear panel.

For the USB 3.2 Gen 1 pin assignment, see Chapter 13.3: USB 3.2 Gen 2/1 Port Pin Assignment.

4.2. Rear Panel

The rear panel features the main I/O interfaces, power connector (DC IN), ventilation openings and two top cover fastening screws.

Figure 4: Rear Panels

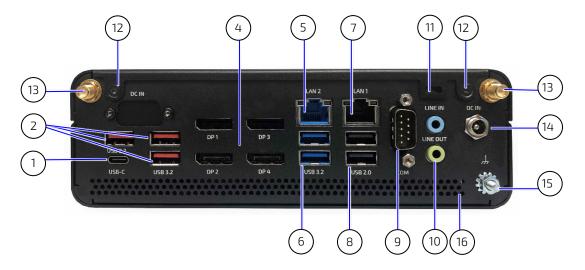



- 1 1x USB C 3.2 Gen 2
- 2 3x USB 3.2 Gen 2
- 3 1x DC IN (24 VDC option)
- 4 4x DP V1.4a
- 5 1x LAN 2.5 GbE
- 6 2x USB 3.2 Gen 1
- 7 1x LAN 1 GbE
- 8 2x USB 2.0
- 9 1x COM (RS232)
- 10 1x Audio (Line In & Out)
- 11 1x Kensington lock
- 12 2x Cover screws
- 13 2x Antenna (breakouts)
- 14 1x DC IN (default)
- 15 Potential equalization stud
- 16 Ventilation openings (air-output)

4.2.1. USB 3.2 Gen 2 / Gen1 Ports

The USB 3.2 Gen 2/Gen 1 Type-A ports are backward compatible enabling the connection of both USB 3.0 or USB 2.0 compatible devices. Kontron recommends the use on USB 3.2 Gen 2/Gen 1 compliant devices or cables only. The use of devices and cables that violate the USB 3.2 Gen 2/Gen 1 specification may cause conditions such as non-recognition of the device or read/write errors.

For the pin assignment, see Chapter 13.3: USB 3.2 Gen 2/1 Port Pin Assignment.

4.2.2. USB 3.2 Gen 2 Type-C Port

The USB Type-C port supports USB 3.2 Gen 2. Power delivery not supported.

For the pin assignment, see Chapter 13.4: USB-C 3.2 Gen 2 Port Pin Assignment.

4.2.3. USB 2.0 Ports

The two USB 2.0 ports enable the connection of USB 2.0 devices only.

For the pin assignment, see Chapter 13.5: USB 2.0 Port Pin Assignment.

4.2.4. Display Port (DP)

The four DP V1.4a ports are Dual mode/ Display Port ++ compatible with a maximum resolution of 7680 x 4320 @ 60 Hz and enable the connection of up to four digital displays directly or with an adapter.



Using an adapter to convert a DP signal to DVI or HDMI may cause disturbance.



Display Port adapters:

- DP to HDMI (passive/ active)
- DP to DVI (passive/active)
- DP to VGA (active)

Depending on the required resolution, the following maximum number of simultaneous displays can be supported.

Display Resolution	Number of Simultaneous Displays
8k @ 60Hz HDR or	1
5k @ 120Hz HDR	
8k@60HzSDRor	2
5k @ 60Hz HDR	
4k @ 60Hz HD	4

The display output priority order is DP1 > DP2 > DP3 > DP4.

For the pin assignment, see Chapter 13.6: Display Port (DP) V1.4a Pin Assignment.

4.2.5. LAN Ports

The LAN ports supports one 2.5 GbE port implemented using the Intel® i226LM Ethernet controller and one GbE port implemented using the Intel® i219LM Ethernet controller. The RJ45 LAN connectors include speed and link activity status LEDs, and support Teaming and Time Sensitive Networking (TSN).

For the pin assignment, see Chapter 13.7: LAN 2.5 GbE/1GbE Connector Pin Assignment.

4.2.6. Audio (Line-In, Line-Out)

The two audio connectors audio Line-input (Line-in/MIC) and Headphone output (Line-out) enable the connection of full High Definition (HD) devices.



Line-Input Supports:

- Line: stereo max. 1.3 Vrms (Gain=0 dB) input voltage.
- Microphone:electret microphones with 1,3Vrms (Gain=0dB) or 0,13Vrms (Gain=20dB) Headphone Output Supports.
- Stereo max. 1.2 Vrms output voltage at 32 Ohm load.

For the pin assignment, see Chapter 13.9: Audio Line-out and Line-in Connector Pin Assignment.

4.2.7. COM Port

The serial port (COM) enables the connection of a RS232 compatible serial device.

For the pin assignment, see Chapter 13.8: COM Port Pin Assignment.

4.2.8. Wi-Fi Antenna (option)

The Wi-Fi option supports up to two antenna and features:

- Dual band frequencies (2.4 GHz, 5 GHz and 6 GHz)
- Wi-Fi 6E (IEEE802.11 ax) with a PCIe Interface
- ▶ Bluetooth (BT) 5.3 with a USB Interface



The Wi-Fi option populates the 2230 key E socket. When installed this socket is not available for other M.2 modules.

4.2.9. DC IN (default)

The DC IN power jack (Figure 4, pos. 14) connects to the supplied external AC/DC (90/264 VAC to 12 VDC, 150 W) power supply.

For more information, see Chapter 12.4: Power Specification and for the pin assignment, see Chapter 13.1: DC IN 12 VDC Power Jack (default).



Power the product with the supplied external AC/DC (90 /264 VAC to 12 VDC) power supply only.



Due to different external connectors and internal components, the DC IN 12 VDC (default) and DC IN 24 VDC (option) are not interchangeable and each requires the individual power solution supplied by Kontron.

4.2.10. DC IN 24VDC (option)

The optional 3-pin DC IN 24 VDC power connector connects to a user defined external 24 VDC power supply using the supplied mating power connector and wiring supplied by the user.

For more information, see Chapter 12.4: Power Specification and Chapter 13.2: DC IN 24 VDC (option).

ACAUTION

Only connect to an external 24 VDC power supply that meets the product's electrical specification displayed on the product type label, and the power consumption, power limitation and power protection requirements specified in this user guide. The 24 VDC power supply must automatically recover from AC power loss and startup under peak loading.

NOTICE

Due to different external connectors and internal components, the DC IN 12 VDC (default) and DC IN 24 VDC (option) are not interchangeable and each requires the individual power solution supplied by Kontron.

4.2.11. Potential Equalization Stud


The potential equalization stud is not a ground connection. When connected the potential equalization stud ensures that all connected systems share a common potential.



The potential equalization stud is not a ground connection

4.3. Left and Right Side

Figure 5: Left Side and Right Side

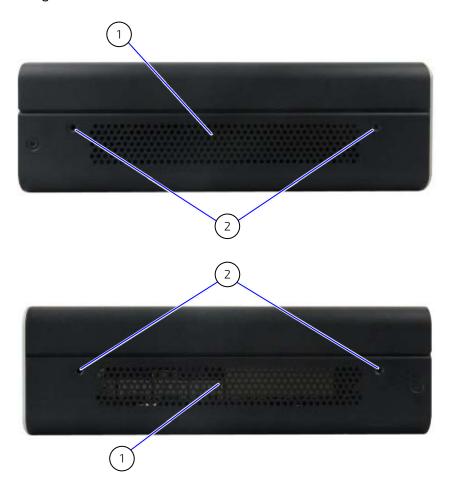


- 1 Ventilation openings (air-output)
- 2 2x threaded screw holes for wall mount brackets

4.4. Top Cover and Bottom Side

The top cover features ventilation openings, a metal mesh and a metal plate with a circular opening. The circular opening's position above the internal fan aids ventilation and the metal mesh prevents unwanted items from entering the product.


Figure 6: Top Cover

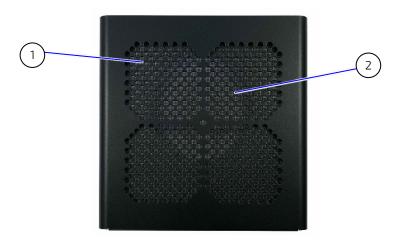

- Ventilation openings with metal mesh (air-intake)
- 2 Circular opening above internal fan

The bottom side features a 2.5" SSD drive bay accessed using a single screw. For more information regarding available drives, see Chapter 5.2: Drive Bay. The supplied four self-adhesive rubber chassis feet may be attached to the bottom side for use in desktop applications. Additionally, four threaded screw holes may be used to mount the product on the back of a VESA 100 compatible monitor, see Chapter 8.5: VESA 100 Mount Assembly (option).

Figure 7: Bottom Side

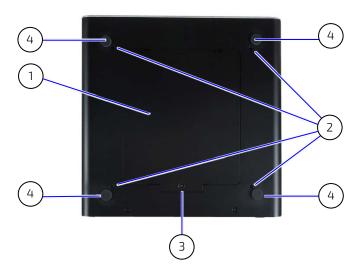

- 1 2.5" SSD drive bay cover
- 2 4 x Threaded holes for VESA 100 mount assembly
- 3 Drive bay cover fastening screw
- 4 4x Rubber chassis feet



When mounting the product using the four threaded screw holes remove any attached rubber chassis feet, to enable the product to rest flush against the mounting surface.

5/ System Expansion

5.1. Before Expanding

Before expanding the KBox B-201-RPL users must consider the product's maximum allowed power consumption and take cooling into consideration.


5.2. Drive Bay

The external drive bay supports one removable 2.5" SSD drive or 2.5" SSD dual M.2 RAID (RAID 0/1) module.

Table 3: Drive Bay Options

Location	Туре	Interface	Removable	RAID	Expansion Device
External	Storage	SATA III 6Gb/s	✓		2.5" SSD (up to 4 TByte)
Drive	Storage	SATA III 6Gb/s	✓	✓	2.5" SSD dual M.2 RAID (RAID 0/1)
Bay					with two M.2 2280 SSD modules
					(2x 512 GByte, 2x 256 GByte & 2x 1 TB)

Figure 8: Drive Bay Options

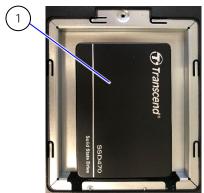



1 2.5" SSD drive

2 2.5" SSD dual M.2 RAID module with two M.2 2280 SSD modules

5.3. Internal Expansion

The two internal M.2 sockets support system expansion.

Table 4: Internal Expansion Options

Socket	Type	Interface	Expansion Device
M.2 2242 Key M	Storage	PCIe x4 / NVMe	SSD (up to 1 TByte)
M.2 2230 Key E	Wi-Fi/BT	PCIe x1/USB 2.0	Dual band frequencies (2.4 GHz, 5 GHz and 6 GHz) Wi-Fi 6E (IEEE802.11 ax) / BT 5.3



No support for SATA based M.2 modules on the motherboard.

5.4. Reference Expansion Devices



For a list of the KBox B-201-RPL reference expansion devices, visit Kontron's <u>Customer Section.</u>

6/ Thermal Management

6.1. Active Cooling


The KBox B-201-RPL is actively fan cooled. An internal processor fan draws in air through the top cover's ventilation openings and distributes the incoming air over critical internal components before the air exits through the ventilation openings on the right, left, front and rear sides.

ACAUTION

Obstructing ventilation openings may cause overheating

Do not to place items directly in front of the top cover ventilation openings and observed that all ventilation openings are not covered or obstructed.

Figure 9: Ventilation Openings (intake)

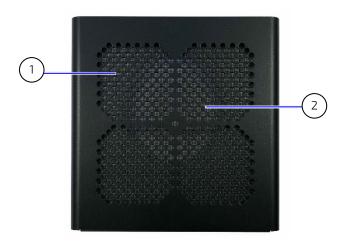

- Ventilation openings with metal mesh (air-intake)
- 2 Circular internal fan opening

Figure 10: Ventilation Openings (output)



- 1 Front panel air-output
- 2 Rear panel air-output
- 3 Left side air-output
- 4 Right side air-output

6.2. Mount orientation

The permitted mounting orientations are horizontal with the top side facing upward and vertical in all mount orientations.

Mounting the product with the top cover facing downwards is not permitted. If the top cover faces downwards, not enough air enters the product to cool the processor adequately. This may cause overheating or melting, and hence is a possible fire hazard due to hot substances exiting through the top cover's ventilation opening.

▲WARNING

Danger of Fire

Mounting the product with the top cover facing downward in not permitted and may cause overheating or melting, and hence may cause a fire hazard or personal injury. To avoid risk of fire and personal injury, observe the following:

- · Do not mount with the top cover facing downward
- Only use the permitted mount orientations:
 - Horizontally (only top cover facing upwards)
 - Vertically (all mount orientations)

6.3. Minimum Clearance (Keep out Area)

To provide maximum airflow through and around the product a minimum distance to the surrounding environment must be observed know as keep out area in this user guide. Before installing product, ensure that the keep out areas have been taken into consideration.

Consider additional clearance requirements due to installed Wi-Fi antennas on the rear panel, where the Wi-Fi hinge clearance is approximately depth 45 mm and height 130 mm.

ACAUTION

Leave sufficient clearance (keep out area) to prevent the product from overheating! To ensure proper operation use the specified recommended keep out areas of :

- Top cover: 10 mm (0.394")
- Left and right sides: 10 mm (0.394")
- Front and rear panel: 10 mm (0.394")
- Bottom side: (no restriction)

6.4. Third Party Components

When configured with third party components such as M.2 modules and hard drives (SSD), an approximate internal temperature rise is given and should be taken into consideration.

7/ Assembly

7.1. Before Assembling

Before opening the KBox B-201-RPL to access internal components, observe the safety instructions within this chapter and the safety instructions in Chapter 2/General Safety Instructions. For third party products, consult the documentation provided by the components manufacturer. Kontron recommends expanding the product, before installation.

AWARNING

Before opening the product, make sure that the product is switched off using the power button and disconnected from the mains power supply. Disconnect all connected peripheral devices. Observe the General Safety Instructions within this user guide.

ACAUTION

Handling and operation of the product is permitted only for trained personnel aware of the associated dangers, within a work place that is access controlled and fulfills all necessary technical and environmental requirements.



Follow the safety instructions for components that are sensitive to Electrostatic Discharge (ESD) and use a clean, flat and ESD-safe surface when handling the product. Failure to observe this warning notice may result in damage to the product or/and internal components.



Pay attention to the manufacturer's instructions before installing/removing third party components.

7.2. Opening the Product

To open the product to gain access to internal components, perform the following:

- 1. Close all applications. Shut down the product properly using the power button and disconnect the power cable from the power source. Disconnect all peripherals.
- 2. Place the product on a flat, clean and ESD-safe surface.
- 3. Unlock and remove the Kensington lock, if installed.



4. Remove the two top cover screws on the rear panel and retain the screws for later use.



5. Lift the top cover a few centimeters at the rear of the chassis and pull the top cover gently away from the front panel to release the top cover from the front-panel-holding-brackets.



6. Lift the top cover vertically to avoid damaging the internal fan assembly. Do not slide the top cover off the chassis.

NOTICE

Do not slide the top cover off or onto the chassis!

To avoid contact and/or possible damage between the top cover and the internal fan, do not slide the top cover along the chassis. Moving the top cover vertically upwards or downwards on to or off the chassis.

7. Close the top cover, by proceeding in the reverse order (steps 6 to 3). Ensure that the top cover is almost in the correct position above the main chassis before moving the top cover down and tilting the front side of the top cover towards the front panel. Secure the top cover on the rear panel with the two screws retained previously in step 4.

NOTICE


Do not slide the top cover off or onto the chassis!

To avoid contact and/or possible damage between the top cover and the internal fan, do not slide the top cover along the chassis. Moving the top cover vertically upwards or downwards on to or off the chassis.

7.2.1. Installing and Removing an M.2 Module

To install an M.2 module on the internal motherboard, perform the following:

- 1. Open the product, as described in Chapter 7.2: Opening the Product, steps 1 to 6.
- 2. Locate the M.2 socket and the corresponding nut on the motherboard. The M.2 2230 key E socket is used for M.2 Wi-Fi modules and the M.2 2242 Key M socket is used for M.2 SSD modules.

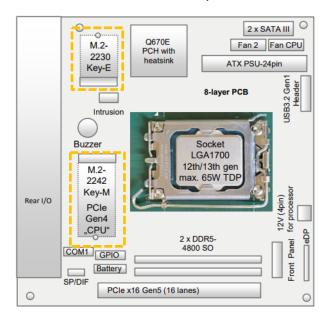

3. Insert the M.2 module into the corresponding M.2 socket gently and at an angle, until the hole on the M.2 module aligns with the corresponding motherboard's nut.

4. Secure the M.2 module by pressing down on the free end, and carefully secure with a screw to the corresponding nut on the motherboard, until flat with the motherboard.




Do not use force when fastening the mounting screw. Too much force may damage the motherboard nut. Recommended torque for M.2 screw is 0.2 Nm.

Close the top cover, as described in Chapter 7.2: Opening the Product, step 7.

To remove an M.2 Module, perform the following:

- 1. Open the top cover, as described in Chapter 7.2: Opening the Product, steps 1 to 6.
- 2. Locate the M.2 module and the corresponding nut on the motherboard. The M.2 2230 key E socket is used for M.2 Wi-Fi modules and the M.2 2242 Key M socket is used for M.2 SSD modules.

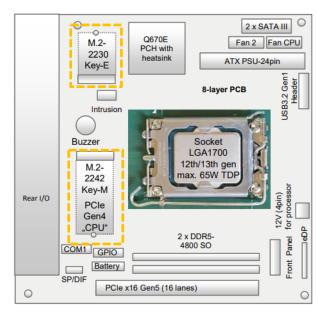

- 3. Loosen and remove the fixing screw securing the M.2 module to the motherboard. The M.2 module springs up at the free end.
- 4. Gently pull the M.2 module out of the M.2 socket.
- 5. Close the top cover, as described in Chapter 7.2: Opening the Product, step 7.



After installing or removing a M.2 SSD the partitioning of the memory maybe different.

7.3. Opening the Drive Bay

Before opening the drive bay cover, observe the safety instructions within this chapter.



Before installing a 2.5" SSD, observe the manufacturer's instructions.

To open the drive bay cover, perform the following:

- 1. Close all applications. Shut down the product properly using the power button and disconnect the power cable from the power source. Disconnect all peripherals.
- 2. Place the product on a flat, clean and ESD-safe surface with the bottom side facing upwards.
- 3. Remove the drive bay cover's screw using a torx (08 x 60) screwdriver.
- 4. Lift the drive bay cover a few centimeters to release the internal device from the holding-plate on the drive bay cover's rear side.



5. Slide the drive bay cover forward, to release the two aligning tabs.



- **6.** Lift to remove the drive bay cover from the drive bay.
- 7. Close the drive bay cover, by proceeding in the reverse order (steps 6 to 3).




To avoid damage, do not use force when closing the drive bay cover.

If the drive bay cover does not close easily, the metal holding plate may not be aligned correctly and pressing down with force may damage the installed device.

7.3.1. Installing and Removing 2.5" SSD Drive

Before installing a 2.5" SSD drive, observe the SSD drive manufacturer's instructions.

Figure 11: External Drive Bay with 2.5" SSD Drive

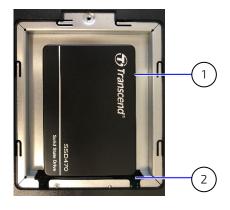

1 2.5" SSD Drive

2 SATA connector

To install a 2.5" SSD in the drive bay, perform the following:

- 1. Close all applications. Shut down the product properly using the power button and disconnect the power cable from the power source. Disconnect all peripherals.
- 2. Open the drive bay cover, see Chapter 7.3: Opening the Drive Bay, steps 1 to 6.

- 3. Position the SSD in the drive bay with the SSD's connector facing the SATA connector in the drive bay.
- 4. Align the SSD's connector with the internal SATA connector.
- 5. Press down and gently push the SSD into the SATA connector.
- 6. Close and secure the drive bay cover, see Chapter 7.3: Opening the Drive Bay, step 7.

To remove a 2.5" SSD drive from the drive bay, perform the following:

- 1. Close all applications. Shut down the product properly using the power button and disconnect the power cable from the power source. Disconnect all peripherals.
- 2. Open the drive bay cover, see Chapter 7.3: Opening the Drive Bay, steps 1 to 6.
- 3. Pull out the 2.5" SSD from the SATA connector gently.
- 4. Place the 2.5" SSD on an ESD-safe surface.
- 5. Close and secure the drive bay cover, see Chapter 7.3: Opening the Drive Bay, step 7.

7.3.2. Installing and Removing 2.5" SSD Dual M.2 RAID Module

Before installing a 2.5" SSD dual M.2 RAID module, observe the SSD drive manufacturer's instructions. To avoid loss of data, observe the information and warnings within this section.

NOTICE

Do not reset the RAID module without considering if a backup of the data is required. Pressing the reset switch configures the RAID array and data on both M.2 drives will be lost.


NOTICE

Do not reset the RAID module. When powered on, the RAID module's previous RAID configuration will be copied to the new M.2 SSD module automatically.




RAID 1 is the default setting.

Figure 12: 2.5" SSD Dual RAID M.2 Module

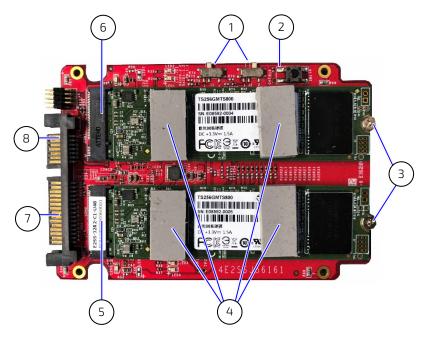

- 1. Jumper switches
- 2. Reset switch (do not press!)
- 3. 2x Screws for M.2 SSD module
- 4. 4x Foam buffer
- **5**. M.2 socket 2
- M.2 socket 1
- **7.** SATA power connector
- 8. SATA data connector

Figure 13: Drive Bay with 2.5" SSD dual M.2 RAID Module

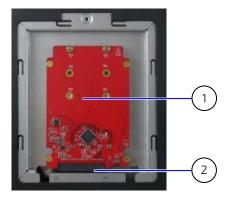

- 1 2.5" SSD dual M.2 RAID module with two M.2 SSD modules (installed on the bottom side)
- 2 SATA connector

To install a 2.5" SSD dual M.2 RAID module, perform the following:

- 1. Close all applications. Shut down the product properly using the power button and disconnect the power cable from the power source. Disconnect all peripherals.
- 2. Open the drive bay cover, see Chapter 7.3: Opening the Drive Bay, steps 1 to 6
- 3. Place the 2.5" SSD dual M.2 RAID module on an ESD-safe surface.
- 4. Assemble the 2.5" SSD dual M.2 RAID module with memory by inserting the two M.2 SSD modules at a slight angle gently into the two M.2 sockets (Figure 12, pos. 5 and 6). Press down on the M.2 SSD module's free end to align the screw hole with the 2.5" SSD dual RAID module's nut and secure each M.2 SSD module with a screw (Figure 12, pos. 3).
- 5. Place self-adhesive form buffers on each of the M.2 SSD modules (Figure 12, pos. 4).
- **6.** If the 2.5" SSD dual M.2 RAID module is already configured with a RAID array, insert the 2.5" SSD dual M.2 RAID module into the SATA connectors in the drive bay, with the two M.2 SSDs modules facing the inside of the drive bay (Figure 13) and proceed with step 8.

NOTICE

Do not reset the RAID module. When the RAID module is powered on, the previous RAID configuration will be copied to the new M.2 SSD module automatically.

- 7. If the 2.5" SSD dual M.2 RAID module's RAID array is not configured or the configuration must be changed, see Chapter 11.1: Drive Bay RAID, to set the RAID array and then proceed with step 8.
- 8. Close and secure the drive bay cover, see Chapter 7.3: Opening the Drive Bay, step 7.

To remove the 2.5" SSD dual M.2 RAID module from the drive bay, perform the following:

- 1. Close all applications. Shut down the product properly using the power button and disconnect the power cable from the power source. Disconnect all peripherals.
- 2. Open the drive bay cover, see Chapter 7.3: Opening the Drive Bay, steps 1 to 6.
- **3.** Hold the 2.5" SSD dual M.2 RAID module on the sides and gently pull the 2.5" SSD dual M.2 RAID module away from the SATA connectors.
- 4. Place the 2.5" SSD dual M.2 RAID Module on an ESD-safe surface.
- 5. Close and secure the drive bay cover, see Chapter 7.3: Opening the Drive Bay, step 7.

7.3.2.1. Installing and Removing M.2 SSDs

Before installing a new M.2 SSD in the M.2 dual RAID module, observe the SSD drive manufacturer's instructions. To avoid loss of data, observe the information and warnings within this section. Note that after installing a new M.2 SSD

and powering on, the 2.5" SSD dual M.2 RAID module automatically copies the previous RAID array configuration to the new M.2 SSD.

NOTICE

Do not reset the RAID module without considering if a backup of the data is required. Pressing the reset switch configures the RAID array and data on both drives will be lost.



After replacing one of the M.2 SSD modules on the RAID module, do not reset the RAID module! When powered on for the first time, the previous RAID configuration will be copied to the new M.2 SSD module automatically.

To install a new M.2 SSD module on the 2.5" SSD dual M.2 RAID module, perform the following:

- 1. Close all applications. Shut down the product properly and disconnect the power cable from the power source. Disconnect all peripherals.
- 2. Open the drive bay cover, see Chapter 7.3: Opening the Drive Bay, steps 1 to 6.
- 3. Remove the 2.5" SSD dual M.2 RAID module by holding the 2.5" SSD dual M.2 RAID module on the sides and gently pulling the 2.5" SSD dual M.2 RAID module away from the SATA connectors.
- 4. Place the 2.5" SSD dual M.2 RAID module on an ESD safe surface.
- **5.** Locate the faulty M.2 SSD(s) by using the serial number in the iRAID notification email, see Chapter 11.1.2: Drive Bay RAID Software.
- **6.** Remove the screw that secures the faulty M.2 SSD and retain for later use. The M.2 SSD flips upwards at a slight angle. Pull the M.2 SSD gently out of the M.2 socket.
- 7. Insert a new M.2 SSD at a slight angle gently into the M.2 socket and press down on the free end to align the M.2 SSD's screw hole with the 2.5" SSD dual RAID module's nut. Secure with the screw retained in step 6.



Kontron recommends replacing a faulty drive with a drive of the same capacity and type as the mirrored drive. When different capacity drives are used, the working capacity is only as large as the smallest drive's capacity.

- 5. Place a self-adhesive foam buffers on the new M.2 SSD(s).
- **6.** Insert the 2.5" SSD dual M.2 RAID module into the SATA connector in the drive bay with the two M.2 SSDs modules facing the inside of the drive bay (Figure 13, pos. 2).
- 7. Close and secure the drive bay cover, see Chapter 7.3: Opening the Drive Bay, step 7.
- 8. Switching on the product automatically configures the new M.2 SSD with the previous RAID Array.

7.4. Connecting the Wi-Fi Antenna (option)

To use the Wi-Fi feature, install the two external Wi-Fi antennas included in the delivery to the two rear panel Wi-Fi antenna. Installing the Wi-Fi antenna increases the original keep out area depth on the rear panel from 10 mm to approximately 45 mm.

To install the Wi-Fi antenna, perform the following:

- 1. Screw the Wi-Fi antenna on to the Wi-Fi antenna connector (Figure 4, pos. 13).
- 2. Position the Wi-Fi antenna, using the Wi-Fi antenna's hinge, in the direction required or allowed for by the installation environment.



Installing the dual Wi-Fi antennas on the rear panel increases the rear panel keep out clearance to 45 mm and 130 mm from the Wi-Fi hinge.

8/Installation

8.1. Before Installing

Before installing the KBox B-201-RPL in the operating environment, ensure that the operating environment meets the specification stated within this user guide, and that there is sufficient access to the product's power connector, and the front and rear panel I/O connectors.

Install and operate the product only horizontally (top side facing upward) or vertically (all directions). It is not permitted, to operate the product with the top side facing downwards. Leave sufficient clearance (keep out area) to prevent the product from overheating by using the specified clearance (keep out areas), see Chapter 6.3: Minimum Clearance (Keep out Area).

Kontron recommends expanding the product with expansion card and storage, before installing the product in the end environment.

AWARNING

Danger of Fire

Mounting the product with the top cover facing downward in not permitted and may cause overheating or melting, and hence may cause a fire hazard or personal injury.

To avoid risk of fire and personal injury, observe the following:

• DO NOT mount horizontally with the top cover facing downward

- Only use the allowed mount orientations:
 - Horizontally (only top cover facing upwards)
 - Vertically (all mount orientations)

ACAUTION

Do not handle the product if there is any visible damage.

ACAUTION

Prior to any installation work ensure that there are no live wires on the installation site and follow the local/national regulations for grounding. The voltage feeds must not be overloaded. Adjust the cabling and the overcurrent protection to correspond with the electrical specification on the type label. Kontron recommends that the last cable attached to the product is the power cable.

ACAUTION

Obstructing the ventilation openings may cause overheating, to avoid overheating:

- Do not to place items directly in front of the top cover ventilation openings
- Observed that all ventilation openings are not covered or obstructed by objects

ACAUTION

Leave sufficient clearance (keep out area) to prevent the product from overheating! To ensure proper operation use the specified recommended keep out areas of :

- Top cover: 10 mm (0.394")
- Left and right sides: 10 mm (0.394")
- Front and rear panel: 10 mm (0.394")
- Bottom side: (no restriction)

ACAUTION

Install and operate the product only by trained and qualified personnel within an environment that fulfills all necessary technical and environmental requirements.

ACAUTION

Ensure the product's weight can be supported by mounting on a flat, solid surface using suitable screws.

NOTICE

Support the power and I/O cables to minimize the strain on the product's connectors.




Ensure there is enough clearance for users to

- Connect cables on the rear I/O panel
- Access the power-on button on the front panel
- Install Wi-Fi antenna on the rear panel (clearance 45 mm and 130 mm from Wi-Fi hinge)

8.2. Chassis Feet

To use in environments that do not require mounting such as on a desktop, install the four self-adhesive rubber chassis feet on the product's bottom side.

Figure 14: Chassis Feet

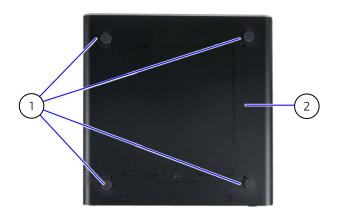

- 1 4x Rubber Chassis feet
- 2 Bottom side

To install the supplied four self-adhesive rubber chassis feet, perform the following:

- 1. Ensure that the bottom surface is clean and free from dust and dirt.
- 2. Remove the paper cover from the back of each of the self-adhesive rubber chassis feet and carefully press the rubber chassis feet onto the bottom side (Figure 14, pos. 1).




To improve stability, position the rubber chassis feet between the mounting hole and the outside edge of the corners.

8.3. Vertical Stand (option)

The vertical stand fastens on either the right or the left side of the product, see Figure 17.

 
Figure 15: Vertical Stand



To mount on the vertical stand, perform the following:

- 1. Lie the product with either the left or right side facing upwards.
- **2**. Position the vertical stand on the side of the chassis.
- 3. Aline the two vertical stand screw holes with the two threaded screw holes on the side of the chassis.
- **4.** Fasten the vertical stand to the chassis using the supplied two M3x6 screws and an appropriate screwdriver (Figure 16).

 Figure 16: Vertical Stand Screws



5. Stand the product in the vertical position.


Figure 17: Vertical Stand Mount Options



8.4. Mounting Brackets (option)

To mount on a surface vertically, horizontally, underneath or topside use the mounting brackets.

Figure 18: Mounting Bracket

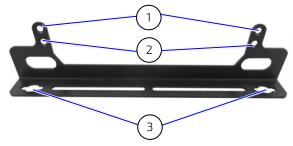

- 1 Mounting holes (10 mm clearance)
- 3 Key mounting holes for mount surface
- 2 Mounting holes (no clearance)

Each mounting bracket supports two sets of holes. Which set of holes is used depends on whether clearance is required for ventilation:

- If the top cover faces the mounting surface, a 10 mm clearance is required between the top cover and the mounting surface to ensure adequate ventilation. The mounting hole set (Figure 18, pos. 1) must be used.
- If the bottom side faces the mounting surface, no clearance is required between the bottom side and the mounting surface as the bottom side does not contain ventilation openings. The mounting hole set (Figure 18, pos. 2) can be used.

ACAUTION

Obstructing the ventilation openings may cause overheating. To avoid overheating:

- Do not to place items directly in front of the top cover ventilation openings
- Observed that all ventilation openings are not covered or obstructed by objects

ACAUTION

Leave sufficient clearance (keep out area) to prevent the device from possibly overheating! To ensure proper operation, use the specified recommended keep out areas of:

- Top cover: 10 mm (0.394")
- left and right side: 10 mm (0.394")
- Front and rear panel: 10 mm (0.394")
- Bottom side (no keep out area)

To attach the mounting brackets and mount the product, perform the following:

- 1. Consider which set of mounting holes is required for the mounting option.
 - Top cover facing the mounting surface, use the mounting holes in Figure 18, pos. 1, with a 10 mm clearance.
 - Bottom side facing the mounting surface, use the mounting holes in Figure 18, pos. 2, with no clearance
- 2. With either the right or left sides facing upwards, align the mounting bracket's mounting holes with the mounting-hole pair on the side of the chassis (Figure 5, pos. 2).
- 3. Align the mounting bracket hole (step 1) with the corresponding mounting holes (step 2).
- 4. Fasten each mounting brackets using the supplied two M3x6 screws in the Wall Mount Set and a Torx (08x60) screwdriver.
- 5. Use the wall mount's key mounting holes (Figure 18, pos. 3), to mount on the mounting surface (wall or desktop) while observing the specified clearance of 10 mm (keep out area) as indicated in Figure 19 and Figure 20.

Figure 19: Keep Out Areas - with Top Cover facing the Mount Surface


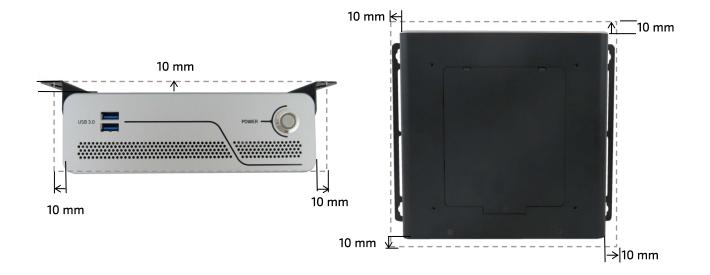


Figure 20: Keep Out Areas - with Bottom Side facing the Mount Surface



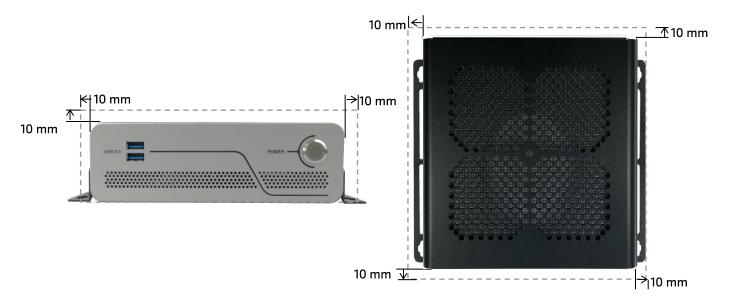

Installing the dual Wi-Fi antennas on the rear panel increases the keep out clearance to 45 mm and 130 mm from Wi-Fi hinge.


8.4.1. Mounting Brackets Desktop

To mount the product on a desktop/mount surface use the Wall Mount Set, see Table 2: Accessories. Use the set of mounting holes on the left and right sides of the chassis and the mounting holes on the bracket (Figure 18, pos. 2).

To mount the product underneath a desktop/mount surface, use the Wall Mount Set, see Table 2: Accessories. Use the mounting holes on the left and right sides of the chassis and the mounting holes on the bracket (Figure 18, Pos. 1) with 10 mm clearance, to ensure air-intake is not restricted.

 Figure 21: Mounting Brackets Desktop Mount Options







Mounted (fixed) underneath a desktop

▲WARNING

Danger of Fire

Mounting the product with the top cover facing downward in not permitted and may cause overheating or melting, and hence may cause a fire hazard or personal injury. To avoid risk of fire and personal injury, observe the following:

- DO NOT mount horizontally with the top cover facing downward
- Only use the allowed mount orientations:
 - Horizontally (only top cover facing upwards)
 - Vertically (all mount orientations)

ACAUTION

When mounting the product with the top cover facing the mount surface (desktop or wall), always provide a clearance of 10 mm to ensure adequate air-intake. If airflow to the top cover is obstructed the product will overheat.

ACAUTION

Both mounting brackets must be used to mount the product to the mount surface.




Install the mounting brackets on the product before mounting on the mount surface.


8.4.2. Mounting Brackets Wall

To mount the product on a wall use the Wall Mount Set, see Table 2: Accessories. With the top cover facing outwards, use the mounting bracket holes (Figure 18, pos. 2). With the top cover facing the mounting surface, to provide the required 10 mm keep out area to ensure air-intake is not restricted, use the upper mounting holes on the brackets (Figure 18, pos. 1).

Figure 22: Mounting Brackets Wall Mount Options

Mounted with bottom side facing the mounting surface (four mount options)

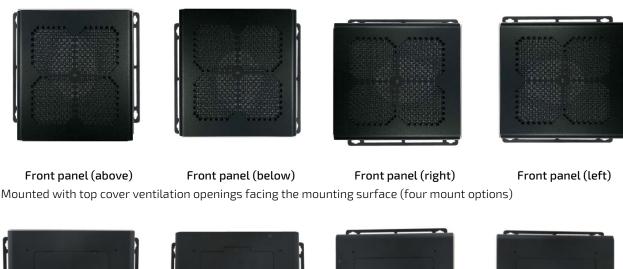

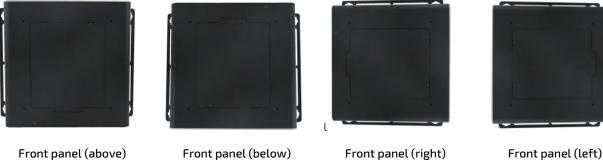

ACAUTION

When mounting the product with the top cover facing the mount surface (desktop or wall), always provide a clearance of 10 mm to ensure adequate air-intake. If airflow to the top cover is obstructed the product may overheat.

ACAUTION

Both mounting brackets must be used to mount the product to the mount surface.



Install the mounting brackets on the product before mounting on the mount surface.

8.5. VESA 100 Mount Assembly (option)

The VESA mount assembly mounts the product and the external power supply on the rear side of a VESA 100 monitor.

Figure 23: VESA Mounting Assembly Kit



The VESA 100 mount assembly kit contains:

- 1. VESA 100 mounting frame
- 2. Velcro® band
- 4x screws (M4x 20 mm)
- 4. 4x screws (M3x 8 mm)
- **5.** 4x spacers (4 mm)




Using the VESA 100 mount assembly, only vertical mounting is possible.

To assemble the product with the power supply on the VESA 100 mounting frame, perform the following:


- 1. Check if the rubber chassis feet are installed on the bottom side of the product. If the rubber chassis feet are installed, removed the feet before mounting on the VESA 100 mounting frame.
- 2. Align the four mounting holes on the bottom side of the product with the four mounting holes on the VESA 100 mounting frame.

Figure 24: KBox B-201-RPL Mounting Position

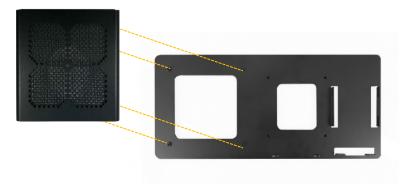


- 3. Insert the supplied four M3x 8 mm screws into the rear side of the VESA 100 mounting frame and using a Torx screwdriver (10) fasten the product to the VESA 100 mounting frame.
- 4. Open the flexible Velcro® band to the band's full length and with the rough fastening side facing downward feed the band through the threading slots on the left and right aligning brackets, (Figure 25).

Figure 25: Inserting the Velcro® Band

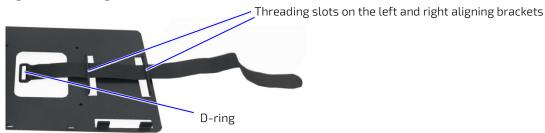

 5. Double back with the flexible Velcro® band and feed the rough end through the band's D-ring. Pull the band through the D-ring and press approximately 30 mm to 50 mm of the self-gripping sides together to form a loose loop. Lift the bottom part of the loop to meet the top part to form a gap between the band and the VESA 100 mounting frame (Figure 26).



- **6.** Slot the power supply, with the 3-pin AC connector facing towards the bottom of the VESA 100 mounting frame, into the gap made in step 5 and feed the power supply between the left and right aligning brackets. Push down until the power supply rests on the two holding brackets at the bottom.
- 7. Secure the power supply by opening the self-gripping sides and pulling the band away from the D-ring as far as possible and re-securing the band tightly.

Figure 27: VESA Mount Assembly with KBox B-201-RPL and Power Supply



8.5.1. VESA 100 Mount

The VESA 100 mount assembly mounts either directly on the rear side of the monitor, see Chapter 8.5.1.1: Mounting on non VESA Mount Stand Monitor or on the rear side of the monitor using the monitors stand, see Chapter 8.5.1.2: Mounting on Monitor with VESA 100 Stand.




Using the VESA 100 mount assembly, only vertical mounting is possible.

8.5.1.1. Mounting on non VESA Mount Stand Monitor

1. Feed the four supplied (M4x 20 mm) screws through the four-mount openings on the VESA mount frame and attach one of the supplied spacers on the screw's free end (Figure 28).

Figure 28: Non VESA Stand Monitor Assembly

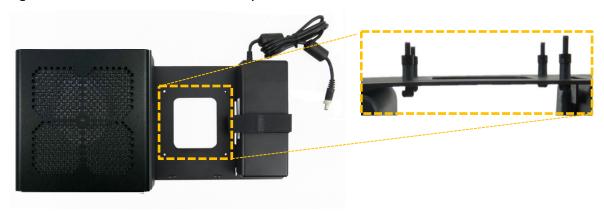


- 2. Align the free end of the screw with the VESA 100 mount holes on the back of the monitor.
- 3. Fasten the four screws to secure the VESA 100 mount assembly to the back of the monitor.

Figure 29: Installed VESA 100 Mount Assembly – non VESA Stand Monitor




8.5.1.2. Mounting on Monitor with VESA 100 Stand

- 1. Remove the monitor's stand.
- 2. Feed the supplied four supplied (M4x 20 mm) screws through the four mounting holes on the monitor's stand and attach one of the supplied spacers to the screw's free end (Figure 30)

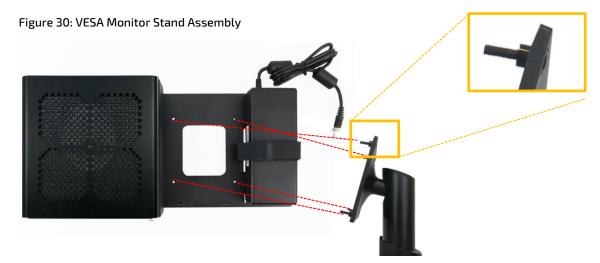

 - **3.** First insert the free end of the screw (with spacer) through the four mount hole on the VESA mount frame and then onto the VESA 100 mount hole on the back of the monitor.
- 4. Fasten the four screws to secure the VESA 100 mount assembly to the back of the monitor.





9/Starting Up

9.1. Before Starting

Before connecting the KBox B-201-RPL to power, read the instructions in this user guide and observe the safety instructions in Chapter 2/ General Safety Instructions.

The product comes hardware configured, and on request with a pre-installed Operating System (OS) and all the necessary drivers (in accordance with the ordered hardware configuration). No further internal configuration is required, enabling full operation when connected to power and switched on for the first time.

AWARNING

Operate in the closed condition only

It is only ensured that users do not have access to internal components during operation when the top cover is properly secured with the two top cover fastening screws.

ACAUTION

Even when switched off using the power button, parts of the product are still energized. The product is only completely switched off when the power has been switched off using the power button and the power cable is disconnected from either the DC power supply or the DC IN power connector.

ACAUTION

Only connect the product to the delivered external power solution providing the voltage type (AC or DC) and the input power (max. current) specified on the Kontron Product Label and meeting the requirements of the Limited Power Source (LPS) and Power Source (PS2) of UL/IEC 62368-1.

ACAUTION

Observed that wiring and short-circuit/overcurrent protection is performed according to the applicable standards, regulations and the product's electrical specification. The disconnecting device (fuse/circuit breaker) rating must support the product's wire cross-section.

ACAUTION

Ensure that the power supply and power cables/wires have no visible damage.

ACAUTION

Ensure the product is closed without foreign objects inside the chassis before connecting the power.

NOTICE

Following a proper cabling procedure prevents a false power-on condition, that could result in operational failure. When installing/disconnecting the product ensure that:

- The functional earth connection is made first and disconnected last.
- The last connection made to the product is the power wiring.

NOTICE

Mark the supply wires (+/-) clearly to ensure the correct connection from the supplied 3-pin mating power connector to the DC power supply, when using an external 24 VDC power supply.

NOTICE

Support the power and I/O cables to minimize the strain on the product's connectors.

NOTICE

Do not disconnect the power while the product is operating! This performs a forced shutdown and can lead to loss of data. To shutdown without data loss, use the power button.

9.2. Connecting the External AC/DC (150 W) Power Supply

The DC IN power connector (Figure 32) connects to the supplied external AD/DC (150 W) power supply (Figure 33) that meets the product's electrical specification as stated on the type label and provides the required safety and protection features, see Chapter 12.4: Power Specification.



Only connect the product to the supplied external power supply providing the voltage type (AC or DC) and the input power (max. current) specified on the Kontron Product Label and meeting the requirements of the Limited Power Source (LPS) and Power Source (PS2) of UL/IEC 62368-1.

To connect the supplied external AC/DC power supply, perform the following:

- 1. Ensure the product is closed securely.
- 2. Screw the power supply's cable to the DC IN power connector.

Figure 32: DC IN Power connector



3. Connect the other end of the power supply to the mains power outlet using the correct plug for your region.

Figure 33: External AC/DC (150 W) Power Supply



1 DC IN power connector

2 3-pin connector for power cord (EU/UK/US)

9.3. Connecting to a 24 VDC Power Supply (option)

The supplied 3-pin mating power connector (PSC 1.5/3-F) connects to the optional DC IN 3-pin power connector. The user is responsible for wiring the product correctly to the external 24 VDC power supply by marking the wires clearly with (+/-) to ensure the correct connection with the DC IN 3-pin power connector.




Only connect to an external 24 VDC power supply that meets the product's electrical specification displayed on the product type label, and the power consumption, power limitation and power protection requirements specified in this user guide. The 24 VDC power supply must automatically recover from AC power loss and startup under peak loading.



To connect to the 3-pin DC IN power connector use the supplied corresponding 3-pin mating power connector only.

9.3.1. Wiring the 3-pin Mating Power Connector

Figure 34: DC IN 3-pin Power Connector and 3-pin Mating Power Connector

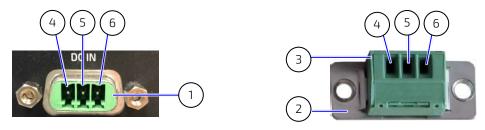

- 1 3-pin DC IN power connector (PSC 1.5/3-M)
- 2 3-pin mating power connector (PSC 1.5/3-F)
- 3 Cover over the slotted pan head screws
- 4 Clamp for earth wire
- 5 NC
- 6 Clamp for +24 VDC wire

To wire the supplied 3-pin mating power connector (PSC 1.5/3-F), perform the following:

- 1. Cut three (1 mm²) AWG18 isolated wires to the required length and strip each end 5 mm to 7 mm.
- 2. Twist the striped wire-ends and provide them with ferrules.
- 3. Access the slotted pan head screws by opening the mating power connector's cover.
- 4. Loosen the slotted pan head screws far enough so that you can insert the end of the prepared wires.
- 5. Insert the wires into the corresponding clamp of the mating power connector. Make sure that you have the right polarity of the connection.
- **6.** Fasten the screws to secure the wires into the mating power connector's clamps.
- 7. Close the mating power connector's cover.

NOTICE

Mark the supply wires (+/-) clearly to ensure the correct connection from the supplied 3-pin mating power connector to the DC power supply, when using an external 24 VDC power supply.



The wiring is not part of the delivery and must be provided by the user.

- Use copper wire only if the field wiring terminal is for copper wire connection only
- Minimum temperature rating of the field wiring terminals is 75° C.

9.3.2. Connecting to a DC Power Supply

To connect to an external 24 VDC power supply, perform the following:

- 1. Ensure the product is closed securely.
- 2. Wire the supplied 3-pin mating power connector/terminal (PSC 1.5/3-F) as described in Chapter 9.3.1: Wiring the DC IN Power Connector.
- **3.** Switch off the external 24 VDC power supply via a disconnecting device (fuse/circuit breaker), to ensure that no power flows during the connection procedure.
- 4. Connect the functional earth bolt to an appropriate common earth connection.
- **5.** Connect the wired 3-pin mating power connector (PSC 1.5/3-F) to the DC IN power connector (Figure 34, pos. 1). Pay attention to the polarity of the connections.
- **6.** Connect the other end of the wired 3-pin mating power connector to the external 24 VDC power supply.

9.4. Switching On/Off

To switch on, connect to the power source as described in this user guide, and briefly press the power button (Figure 3, pos. 3) .The power button illuminates blue to indicate the powered on state.

To switch off, close all open applications and briefly press the power button. The power button dims to indicate the powered off state. The product is only completely switched off when the power cable is disconnected from the DC IN power connector or the main power source.



Completely disconnect the power by disconnecting the power cable from the DC IN power connector or the main power source. Switching off only using the power button may leave internal parts energized.

9.4.1. Forced Shutdown

Pressing the power button for longer than four seconds initiates a forced system shutdown, before switching off the power. If power is still applied to the DC IN power connector, the product can be restarted by pressing the power button.



Do not disconnect the power while the product is switched on.

Performing a forced shut down can lead to loss of data or other undesirable effects.

9.5. Operating System (OS) and Hardware Component Drivers

The product supports flexible software options and delivered with pre-installed OS and all appropriate drivers (according to with ordered hardware configuration) and is fully operational when switched on for the first time.

When ordered without a pre-installed OS, users must install the OS and the appropriate drivers (in accordance with the ordered hardware configuration) before switching on for the first time. Pay attention to the manufacturer's OS specifications for integrated hardware components

For information regarding supported software, see Table 12: Software Specification.



To download relevant drivers for hardware components, visit Kontron's Customer Section



Pay attention to the manufacturer OS specifications relating to integrated hardware components.

10/ BIOS

The KBox B-201-RPL uses the AMI Aptio 5.x (uEFI) BIOS supported by the motherboard. This chapter informs user how to start the BIOS, use the BIOS setup to configure, and perform a BIOS update. Note that BIOS features are open to change and may not be available in the latest version of the motherboard's BIOS.



uEFI only! No legacy support and no Master Boot Record (MBR) installation.



Only use the Kontron provided tools!

10.1. Starting the uEFI BIOS

The uEFI BIOS comes with a setup program that provides quick and easy access to the individual function settings for control or modification of the uEFI BIOS configuration. The setup program allows for access to various menus that provide functions or access to sub-menus with further specific functions of their own.

To start the uEFI BIOS setup program, perform the following:

- 1. Power-up the product.
- 2. Wait until the first characters appear during the Power On Self-Test (POST) messages or splash screen.
- 3. Press the or <F2> keys during the POST.
- **4.** If the BIOS is password protected, enter the User Password or Supervisor Password, and press <RETURN> to start the BIOS.
- 5. The BIOS displays the Main setup menu.



If the or <F2> key is not pressed the POST continues with the test routines.

10.2. BIOS Setup Menus

The uEFI BIOS comes with a setup program that provides quick and easy access to the individual function settings for control or modification of the BIOS configuration. The setup program allows for access to various menus that provide functions or access to sub-menus with further specific functions. At the top of the displayed BIOS screen is the menu bar to the setup menus:

Main

- Advanced
- H/W Monitor
- Security
- Boot
- Exit

To navigate between the setup menus use the BIOS navigation keys described in Chapter 10.3: BIOS Navigation.



Observe that setting wrong values within the Advanced setup menu may cause the product to operate incorrectly.

10.3. BIOS Navigation

The uEFI BIOS setup program uses a hot key navigation system. The hot key legend bar is located at the bottom of the setup screens. The following table provides a list of navigation hot keys available in the legend bar.

Table 5: Navigation Hot Keys Available in the Legend Bar

Hot key	Description	
<f1></f1>	<f1> key invokes the General Help window</f1>	
<->	<minus> key selects the next lower value within a field</minus>	
<+>	<plus> key selects the next higher value within a field</plus>	
<f2></f2>	<f2> key loads previous values</f2>	
<f3></f3>	<f3> key loads optimized defaults</f3>	
<f4></f4>	<f4> key Saves and Exits</f4>	
<→> or <←>	<left right=""> arrows selects major Setup menus on menu bar, for example, Main or Advanced</left>	
<^> or < \>	<up down=""> arrows select fields in the current menu, for example, Setup function or sub-screen</up>	
<esc></esc>	<esc> key exits a major Setup menu and enters the Exit Setup menu</esc>	
	Pressing the <esc> key in a sub-menu displays the next higher menu level</esc>	
<return></return>	<return> key executes a command or selects a submenu</return>	

10.4. BIOS Update

To ensure compatibility with new OS, hardware, software or to integrate new BIOS functions Kontron recommends regular BIOS updates. Additionally, if a problem cannot be solved using a new driver, Kontron recommends updating the BIOS.

10.4.1. Updating the BIOS

Before updating the BIOS, Kontron's recommends making a backup of the current BIOS setting.



For the latest BIOS updates and BIOS release information, visit <u>Kontron's Customer Section</u> Website and select: Motherboards & SBC > mini-ITX > BIOS_K383x > BIOS_K3833 >



During a BIOS update, do not switch off, reset or interrupt the process. If interrupted, the BIOS update process must be restarted.



After a BIOS update, additional modifications must be made manually.



After a BIOS update If the product fails to boot, the updated BIOS maybe damaged, see Chapter 10.5: Recover BIOS

For the latest BIOS downloads and release information, visit <u>Kontron's Customer Section</u> and access the mini-ITX K3833 Motherboard's FTP server's BIOS section (Figure 35). Users can choose the preferred method to update the BIOS and follow the instructions provided.

Figure 35: BIOS FTP Server Example

kontron

Name	Size	Modified	File Download Link
₿			
BIOS-Release-Document_RaptorLake-S_K383x_K384x.pdf	1.5 MB	2023-06-09 08:22:21	Download
K3833-Q1.R2.5.0.SetupItemId.txt	5.3 KB	2023-03-31 13:26:45	Download
K3833-Q1.R2.5.0.ZIP	27.2 MB	2023-03-31 13:48:31	Download
▶ Previous_Versions	0	2023-06-06 15:31:04	

10.5. Recover BIOS



All BIOS settings and some data is lost during the BIOS recovery process!

To recover the BIOS, perform the following:

- 1. Close all applications. Shut down the product properly and disconnect the power cable from the power source.
- 2. Copy the BIOS ZIP package content (K3833-Q1.ROM file) in Kontron's Customer Section to a FAT32 formatted USB stick.
- 3. Connect the USB stick to the product. Disconnect all other drives.
- 4. Open the product as described in Chapter 7.2: Opening the Product, steps 1 to 6.
- 5. Locate the Recover BIOS jumper on the motherboard's front panel header (see Chapter 13.10.1: Recovery BIOS Jumper). Change the Recover BIOS jumper to the "Recovery Position" indicated in orange on the front panel header.
- **6.** Switch on the product, the BIOS bootloader automatically initiates recovery and restores the BIOS contents from the ROM file.
- 7. System enters a "BIOS setup"-like user interface. Confirm "Proceed with flash update" message.
- 8. Wait until "Updating main firmware" indicates the success of the recovery procedure.



IMPORTANT: Do not interrupt power or press any key during update!

- **9.** Shut down the product properly as performed in step 1 and set the BIOS recovery jumper back to the default position on the front panel header.
- 10. Switch on the product and press any key to reset and check if the BIOS is working properly.
- 11. Reconfigure the BIOS with any specific user requirements.

11/RAID

The KBox B-201-RPL supports a factor installed RAID array within the drive bay.

11.1. Drive Bay RAID Array

The drive bay RAID array is factory installed and RAID 1 by default.

Table 6: Drive Bay RAID

RAID Drive Type	Number of M.2 SSDs	Interface	Position	RAID Type	RAID Monitoring
2.5" SSD dual M.2 RAID	Up to 2	SATA III	Drive bay -	RAID 0/1	iRAID utility
Module with 2x M.2 Key B		6Gb/s	bottom side	hardware configured	software
SSD modules					(pre-installed)

NOTICE


Do not reset the RAID module without considering if a backup of the data is required. Pressing the reset switch configures the RAID array and data on both drives will be lost.



After replacing one of the M.2 SSD modules on the RAID module, do not reset the RAID module! When the RAID module is powered on again, the previous RAID configuration is copied to the new M.2 SSD module automatically.

11.1.1. Drive Bay RAID Configuration

Figure 36: 2.5" SSD dual RAID M.2 Module Settings

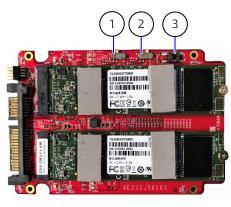

- 1 Jumper (J1) in setting 1
- 2 Jumper (J2) in setting 2
- 3 Reset switch

To configure the 2.5" SSD dual M.2 RAID module, perform the following:

- 1. Open the drive bay cover.
- 2. Place the 2.5" SSD dual M.2 RAID module on an ESD-safe surface.
- 3. Insert the two M.2 SSDs on the RAID modules and secure with screw.
- 4. Set the jumpers J1 and J2 (Figure 36, pos. 1 and 2) to the setting required for the RAID array type (see Table 7).

Table 7: RAID Module Jumper Settings

RAID Array Type	J1 Setting	J2 Setting	
RAID 0	2	2	
RAID 1	1	2	

5. To configure the RAID array the 2.5" SSD dual M.2 RAID module, the module must be powered on using either the product's drive bay (refer to step 6) or an external SATA adapter from a SATA source (refer to step 7).

6. Insert into the drive bay with the side of the 2.5" SSD dual M.2 RAID module with the two M.2 SSDs modules facing the inside of the drive bay. Switch on the product. Place a small non-conductive blunt-utensil underneath the 2.5" SSD dual M.2 RAID module where the rest switch is positioned (Figure 36, pos. 3). Press down gently on the 2.5" SSD dual M.2 RAID module's free end for approximately 3 seconds or until a click tone confirms the reset switch has been activated. The 2.5" SSD dual M.2 RAID module automatically configures to the RAID array type set by the jumpers. Close and secure the drive bay cover. After configuring the RAID module, immediately return the product to an allowed orientation!

▲WARNING

Danger of Fire

Mounting the product with the top cover facing downward in not permitted and may cause overheating or melting, and hence may cause a fire hazard or personal injury. To avoid risk of fire and personal injury, observe the following:

- DO NOT mount horizontally with the top cover facing downward
- Only use the allowed mount orientations:
 - Horizontally (only top cover facing upwards)
 - Vertically (all mount orientations)
- 7. Connect a SATA adapter cable (power and data) to a SATA source. Connect the other end of the adapter cable to the 2.5" SSD dual M.2 RAID module's SATA power and data connectors. Press the reset switch (Figure 36, pos. 3) for three seconds or until a click tone confirms the reset switch has been activated. The 2.5" SSD dual M.2 RAID module automatically configures to the RAID array type set by the jumpers. Switch off the SATA power source and remove the SATA adapter cable from the 2.5" SSD dual M.2 RAID module. Insert the 2.5" SSD dual M.2 RAID module into the SATA connectors in the drive bay with the side of the 2.5" SSD dual M.2 RAID module with the two M.2 SSDs modules facing the inside of the drive bay. Close and secure the drive bay cover.

11.1.2. Drive Bay RAID Software

The iRAID Utility software is factory installed and monitors the status of the RAID module's individual drives to enables users to access data regarding the RAID settings, receive notifications, and find out about memory events that occurred and could lead to a possible drive failure.

11.1.2.1. iRAID Utility Settings

The iRAID Utility software displays the RAID data for both drives:

- Drive model
- Serial number (SN)
- Firmware
- Memory capacity
- S.M.A.R.T health check information

The S.M.A.R.T health check helps predict memory failures by counting how often memory-attribute problems occur, see Table 8: S.M.A.R.T. Information Memory Attributes.

Table 8: S.M.A.R.T. Information Memory Attributes Examples

Memory-attributes				
Later bad	Average erase	Unexpected power loss		
Power on hours	Device Life	Temperature		
Power cycle	Spare block	Flash ID		
Total bad block	Program fail	Later bad block read		
Maximum erase	Erase fail	Later bad block write		

11.1.2.2. Notifications

Notifications enables users to set an email address to receive notification emails for typical RAID events, when a specified threshold level is reached.

Table 9: Notifications Examples

Notifications				
RAID Broken	RAID Created	RAID 1 Rebuild Finished		
RAID Degrade	RAID Deleted	RAID 1 Rebuild Suspend		
RAID Recovery	RAID 1 Rebuild	RAID 1 Rebuild Error		

11.1.2.3. Events

Events lists important RAID events and gives the user more detailed information.

Table 10: Event List Examples


Events	Description	
List number	Lists in the order of occurrence	
Type	Type of event Info./ Alert / Error	
Time	Time the event took place	
Event	Event's RAID notification tag	
Message	Describes the error in more detail e.g. H/W RAID 1 DISK 1 plugged out or DISK one plugged in	

12/ Product Specification

12.1. Block Diagrams

Figure 37: Block Diagram KBox B-201-RPL

KBox B-201-RPL

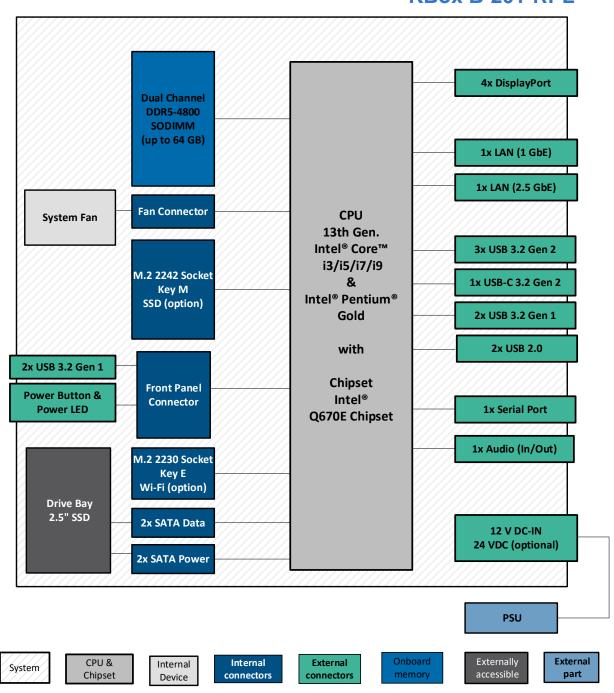

12.2. Hardware Specification

Table 11: Hardware Specification

Product		KBox B-201-RPL				
Motherboard	Туре	K3833-Q mini-ITX				
	Processors	Intel® 13 th Gen Core™ processors and Pentium® Gold processor				
		Processors	Cores	Base Freq.	Turbo Freq	Base Power
		i9-13900E	24	1.8 GHz	5.2 GHz	65 W
		i7-13700E	16	1.9 GHz	5.1 GHz	65 W
		i5-13500E	14	2.4 GHz	4.6 GHz	65 W
		i3-13100E	4	3.3 GHz	4.4 GHz	65 W
		Gold G7400E	2	3.60 GHz	-	46 W
	Chipset	Intel® Q670 Exp	ress			1
	Memory	2x DDR5 SO-DII Up to 64 GBytes				
	Graphics	Intel® UHD Graphics 770 (Intel® Core™ i5/i7/i9) Intel® UHD Graphics 730 (Intel® Core™ i3) Intel® UHD Graphics 710 (Intel® Pentium® Gold) 7680 x 4320 @ 60Hz resolution (max.)				
Front I/O	USB	2x USB 3.2 Gen 1				
	Button/LED	Power Button v	vith integra	ated power LED		
Rear I/O	USB	1x USB-C 3.2 Gen 2 3x USB 3.2 Gen 2 2x USB 3.2 Gen1 2x USB 2.0				
	LAN	1x 2.5 GbE (10/100/1000/2500 Mbps): Intel® i226LM (Wake-on-LAN) 1x 1 GbE (10/100/1000 Mbps) Intel® i219LM (Wake-on-LAN)				
	Displays	4x DP V1.4a @4K				
	Audio	Line-in, Line-out				
	Serial Port	al Port 2x COM (RS232)				
Expansion	M.2 Module	1x 2230 Key E Wi-Fi 6E (6GHz),Bluetooth® 5.3				
	(Wi-Fi)	Interface: Wi-Fi: PCIe x1/Bluetooth: USB 2.0				
Storage	Drive Bays	2x M.2 SSD (RA	-			
		1x 2.5" SSD SATA III / SATA-600				
	M.2 Module	1x 2242 Key M				
	(SDD)	Interface: PCIe/NVME				

12.3. Software Specification

Table 12: Software Specification

Operating System (OS)	Windows® 10 IOT Enterprise LTSC or Linux
BIOS	AMI Aptio 5.x (UEFI)

12.4. Power Specification

The electrical specifications of the product's power options are defined in this chapter. Only connect the product to a power source using the power option supplied with the product that meets the product's electrical specification, and power consumption and power protection requirements.

12.4.1. AC/DC (150 W) Power Supply

The AC/DC, 150 W power supply connects to the DC IN power connector. Only use the AC/DC power supply supplied with the product and chosen to meet the product's electrical specification (as specified in this user guide and on the product's type label), power consumption, power limitation, and power protection requirements.

Table 13: External AC/DC 150 W Power Supply Electrical Specification

Power Source	External AC/DC (150 W) Power Supply
Input Voltage	110 VAC to 240 VAC, (50/60 Hz) (Range 90 VAC to 264 VAC)
Output Voltage	12 VDC
Output Current	9 A to 12.5 A max
Power Rating	150 W

ACAUTION

Only connect the product to the external AC/DC power supply supplied by Kontron and providing the voltage type (AC or DC) and the input power (max. current) specified on the Kontron Product Label and meeting the requirements of the Limited Power Source (LPS) and Power Source (PS2) of UL/IEC 62368-1.

12.4.2. 24 VDC Connector (option)

The 24 VDC 3-pin power connector connects to an external 24 VDC power supply using the delivered 3-pin mating power connector wired correspondingly by the user. Only connect the product to an external 24 VDC power supply that meets the product's electrical specification (as specified in this user guide and on the product's type label), power consumption, power limitation, and power protection requirements. The 24 VDC power supply must automatically recover from AC power loss and startup under peak loading.

Table 14: 24 VDC Connector Electrical Specification

Power Source	24 VDC Connector
Input Voltage (nominal)	24 VDC (Range: 6 VDC to 24 VDC)
Input Current	5 A (fuse protected)
Power Rating	120 W

ACAUTION

Only connect the product to an external 24 VDC power supply providing the input power (max. current) specified on the Kontron Product Label and meeting the requirements of the Limited Power Source (LPS) and Power Source (PS2) of UL/IEC 62368-1

ACAUTION

Observe that wiring and short-circuit/overcurrent protection is performed according to the applicable standards, regulations and in respect to the product's electrical specification. The disconnecting device (fuse/circuit breaker) rating must be in accordance with the product's wire cross-section.

NOTICE

Ensure that the external 24 VDC power supply is used according to the manufacturer's instructions.



Ensure the external 24 VDC power supply has been fully tested to meet the minimum immunity of AC inputs requirements, as stipulated in IEC 55024. Including power supplies marketed with a separate AC/DC power converter.



To protect the product and any connected peripherals, make sure that the power cables have the right diameter to withstand the maximum available current.

12.4.3. Power Protection

The supplied AC/DC (150 W) external power supply incorporates protection and supply features such as over current, over temperature, over voltage and brownout protection, to protect the product against fluctuations and interruptions in the delivered mains power supply and help to ensure operation without loss of data or damage to the product.

Table 15: Power Supply Protection Features (AC/DC 150 W)

	Amount	Condition	Description
Holdup Time	≥10 sec	e 100 VAC or 240 VAC / full load, output voltage remains regulated	Time the power supply can bridge drops in mains power without fluctuations in the output voltage.
Brownout	Set at 60 VAC to 70 VAC		Under voltage condition due to a drop in the mains power supply voltage

NOTICE

If there is an unintentional voltage drop in the mains power supply for longer than the specified holdup time (brownout), all supply voltages should be shut down and remain in the off state long enough to allow internal voltages to discharge sufficiently. During the off state time do not disconnect an add cables to/from the I/O connectors. Failure to observe the off state time means that parts of the product or attached peripherals may work incorrectly or suffer a reduction of MTBF.

The minimum off state time, to allow internal voltages to discharge, depends on the power supply used and additional electrical factors. To determine the required off state time, each case must be considered individually. For more information, contact <u>Kontron Support</u>.

12.4.4. Power Consumption

The chosen power supply option must provide the level of power required to meet the product's maximum power consumption. The total power consumption depends on the motherboard capacity, system memory and system expansion. The overall power consumption must not exceed the product's maximum power supply rating.

If the implemented expansion cards increase the total power consumption to a value above the maximum power supply rating, contact <u>Kontron Support</u>.

Table 16: Power Consumption Estimation

Components	Maximum Power Consumption
Motherboard + Processor + RAM	<tbd> W</tbd>
SSD	<tbd> W</tbd>
Wi-Fi	<tbd> W</tbd>
Total	<tbd> W</tbd>

12.4.5. Potential Equalization

The potential equalization stud is located on the rear panel. The potential equalization stud is not a ground connection. When connected, the potential equalization stud ensures that all connected systems share a common potential.



The potential equalization stud is not a ground connection. The potential equalization stud ensures that all connected systems share a common potential.

12.5. Environmental Specification

Table 17: Environmental Specification

Temperature Operating		0°C to 45°C (32°F to 113°F)	
	Storage & Transit	-20°C to +80°C (-4°F to 176°F)	
Relative	Operating	93% RH @ 40°C, non-condensing	
Humidity	Storage & Transit		
Altitude (Operating)		5000 m max. (approx. 16,400 ft.)	
Noise		34 dB (A) at 25°C	
Shock (Operating)		Half sine, 15 g, 11 ms, acc. to IEC 60068-2-27	
Vibration (Operating)		5 Hz - 500 Hz, 1 G acc. to IEC 60068-2-6	
MTBF		<tbd> hours @ 40°C</tbd>	

12.6. Mechanical Specification

Table 18: Mechanical Specifications

	Dimensions			
Dimensions (W \times D \times H)	190 x 60 x 190 mm (7.48" x 2.36" x 7.48")			
Weight	Approx. 2 kg (4.41 lbs.)			
Chassis	Zinc coated steel sheet (RAL 7021)			
Front Panel	Aluminum (grey)			
Cooling	Fan cooled, axial fan, Silent fan			
Mounting Options	Wall Mount (D x W x H) 187 mm x 45 mm x 20 mm (7.36" x 1.77" x 0.79")			
	Vertical Stand (D x W x H) 187 mm x 100 mm x 12 mm (7.36" x 3.94" x 0.47")			
	VESA (D x W x H) 10.4 mm x 402.9 mm x 180 mm (0.41" x 15.86" x 7.09")			



For the products 3D STEP data, visit Kontron's <u>Customer section</u> and select the product KBoxB> KBox B-201-RPL> KBox B-201-RPL Documentation.

12.6.1. Dimension Diagrams

For detailed mechanical information, refer to the outline dimension diagrams in this chapter. Each dimension drawing shows the main external mechanical dimensions.

Figure 38: Dimensions Front Panel

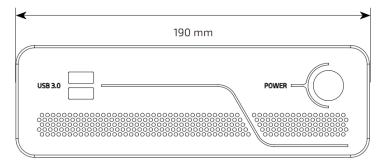


Figure 39: Dimensions Rear Panel

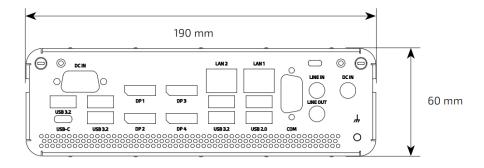


Figure 40: Dimensions Top Cover

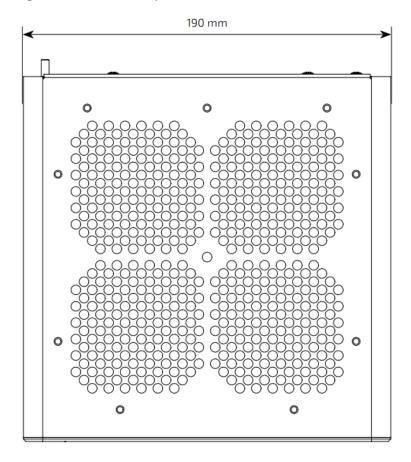


Figure 41: Dimensions Bottom Side


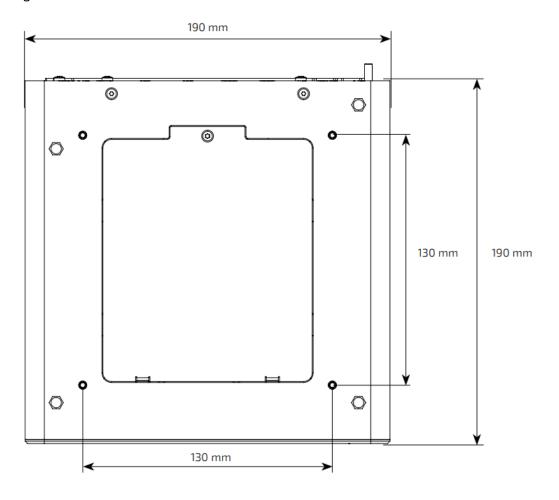


Figure 42: Dimensions Right Side and Left Side



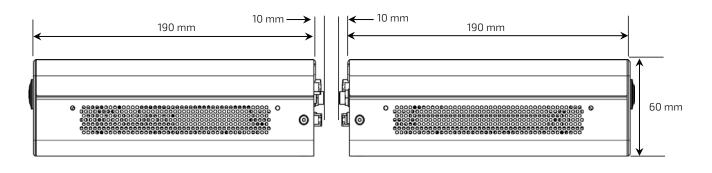


For the products 3D STEP data, visit Kontron's <u>Customer section</u> and select the product KBoxB> KBox B-201-RPL> KBox B-201-RPL Documentation

12.6.2. Dimension Diagrams- Wall Mount Brackets

The dimension drawing shows the main mounting bracket mechanical dimension.

Figure 43: Dimensions with Mounting Brackets

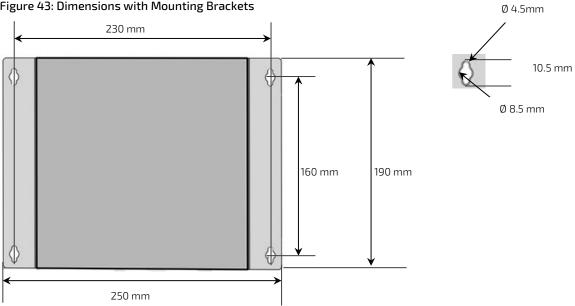



For the products 3D STEP data, visit Kontron's <u>Customer section</u> and select the product KBoxB> KBox B-201-RPL> KBox B-201-RPL Documentation

// 67 www.kontron.com

12.7. Compliance

The KBox B-201-RPL plans to comply with the relevant requirements and the approximation of the laws relating to the CE Mark for non-Wi-Fi variants and CE Radio Equipment Directive (RED) for Wi-Fi variants, and the standards that are constitutional parts of the declaration.

Table 19: Compliance

	Europe – CE Mark				
Directives	2014/30/EU				
	Electromagnetic compatibility				
	2014/35/EU				
	Low Voltage				
	2011/65/EU				
	RoHS II Restriction of the use of Hazardous Substances in electrical and electronic equipment				
EMC	EN 55032				
	Electromagnetic compatibility of multimedia equipment- Emission Requirements				
	EN 61000-3-2				
	Limits for harmonic currents emissions				
	EN 61000-3-3				
	limitations of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems				
	EN 55035				
	Electromagnetic compatibility of multimedia equipment - Immunity requirements				
Safety	EN 62368				
	Audio/video, information and communication technology equipment – Safety requirements				

	Europe – CE RED Mark						
Directives	2014/53/EU						
	Radio Equipment Directive (RED)						
	2011/65/EU						
	RoHS II						
EMC	EN 55032						
	Electromagnetic compatibility of multimedia equipment- Emission Requirements						
	EN 61000-3-2						
	Limits for harmonic currents emissions						
	EN 61000-3-3						
	limitations of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems						
	EN 55035						
	Electromagnetic compatibility of multimedia equipment - Immunity requirements						
	Draft ETSI EN 301 489-01 V2.2.0						
	Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements						
	Final ETSI EN 301 489-17 V3.2.0						
	Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for Broadband Data Transmission Systems						
	ETSI EN 300 328 V2.1.1						
	Wideband transmission systems - Data transmission equipment operating in the 2,4 GHz band						
	ETSI EN 301 893-2 V2.1.1						
	5 GHz RLAN						
Safety	EN 62368						
	Audio/video, information and communication technology equipment – Safety requirements						
Health and	EN 62311						
Safety	Assessment of electronic and electrical equipment related to human exposure restrictions for electromagnetic fields (0 Hz - 300 GHz)						

The KBox B-201-RPL plans to comply with the following country specific certifications.

Table 20: International Compliance

USA/CANADA				
EMC	FCC 47 CFR Part 15 (Class B) and ICES-003			
	Complies with part 15 FCC rules and regulations of title 47 of the CFR rules for class B products; under which an unintentional radiator may be operated, administrated and other conditions relating to the marketing of part 15 devices.			
Safety	UL 62368-1 and CAN/CSA-C22.2 No. 62368-1			
	Audio/video, information and communication technology equipment – Safety requirements			

UK CA (UK Conformity Assessed)					
EMC	EN 55032				
	Electromagnetic compatibility of multimedia equipment- Emission Requirements				
	EN 61000-3-2				
	Limits for harmonic currents emissions				
	EN 61000-3-3				
	limitations of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems				
	EN 55035				
	Electromagnetic compatibility of multimedia equipment - Immunity requirements				
Safety	EN 62368				
	Audio/video, information and communication technology equipment – Safety requirements				

International Certifications				
Safety	IEC 62368-1 (CB certificate)			
	Audio/video, information and communication technology equipment – Safety requirements			
EMC	FCC 47 CFR Part 15B / ICES-003			
	Complies with the requirements of Federal Communications Commission (FCC) rules and regulations of title 47 of the Code of Federal Regulations (CFR) Part 15B and ICES-003:2017 & 2016 rules to limit the potential of harmful interference			



For the product's Declaration of Conformity (DoC), visit Kontron's <u>Customer Section</u> and and select the product KBoxB> KBox B-201-RPL> KBox B-201-RPL Documentation



If the product is modified, the prerequisites for specific approvals may no longer apply.



Kontron is not responsible for any radio television interference caused by unauthorized modifications of the delivered product or the substitution or attachment of connecting cables and equipment other than those specified by Kontron. The correction of interference caused by unauthorized modification, substitution or attachment is the user's responsibility.



All tests were performed with supplied external AC/DC power supply. Failure to use the supplied power supply may invalidate the FCC compliance & class.



Use shielded I/O cables when connecting to peripheral devices. Failure to do so may violate FCC/ICES rules.

13/ Connectors and LEDs



Low-active signals are indicated by a minus sign.

13.1. DC IN 12 VDC, Power Connector (default)

The supplied external AC/DC, 150 W power supply connects to the rear panel DC IN power connector.

Table 21: DC IN 12 VDC Power Jack Pin Assignment

Pin	Signal	Barrel Jack (5.5 mm/ 2.5 mm) with Center Pole
Centre pole	+12 VDC	
Outer ring	Ground	



Power the product with the delivered external AC/DC power supply only.



Do not disconnect the power from your product while the product is in the powered on state! Performing a forced shutdown can lead to loss of data or other undesirable effects!

13.2. DC IN 24 VDC, 120 W (option)

The supplied 3-pin mating power connector (PSC 1.5/ 3-F), with the corresponding wiring, connects to the DC IN 3-pin Phoenix PSC 1.5/3-M power connector.

Table 22: DC IN 24 VDC 3-pin Power Connector Pin Assignment

Pin	Signal Name / Description	3-Pin Phoenix PSC 1.5/3-M
1	Ground (-)	(A)
2	NC	a resident
3	+ 24 VDC	1 2 3

ACAUTION

Only connect the product to an external 24 VDC power supply providing the input power (max. current) specified on the Kontron Product Label and meeting the requirements of the Limited Power Source (LPS) and Power Source (PS2) of UL/IEC 62368-1.

NOTICE

Do not disconnect the power from your product while the product is in the powered on state! Performing a forced shutdown can lead to loss of data or other undesirable effects!



To connect to the 3-pin DC IN power connector use the supplied corresponding 3-pin mating power connector only.

NOTICE

Mark the supply wires (+/-) clearly to ensure a safe connection from the supplied 3-pin mating power connector to the DC power supply, when using an external 24 VDC power supply.



The wiring is not part of the delivery and must be provided by the user.

- Use copper wire only if the field wiring terminal is for copper wire connection only
- Minimum temperature rating of the field wiring terminals is 75° C.

13.3. USB 3.2 Gen 2/1 Port Pin Assignment

All USB3 connectors provide separate signal lines for USB3.2 and USB2.0.

Table 23: USB 3.1 Gen 2/1 (Type-A) Pin Assignment

Pin	Signal Name	Pin	Signal Name	9-pin USB 3.2 (Type-A) Port
1	+5V (fused protected)	5	RX-	9 5
2	Date-	6	RX+	
3	Data+	7	GND	Gen 2
4	GND	8	TX-	9 5
		9	TX+	Gen 1

13.4. USB-C 3.2 Gen 2 Port Pin Assignment

Table 24: USB 3.2 Gen 2 Type-C Pin Assignment

Pin-A	Signal Name	Pin-B	Signal Name	USB Type-C Connector
1	GND	12	GND	
2	USB3_TX1+	11	USB3_RX+	A1 A12
3	USB3_TX1-	10	USB3_RX1-	(-0.00.00.000
4	VCC	9	VCC	(
5	CC1 ^[1]	8	SBU2 ^[2]	
6	USB2_Data1+	7	USB2_Data2-	B12 B1
7	USB2_Data1-	6	USB2_Data2+	
8	SBU1 ^[2]	5	CC2 ^[1]	
9	VBUS Power	4	VBUS Power	
10	USB3_RX2-	3	USB3_TX2-	
11	USB3_RX2+	2	USB3_TX2+	
12	GND	1	GND	

^[1] Configuration channel

^[2] Sideband use



Power delivery not supported.

13.5. USB 2.0 Port Pin Assignment

Table 25: USB 2.0 Connector Pin Assignment

Pin	Signal Name	4-pin USB 2.0 (Type-A) Connector
1	+5 V (fused protected)	
2	Data-	
3	Data+	
4	GND	1 4

13.6. Display Port (DP) V1.4a Pin Assignment

Table 26: Display Port (DP) Connector Pin Assignment

Pin	Signal Name	Pin	Signal Name	DPP (V1.4) Connector
1	Link0+	2	GND	
3	Link0-	4	Link1+	19 1
5	GND	6	Link1-	
7	Link2+	8	GND	
9	Link2-	10	Link3+	[Pagananana]
11	GND	12	Link3-	
13	DVI dongle detect	14	CEC (for HDMI)	20 2
15	AUX+	16	GnD	
17	AUX-	18	Hotplug detect	
19	GND (Return)	20	+3.3 V [1]	

13.7. LAN 2.5 GbE/1GbE Connector Pin Assignment

Table 27: LAN (2.5 GbE/1 GbE) Connector Pin Assignment

Pin	Signal Name (10/100/1000/2500 Mbps)	Signal Name (10/100 Mbps)	RJ45 (female) Connector
1	MX1+	TX+	Link/Activity LED Speed
2	MX1-	TX-	I FN /
3	MX2+	RX+	
4	MX3+		
5	MX3-		
6	MX2-	RX-	
7	MX4+		8 1
8	MX4-		0 1

Link/Activity LED		Speed LED	
LED Status Description		LED Status	Description
Green	Link	Green	2.5 GBE
Green Flashing	Activity	Yellow	1 GBE
		Off	10/100 Mbps

13.8. COM Port Pin Assignment

Table 28: RS232 Connector Pin Assignment

Pin	RS232	Pin	RS232	D89 Connector
1	DCD	6	DSR	•
2	RxD	7	RTS	5
3	TxD	8	CTS	
4	DTR	9	RI	
5	GND			

13.9. Audio Line-out and Line-in Connector Pin Assignment

Table 29: Audio Line-out Audio Line-in Pin Assignment


Jack	Signal Name	
Blue	Line input (Line-in)	
Green	Headphone output (Line-out)	

13.10. Jumpers

13.10.1. Recovery BIOS Jumper

The recover BIOS jumper is located on the motherboard's front panel header. To recover the BIOS, move the recover BIOS jumper from the default position (Figure 44, pos. 2) to the recover BIOS position (Figure 44, pos. 1) on the front panel header.

Figure 44: Recover BIOS Jumper

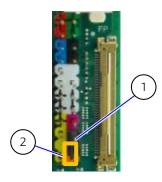

- 1 Default jumper setting
- 2 Recover position (orange)

Table 30: Recover BIOS Jumper

Pins	State	24-pin Front Panel Header
20-22	Default	1 2
22-24	Recover BIOS	Default 23 Recover BIOS



For further motherboard information, visit Kontron's K3833-Q mITX motherboard website.

14/ Maintenance

Product maintenance or repair may only be carried out by qualified personnel authorized by Kontron. Kontron products require only minimum servicing and maintenance for problem-free operation.

ACAUTION

Handling and operation of the product is permitted only for trained personnel aware of the associated dangers, within a work place that is access controlled and fulfills all necessary technical and environmental requirements.

14.1. Cleaning

To clean the product's surface, perform the following:

- 1. Close all applications. Shut down properly using the power button and disconnect the power cable from the DC IN power connector. Disconnect all peripherals.
- 2. Allow the product to cool before handling.
- **3.** For light soiling clean the product with a dry cloth.
- 4. Carefully remove dust using a clean soft brush and if light soiling clean the product with a dry cloth.
- 5. Remove stubborn dirt using a mild detergent and a soft cloth.

14.2. Replacing Lithium Battery



CAUTION: Risk of Explosion if the lithium battery is replaced by an incorrect type. Dispose of used lithium batteries according to the Instructions.

ATTENTION: Risque d'explosion si la pile au lithium est remplacée par une pile de type incorrect. Éliminez les piles au lithium usagées conformément aux instructions.

The CR2032 lithium battery is located in a vertical battery holder on the product's motherboard. The CR2032 lithium battery must be replaced with an identical 3 Volt lithium battery or a Kontron recommended lithium battery. To replace the Lithium battery, perform the following:

- 1. Close all applications. Shut down properly using the power button and disconnect the power cable from the DC IN connector. Disconnect all peripherals.
- 2. Open the product, see Chapter 7.2: Opening the Product, steps 1 to 6.
- 3. Gently push the metal clamp away from battery, as shown by the arrow in Figure 45.

Figure 45: Vertical Battery Holder



- 4. Remove the battery using your fingers or a suitable (non-metal) tool to pull the lithium battery out of the battery holder.
- 5. Insert the lithium battery into the battery holder. Ensure correct polarity with the PLUS side of the battery facing towards the metal clamp, as shown by the + and symbols in Figure 45.

- **6.** Gently push the battery downwards until the metal clamp locks the battery.
- 7. Close the product, see Chapter 7.2: Opening the Product, step 7.

NOTICE

Never use metal tools such as tweezers to grab the lithium battery. This will shortcut both terminals, and can damage the lithium battery! Only use suitable (non-metal) tools.

NOTICE

Never use a screwdriver to remove the battery from the battery socket. Using a screwdriver could damage the solder pads, metal brackets or plastic noses and lead to malfunction of the battery contact, RTC reset or BIOS battery voltage error message.



Do not dispose of lithium batteries in general trash collection. Dispose of the lithium battery according to the local regulations dealing with the disposal of these special materials, (e.g. to the collecting points for dispose of batteries).



The product is not designed to operate without a lithium battery. If the lithium battery is empty or disconnected, the BIOS settings will be set to the factory defaults.

15/ Storage and Transportation

15.1. Storage

If the product is not in use for an extended period time, disconnect the power plug from the mains power source .If it is necessary to store the product then re-pack the product as originally delivered to avoid damage. The storage facility must meet the products environmental storage requirements as stated within this user guide. Kontron recommends keeping the original packaging material for future storage or warranty shipments.

15.2. Transportation

To ship the product use the original packaging, designed to withstand impact and adequately protect the product. When packing or unpacking products always take shock and ESD protection into consideration and use an EOS/ESD safe working area.

16/ Technical Support

For technical support contact our Support department:

E-mail: support@kontron.comPhone: +49-821-4086-888

Make sure you have the following information available when you call:

- Product ID Number (PN)
- Serial Number (SN)



The serial number can be found on the system's type label.

Be ready to explain the nature of your problem to the service technician.

16.1. Returning Defective Merchandise

All equipment returned to Kontron must have a Return of Material Authorization (RMA) number assigned exclusively by Kontron. Kontron cannot be held responsible for any loss or damage caused to the equipment received without an RMA number. The buyer accepts responsibility for all freight charges for the return of goods to Kontron's designated facility. Kontron will pay the return freight charges back to the buyer's location in the event that the equipment is repaired or replaced within the stipulated warranty period. Follow these steps before returning any product to Kontron.

- 1. For RMA information, visit Kontron Support's RMA Information
- 2. Download the RMA Request sheet for Kontron Europe GmbH Augsburg and fill out the form. Take care to include a short detailed description of the observed problem or failure and to include the product identification Information (Name of product, Product number and Serial number). If a delivery includes more than one product, fill out the above information in the RMA Request form for each product.
- 3. Send the completed RMA-Request form to the fax or email address given on the RMA Request sheet and Kontron will provide an RMA-Number.
- 4. The goods for repair must be packed properly for shipping, considering shock and ESD protection.
- 5. Include the RMA-Number with the shipping paperwork and send the product to the delivery address provided in the RMA form or received from Kontron RMA Support.



Goods returned to Kontron in non-proper packaging will be considered as customer caused faults and cannot be accepted as warranty repairs.

16.2. Warranty

Kontron defines product warranty in accordance with regional warranty definitions. Claims are at Kontron's discretion and limited to the defect being of a material nature. To find out more about the warranty conditions and the defined warranty period for your region, following the steps below:

- Visit Kontron's Term and Conditions webpage. http://www.kontron.com/terms-and-conditions
- 2. Click on your region's General Terms and Conditions of Sale.

16.2.1. Limitation/Exemption from Warranty Obligation

In general, Kontron shall not be required to honor the warranty, even during the warranty period, and shall be exempted from the statutory accident liability obligations in the event of damage caused to the product due to failure to observe the following:

- General safety instructions within this user guide
- Warning labels on the product and warning symbols within this user guide
- Information and hints within this user guide

Additionally, alterations or modifications to the product that are not explicitly approved by Kontron, described in this user guide, or received from Kontron Support as a special handling instruction will void your warranty.

Due to their limited service life, parts which by their nature are subject to a particularly high degree of wear (wearing parts) are excluded from the warranty beyond that provided by law.

List of Acronyms

Table 31: List of Acronyms

BIOS	Basic Input Output System
ВТ	BlueTooth
CFR	Code of Federal Regulations
СОМ	Communication port
DP	Display Port
DVI	Digital Video Interface
ECC	Error Checking and Correction
ECT	Embedded Computer Technology
EEE	Electrical and Electronic Equipment
ESD	Electro Static Device
FCC	Federal Communications Commission
GbE	Giga bit Ethernet
HD	High Definition
HD/HDD	Hard Disk /Drive
HDR	High Dynamic Range
ICES	Interference Causing Equipment Standard
IOT	Internet of Things
ITE	Information Technology Equipment
LAN	Local Area Network
LED	Light-Emitting Diode
LVDs	Low Voltage Device
MTBF	Mean Time Before Failure
PCle	PCI-Express
OS	Operating System
PSU	Power Supply Unit
RAID	Redundant Array of Independent Disks
REACH	Registration, Evaluation, Authorization and Restriction of Chemicals
RED	Radio Equipment Directive
RMA	Return of Material Authorization
ROHS	Restriction Of Hazardous Substances
RTC	Real Time Clock
SATA	Serial AT Attachment
SDR	Standard-Dynamic-Range
S.M.A.R.T	Self-Monitoring, Analysis and Reporting Technology
SN	Serial Number
SSD	Solid State Drive
TPM	Trusted Platform Module
TSN	Time Sensitive Network

UEFI	Unified Extensible Firmware Interface
USB	Universal Serial Bus
VCC	Voltage Common Collector
VDC	Voltage Direct Current
WEEE	Waste Electrical and Electronic Equipment
Wi-Fi	Wireless

kontron

About Kontron

Kontron is a global leader in IoT/Embedded Computing Technology (ECT). Kontron offers individual solutions in the areas of Internet of Things (IoT) and Industry 4.0 through a combined portfolio of hardware, software and services. With its standard and customized products based on highly reliable state-of-the-art technologies, Kontron provides secure and innovative applications for a wide variety of industries. As a result, customers benefit from accelerated time-to-market, lower total cost of ownership, extended product lifecycles and the best fully integrated applications.

For more information, please visit: www.kontron.com



Global Headquarters

Kontron Europe GmbH

Gutenbergstraße 2 85737 Ismaning Germany Tel.: +49 821 4086-0 Fax: +49 821 4086-111 info@kontron.com