



Errata

2

Manual: 24855

Manual Index: 02

Table of Contents:

- 1. *Reference: Page 5-13, Chapter 5.7* 2 - 3



This page has been intentionally left blank.





1. Reference: Page 5-13, Chapter 5.7

The referenced information is revised as follows:

The following NetBootLoader command is added:

SPEED

FUNCTION:	Enables or disables fast booting
SYNTAX:	<pre>speed [<switch>]</pre> <p>where:</p> <pre>speed command <switch> parameter: numeric string 0, 1 when set to 0 (zero) disables "fast" boot mode when set to 1 (one) enables "fast" boot mode when not specified, displays current setting</pre>
DESCRIPTION:	This command is used to specify to the NetBootLoader that either the complete booting process is to be performed or that a shortened boot process is to be performed.
USAGE:	<p>Enable "fast" booting</p> <p>COMMAND / RESPONSE:</p> <pre>NetBtLd> speed 1</pre>
USAGE:	<p>Display the current setting</p> <p>COMMAND / RESPONSE:</p> <pre>NetBtLd> speed</pre> <pre>Speed mode : "fast" boot up process.</pre>



This page has been intentionally left blank.

