


» Kontron User's Guide «

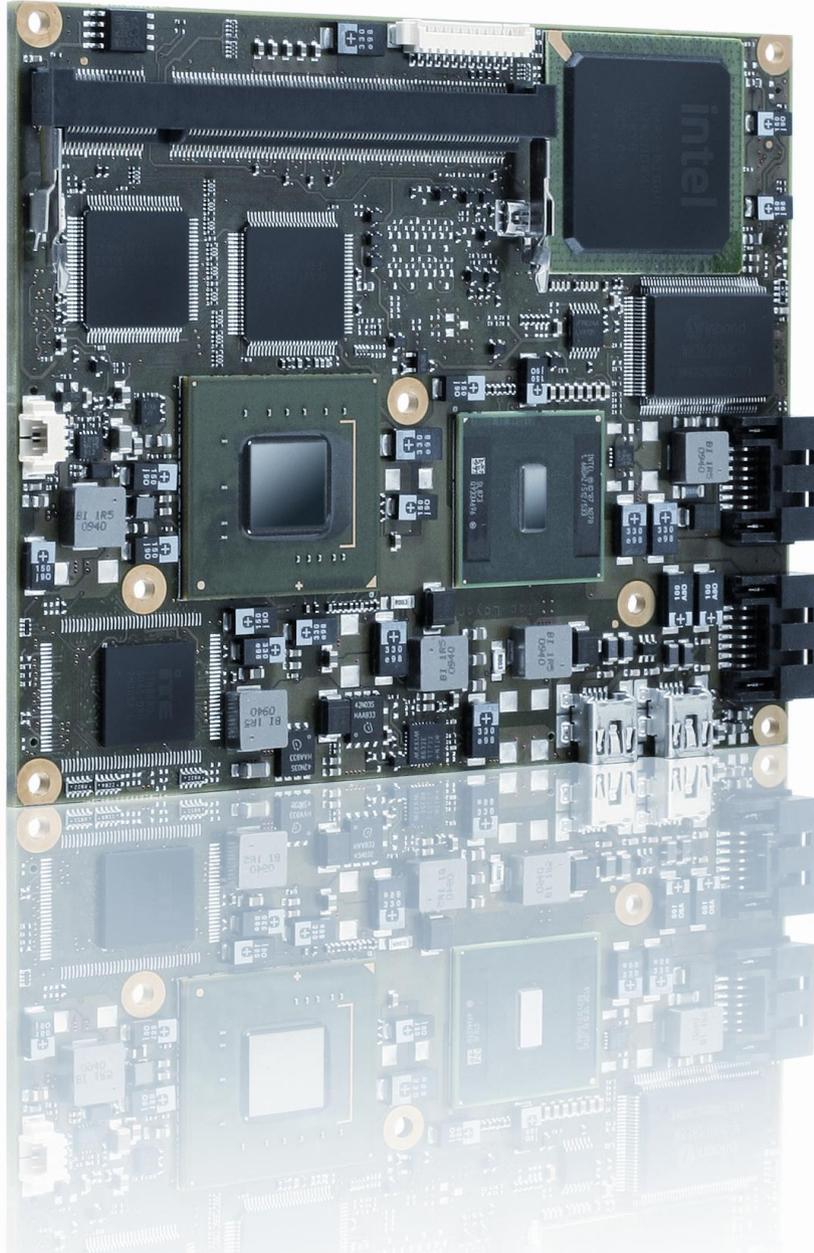

ETX-DC®

Document Revision: 1.18

» Table of Contents «

1	User Information	1
1.1	About This Document	1
1.2	Copyright Notice	1
1.3	Trademarks	1
1.4	Standards	1
1.5	Warranty.....	2
1.6	Technical Support.....	2
2	Introduction	3
2.1	ETX®-DC	3
2.2	ETX® Documentation	3
2.3	ETX® Benefits.....	4
3	Specifications.....	5
3.1	Functional Specifications.....	5
3.2	Available Modules ETX®-DC 18bit	6
3.3	Available Modules ETX®-DC 24bit	6
3.4	Block Diagram	7
3.5	Mechanical Specifications	8
3.6	Electrical Specifications.....	8
3.7	Environmental Specifications	9
3.8	MTBF.....	10
4	ETX® Connectors	11
4.1	Connector Locations	11
4.2	General Signal Description	11
4.3	Connector X1 (PCI bus, USB, Audio)	12
4.3.1	Connector X1 Signal Levels	13
4.3.2	Connector X1 Signal Description	15
4.4	Connector X2 (ISA Bus)	16
4.4.1	Connector X2 Signal Levels	17
4.4.2	Connector X2 Signal Description	19
4.5	Connector X3 (VGA, LCD, Video, COM1 and COM2, LPT/Floppy, Mouse, Keyboard)	20

4.5.1	Alternative pinning	20
4.5.2	Connector X3 (Signal Levels)	22
4.6	Connector X3 Signal Description	24
4.7	Connector X4 Subsystems	26
4.7.1	Connector X4 (IDE 1, IDE 2, Ethernet, Miscellaneous)	26
4.7.2	Connector X4 (Signal Levels)	27
4.7.3	Connector X4 Signal Description	29
4.8	SDVO Connector J9	31
4.8.1	Location of the connector	31
4.8.2	SDVO Output	31
4.8.3	Connector and Flat Foil Cable	32
4.8.4	Software Requirements	32
4.8.5	Pinout Feature Connector J9	33
5	Special Features	34
5.1	Watchdog Timer	34
5.2	SATA Support	34
5.3	Restrictions	34
5.3.1	ISA Bus	34
5.3.2	ISA VGA	34
5.3.3	LVDS	34
6	Design Considerations	35
6.1	Thermal Management	35
6.2	Heat spreader	36
6.3	ETX-DC® onboard fan connector	36
6.3.1	Schematic of fan control	36
6.3.2	Location and Pinout of fan connector J8	37
7	Important Technology Information	38
7.1	I/O APIC vs 8259 PIC Interrupt mode	38
7.1.1	Method of interrupts transmission	38
7.1.2	Interrupt priority	38
7.1.3	More interrupts	38
7.2	Thermal Monitor and Catastrophic Thermal Protection	38
7.3	ACPI Suspend Modes and Resume Events	38
8	System Resources	40
8.1	Interrupt Request (IRQ) Lines	40
8.1.1	In 8259 PIC mode	40

8.1.2	In APIC mode	41
8.1.3	Direct Memory Access (DMA) Channels	41
8.2	Memory Area	42
8.3	I/O Address Map.....	42
8.4	Peripheral Component Interconnect (PCI) Devices	42
8.5	Inter-IC (I2C) Bus.....	42
8.6	System Management (SM) Bus	42
8.7	JILI-I2C Bus	43
8.8	K-Station / JIDA32 resources.....	43
8.8.1	I2C	43
8.8.2	Storage.....	43
8.8.3	GPIO.....	43
8.8.4	Hardware Monitor	43
9	BIOS Operation	44
9.1	Determining the BIOS Version.....	44
9.2	Setup Guide.....	44
9.3	BIOS Setup Menus	46
9.3.1	Main Menu.....	46
9.3.2	Module Info	46
9.3.3	Advanced Menu	48
9.3.4	Boot Menu.....	67
9.3.5	Security Menu	69
9.3.6	Chipset Configuration Menu	70
9.3.7	Exit Menu	76

1 User Information

1.1 About This Document

This document provides information about products from Kontron Embedded Modules GmbH and/or its subsidiaries. No warranty of suitability, purpose, or fitness is implied. While every attempt has been made to ensure that the information in this document is accurate, the information contained within is supplied “as-is” and is subject to change without notice.

For the circuits, descriptions and tables indicated, Kontron assumes no responsibility as far as patents or other rights of third parties are concerned.

1.2 Copyright Notice

Copyright © 2003-2009 Kontron Embedded Modules GmbH

All rights reserved. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron Embedded Modules GmbH.

DIMM-PC®, PISA®, ETX®, ETXexpress®, microETXexpress™, X-board®, DIMM-IO® and DIMM-BUS® are trademarks or registered trademarks of Kontron Embedded Modules GmbH. Kontron is trademark or registered trademark of Kontron AG.

1.3 Trademarks

The following lists the trademarks of components used in this board.

- » IBM, XT, AT, PS/2 and Personal System/2 are trademarks of International Business Machines Corp.
- » Microsoft is a registered trademark of Microsoft Corp.
- » Intel is a registered trademark of Intel Corp.
- » All other products and trademarks mentioned in this manual are trademarks of their respective owners.

1.4 Standards

Kontron Embedded Modules GmbH is certified to ISO 9000 standards.

1.5 Warranty

This Kontron Embedded Modules GmbH product is warranted against defects in material and workmanship for the warranty period from the date of shipment. During the warranty period, Kontron Embedded Modules GmbH will at its discretion decide to repair or replace defective products.

Within the warranty period, the repair of products is free of charge as long as warranty conditions are observed.

The warranty does not apply to defects resulting from improper or inadequate maintenance or handling by the buyer, unauthorized modification or misuse, operation outside of the product's environmental specifications or improper installation or maintenance.

Kontron Embedded Modules GmbH will not be responsible for any defects or damages to other products not supplied by Kontron Embedded Modules GmbH that are caused by a faulty Kontron Embedded Modules GmbH product.

1.6 Technical Support

Technicians and engineers from Kontron Embedded Modules GmbH and/or its subsidiaries are available for technical support. We are committed to making our product easy to use and will help you use our products in your systems.

Please consult our Web site at <http://www.kontron.com/support> for the latest product documentation, utilities, drivers and support contacts. Consult our customer section <http://emdcustomersection.kontron.com> for the latest BIOS downloads, Product Change Notifications and additional tools and software. In any case you can always contact your board supplier for technical support.

2 Introduction

2.1 ETX®-DC

The ETX®-DC module brings latest 45 nm technology to the well-established ETX® 3.0 form factor. The Intel® Atom™ N270 processor is well-balanced in terms of power consumption, performance and pricing. Especially, long-term availability turns ETX®-DC to become a perfect successor for your existing ETX® designs.

With the ETX®-DC, your investments in ETX® designs can be sustained for years. Due to latest technology, your products become more valuable.

With full support for 18 bit and 24 bit LVDS panels, the ETX®-DC is a full successor for ETX®-PM or ETX®-PM3

ETX® modules are like components, plugged into an application-specific carrier board. They have highly standardized interfaces and ease scalability and interchangeability. Rapid development and short time-to-market are your benefits.

2.2 ETX® Documentation

This product manual serves as one of three principal references for an ETX® design. It documents the specifications and features of ETX®-DC. The other two references, which are available from the Kontron Embedded Modules GmbH Web site, include:

- » The ETX® Component SBC™ Specification defines the ETX® module form factor, pinout, and signals. You should read this first.
- » The ETX® Component SBC™ Design Guide serves as a general guide for baseboard design, with a focus on maximum flexibility to accommodate a range of ETX® modules.

Note: Some of the information contained within this product manual applies only to certain product revisions (Prev: xxx). If certain information applies to specific product revisions (Prev: xxx) it will be stated. Please check the product revision of your module to see if this information is applicable.

2.3 ETX® Benefits

Embedded technology extended (ETX®) modules are very compact (~100mm square, 12mm thick), highly integrated computers. All ETX® modules feature a standardized form factor and a standardized connector layout that carry a specified set of signals. This standardization allows designers to create a single-system baseboard that can accept present and future ETX® modules.

ETX® modules include common personal computer (PC) peripheral functions such as:

- » Graphics
- » Parallel, Serial, and USB ports
- » Keyboard/mouse
- » Ethernet
- » Sound
- » IDE

The baseboard designer can optimize exactly how each of these functions implements physically. Designers can place connectors precisely where needed for the application on a baseboard designed to optimally fit a system's packaging.

Peripheral PCI or ISA buses can be implemented directly on the baseboard rather than on mechanically unwieldy expansion cards. The ability to build a system on a single baseboard using the computer as one plug-in component simplifies packaging, eliminates cabling, and significantly reduces system-level cost.

A single baseboard design can use a range of ETX® modules. This flexibility can differentiate products at various price/performance points, or to design future proof systems that have a built-in upgrade path. The modularity of an ETX® solution also ensures against obsolescence as computer technology evolves. A properly designed ETX® baseboard can work with several successive generations of ETX® modules.

An ETX® baseboard design has many advantages of a custom, computer-board design but delivers better obsolescence protection, greatly reduced engineering effort, and faster time to market.

3 Specifications

3.1 Functional Specifications

Processor: Intel® ATOM™ N270

- » Cache: 512MB L2
- » Clock Frequency: 1.6 GHz

Northbridge: Intel® 945GSE

- » Memory: One DDR2 533 SODIMM up to 2048 MB
- » Integrated Graphic: Intel® GMA950 with dual independent display support

Southbridge: Intel® ICH7M

- » SATA: 2 Channels Serial ATA to extra connectors
- » IDE: 1 Channel UDMA-100
- » PCI-Bus: 32-bit/33Mhz
- » USB: 4 Channels Universal Serial Bus (USB 2.0; UHCI/EHCI)

10/100MB Ethernet: Phy Intel® 82562V

- » Fully compatible with IEEE 802.3

Onboard video graphics array (VGA): Intel® GMA950:

- » Intel® Gen 3.5 Graphics engine
- » Dynamic Video Memory Technology (DVMT 3.0)
- » Cathode ray tube (CRT) up to QXGA
- » low voltage differential signaling (LVDS) liquid-crystal display (LCD) in 18bit only with option to support VESA 24 bit mapping
- » interfaces up to UXGA
- » SDVO
- » Supports DX 9.0c

AC '97 (Audio): Intel 945GSE;

- » Up to 20 bit sample resolution
- » Multiple sample rates up to 48bit
- » Independent bus master logic for dual Microphone Input, dual PCM audio input, PCM audio input, modem input, modem output and S/PDIF output.

Trustes Platform Module (TPM)

- » Can be equipped optionally

Super I/O: WINBOND W83627DHG-P LPC Super I/O

- » Serial Ports (COM1 and COM2)
- » Infrared Device Association (IrDA) 1.0 SIR interface
- » Parallel Port (LPT1)
- » Enhanced Parallel Port (EPP) and Extended Capabilities Port (ECP) with bi-directional capability
- » Floppy (optional): shared with LPT signals

BIOS: AMI, 1 MB Flash BIOS

- » BIOS support for external super I/O (COM3, COM4, LPT, and Floppy)

Watchdog timer (WDT)

Real-time clock with CMOS RAM

Standard ACPI Support


3.2 Available Modules ETX®-DC 18bit

Product No	Productdescription	Supported LVDS displays
18039-0000-16-2	ETX-DC Standard	18bit and 24 bit oLDI (18 bit + dithering)
18039-0000-16-2EXT	ETX-DC extended Temperature E1	18bit and 24 bit oLDI (18 bit + dithering)

3.3 Available Modules ETX®-DC 24bit

Product No	Productdescription	Supported LVDS displays
18039-0000-16-4	ETX-DC with 24 bit VESA mapping	24 bit VESA only (18 bit + dithering)
18039-0000-16-4EXT	ETX-DC with 24 bit VESA mapping extended Temperature E1	24 bit VESA only (18 bit + dithering)

3.4 Block Diagram

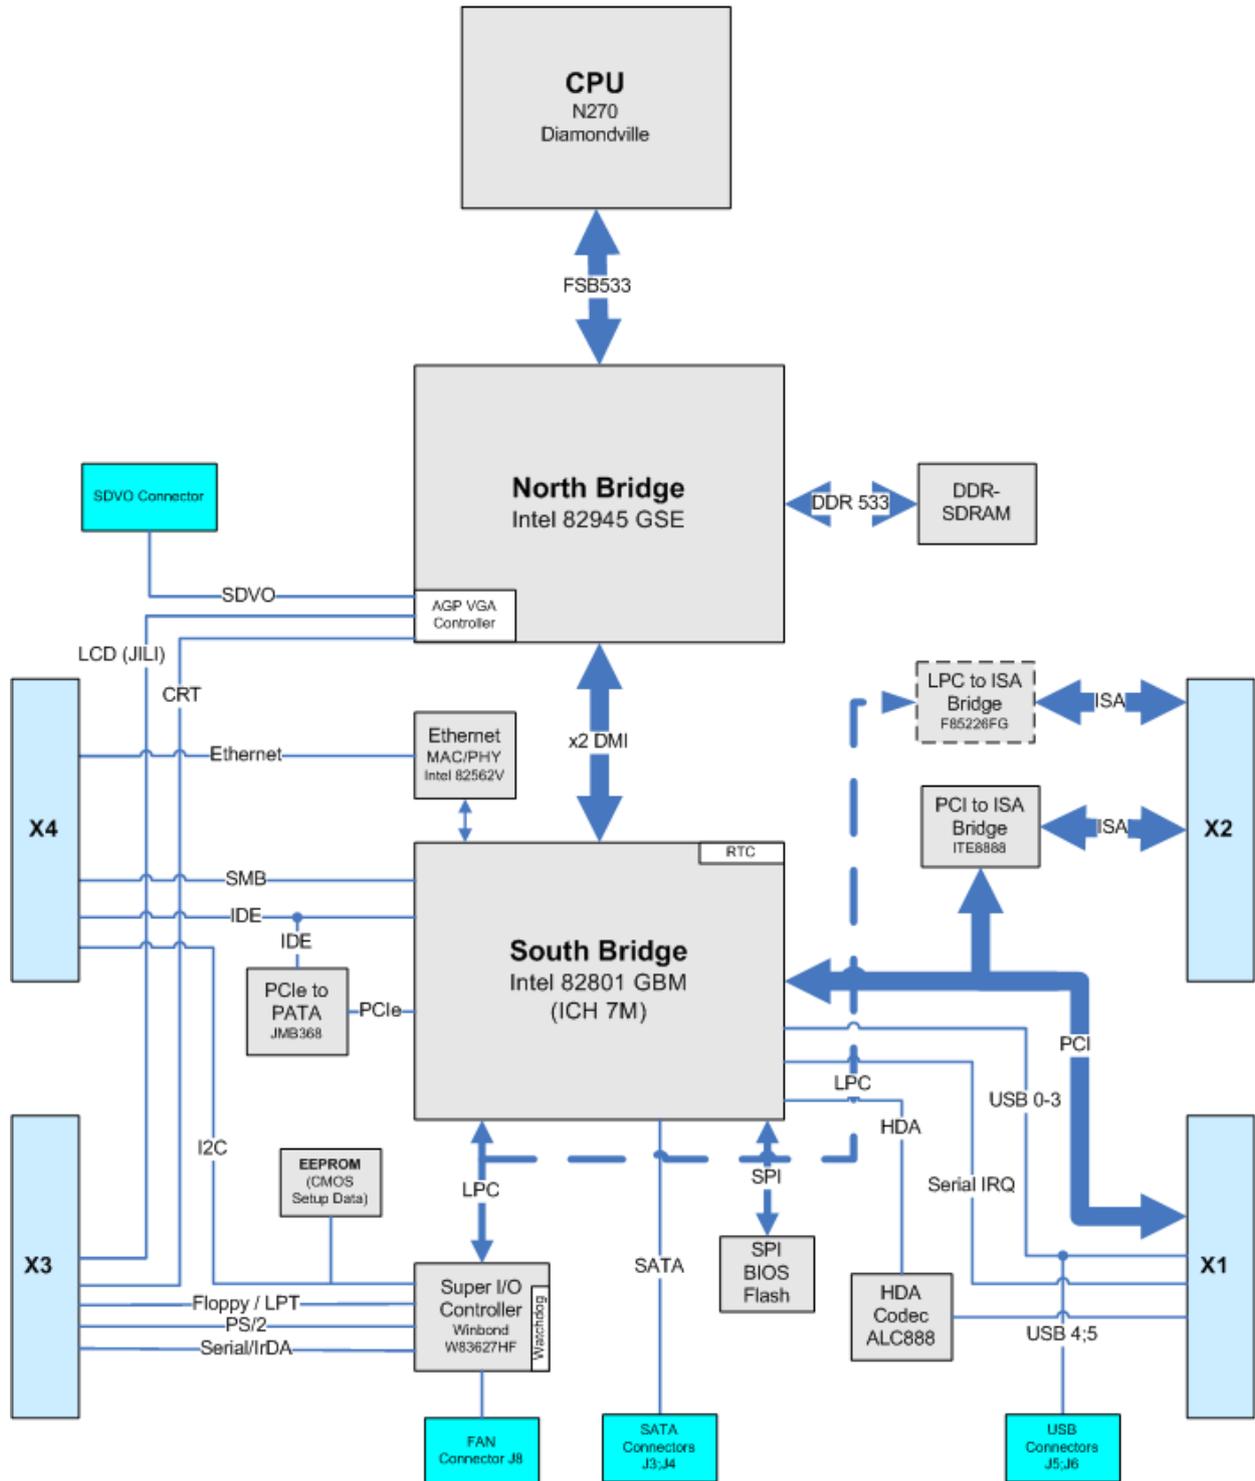

3.5 Mechanical Specifications

Dimensions

- » 95.0 mm x 114.0 mm (3.75" x 4.5")
- » Height approx. 12 mm (0.4")

3.6 Electrical Specifications

Supply Voltage

- » VCC: 5V DC +/- 5%
- » 5V_Stb: 5V DC +/- 5% but always equal or lower VCC

Note: It is recommended to follow the ATX specification for voltage rise times which claims: "The output voltage shall rise from $\leq 10\%$ of nominal to within the regulation ranges ... within 0.1ms to 20ms".

Supply Voltage Ripple

- » Maximum 100 mV peak to peak 0 – 20 MHz

Supply Current 5 V_SB

- » Typical 50 mA, peak up to 350 mA (S3)

Power Consumption

Detailed Power Consumption measurements in all states and benchmarks for CPU, Graphics and Memory performance are available in Application Note KEMAP054 at [EMD Customer Section](#)

3.7 Environmental Specifications

Temperature

Operating: (with Kontron Embedded Modules GmbH heat-spreader plate assembly):

- » Ambient temperature: 0 to +60 °C
- » Maximum heatspreader-plate temperature: 0 to +60 °C (*)
- » Non-operating: -30 to +85 °C

Note: *The maximum operating temperature with the heatspreader plate is the maximum measurable temperature on any spot on the heatspreader's surface. You must maintain the temperature according to the above specification.

Operating (without Kontron Embedded Modules GmbH heat-spreader plate assembly):

- » Maximum operating temperature: 0 to +60 °C (**)
- » Non operating: -30 to +85 °C

Note: **The maximum operating temperature is the maximum measurable temperature on any spot on a module's surface. You must maintain the temperature according to the above specification.

Humidity

- » Operating: 10% to 90% (non condensing)
- » Non operating: 5% to 95% (non condensing)

3.8 MTBF

The following MTBF (Mean Time Between Failure) values were calculated using a combination of manufacturer's test data, if the data was available, and a Bellcore calculation for the remaining parts.

The Bellcore calculation used is "Method 1 Case 1". In that particular method the components are assumed to be operating at a 50 % stress level in a 40° C ambient environment and the system is assumed to have not been burned in. Manufacturer's data has been used wherever possible. The manufacturer's data, when used, is specified at 50° C, so in that sense the following results are slightly conservative. The MTBF values shown below are for a 40° C in an office or telecommunications environment. Higher temperatures and other environmental stresses (extreme altitude, vibration, salt water exposure, etc.) lower MTBF values.


System MTBF (hours): 176102 @ 40°C

Notes: Fans usually shipped with Kontron Embedded Modules GmbH products have 50,000-hour typical operating life. The above estimates assume no fan, but a passive heat sinking arrangement Estimated RTC battery life (as opposed to battery failures) is not accounted for in the above figures and need to be considered for separately. Battery life depends on both temperature and operating conditions. When the Kontron unit has external power; the only battery drain is from leakage paths.


4 ETX® Connectors

The pinouts for ETX® Interface Connectors X1, X2, X3, and X4 are documented for convenient reference. Please see the ETX® Specification and ETX® Design Guide for detailed, design-level information.

4.1 Connector Locations

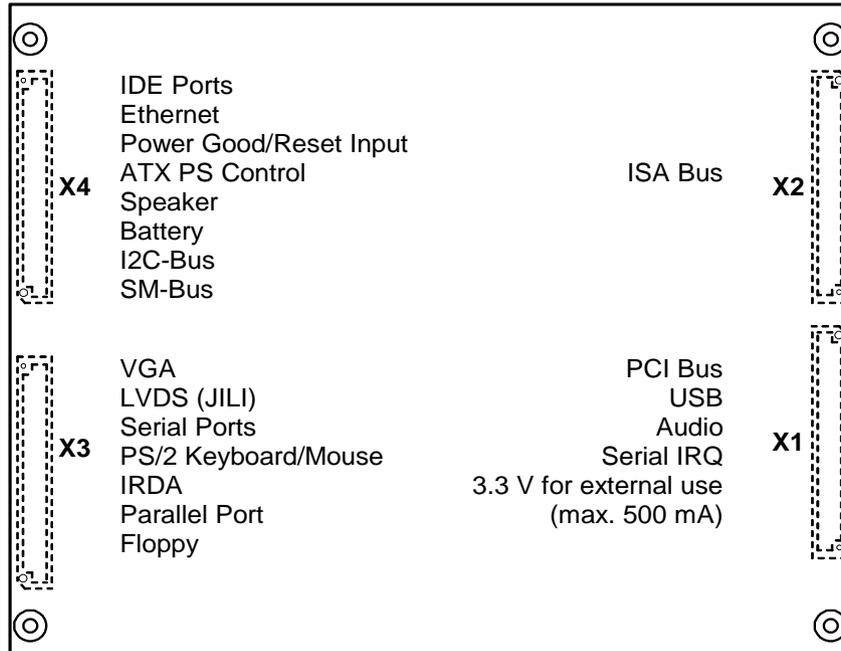

top view
(connectors only)



side view
(connectors only)

4.2 General Signal Description

Term	Description
I0-3,3	Bi-directional 3,3 V IO-Signal
I0-5	Bi-directional 5 V IO-Signal
I-3,3	3,3 V Input
I-5	5 V Input
O-3,3	3,3 V Output
O-5	5 V Output
PU	Pull-Up Resistor
PD	Pull-Down Resistor
PWR	Power Connection
Nc	Not Connected / Reserved

4.3 Connector X1 (PCI bus, USB, Audio)

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	GND	2	GND	51	VCC *	52	VCC *
3	PCICLK3	4	PCICLK4	53	PAR	54	SERR#
5	GND	6	GND	55	GPERR#	56	RESERVED
7	PCICLK1	8	PCICLK2	57	PME#	58	USB2#
9	REQ3#	10	GNT3#	59	LOCK#	60	DEVSEL#
11	GNT2#	12	3V	61	TRDY#	62	USB3#
13	REQ2#	14	GNT1#	63	IRDY#	64	STOP#
15	REQ1#	16	3V	65	FRAME#	66	USB2
17	GNT0#	18	RESERVED	67	GND	68	GND
19	VCC *	20	VCC *	69	AD16	70	CBE2#
21	SERIRQ	22	REQ0#	71	AD17	72	USB3
23	AD0	24	3V	73	AD19	74	AD18
25	AD1	26	AD2	75	AD20	76	USB0#
27	AD4	28	AD3	77	AD22	78	AD21
29	AD6	30	AD5	79	AD23	80	USB1#
31	CBE0#	32	AD7	81	AD24	82	CBE3#
33	AD8	34	AD9	83	VCC *	84	VCC *
35	GND	36	GND	85	AD25	86	AD26
37	AD10	38	AUXAL	87	AD28	88	USB0
39	AD11	40	MIC	89	AD27	90	AD29
41	AD12	42	AUXAR	91	AD30	92	USB1
43	AD13	44	ASVCC	93	PCIRST#	94	AD31
45	AD14	46	SNDL	95	INTC#	96	INTD#
47	AD15	48	ASGND	97	INTA#	98	INTB#
49	CBE1#	50	SNDR	99	GND	100	GND

Notes: * To protect external power lines of peripheral devices, make sure that:

- the wires have the right diameter to withstand the maximum available current
- the enclosure of the peripheral device fulfils the fire-protection requirements of IEC/EN60950

4.3.1 Connector X1 Signal Levels

Pin 1-50 [Power | PCI | USB | AUDIO]

Pin	Signal	Description	Type	Termination	Comment
1	GND	Ground	PWR	-	-
2	GND	Ground	PWR	-	-
3	PCICLK3	PCI Clock Slot 3	0-3,3	-	-
4	PCICLK4	PCI Clock Slot 4	0-3,3	-	-
5	GND	Ground	PWR	-	-
6	GND	Ground	PWR	-	-
7	PCICLK1	PCI Clock Slot 1	0-3,3	-	-
8	PCICLK2	PCI Clock Slot 2	0-3,3	-	-
9	REQ3#	PCI Bus Request 3	I-3,3	PU 8k2 3.3V	8k2 Ohm Resistors
10	GNT3#	PCI Bus Grant 3	0-3,3	-	-
11	GNT2#	PCI Bus Grant 2	0-3,3	-	-
12	3V	Power +3,3V	PWR	-	-
13	REQ2#	PCI Bus Request 2	I-3,3	PU 8k2 3.3V	8k2 Ohm Resistors
14	GNT1#	PCI Bus Grant 1	0-3,3	-	-
15	REQ1#	PCI Bus Request 1	I-3,3	PU 8k2 3.3V	8k2 Ohm Resistors
16	3V	Power +3,3V	PWR	-	-
17	GNT0#	PCI Bus Grant 0	0-3,3	-	-
18	nc	-	nc	-	Reserved
19	VCC	Power +5V	PWR	-	-
20	VCC	Power +5V	PWR	-	-
21	SERIRQ	Serial Interrupt Request	IO-3,3	PU 8k2	12mA Source sink
22	REQ0#	PCI Bus Request 0	I-3,3	PU 8k2 3.3V	8k2 Ohm Resistors
23	AD0	PCI Adress & Data Bus line	IO-3,3	-	-
24	3V	Power +3,3V	PWR	-	-
25	AD1	PCI Adress & Data Bus line	IO-3,3	-	-
26	AD2	PCI Adress & Data Bus line	IO-3,3	-	-
27	AD4	PCI Adress & Data Bus line	IO-3,3	-	-
28	AD3	PCI Adress & Data Bus line	IO-3,3	-	-
29	AD6	PCI Adress & Data Bus line	IO-3,3	-	-
30	AD5	PCI Adress & Data Bus line	IO-3,3	-	-
31	CBE0#	PCI Bus Command and Byte enables 0	IO-3,3	-	-
32	AD7	PCI Adress & Data Bus line	IO-3,3	-	-
33	AD8	PCI Adress & Data Bus line	IO-3,3	-	-
34	AD9	PCI Adress & Data Bus line	IO-3,3	-	-
35	GND	Ground	PWR	-	-
36	GND	Ground	PWR	-	-
37	AD10	PCI Adress & Data Bus line	IO-3,3	-	-
38	AUXAL	Auxiliary Line Input Left	I	PD 4k7 ASGND	1:2 bleeder
39	AD11	PCI Adress & Data Bus line	IO-3,3	-	-
40	MIC	Microphone Input	I	-	-
41	AD12	PCI Adress & Data Bus line	IO-3,3	-	-
42	AUXAR	Auxiliary Line Input Right	I	PD 4k7 ASGND	1:2 bleeder
43	AD13	PCI Adress & Data Bus line	IO-3,3	-	-
44	ASVCC	Analog Supply of Sound Controller	0-5	-	-
45	AD14	PCI Adress & Data Bus line	IO-3,3	-	-
46	SNDL	Audio Out Left	O	-	-
47	AD15	PCI Adress & Data Bus line	IO-3,3	-	-
48	ASGND	Analog Ground of Sound Controller	P	-	-
49	CBE1#	PCI Bus Command and Byte enables 1	IO-3,3	-	-
50	SNDR	Audio Out Right	O	-	-

Note: The termination resistors in this table are already mounted on the ETX®board. Please refer to the design guide for information about additional termination resistors.

Pin 51–100: [Power | PCI | USB | AUDIO]

Pin	Signal	Description	Type	Termination	Comment
51	VCC	Power +5V	PWR	-	-
52	VCC	Power +5V	PWR	-	-
53	PAR	PCI Bus Parity	IO-3,3	-	-
54	SERR#	PCI Bus System Error	IO-3,3	PU 8k2 3,3V	-
55	GPERR#	PCI Bus Grant Error	IO-3,3	PU 8k2 3,3V	-
56	nc	-	nc	-	Reserved
57	PME#	PCI Power Management Event	IO-3,3	-	int. PU 10k 3,3V
58	USB2#	USB Data- , Port2	IO-3,3	-	int. PD 15k in ICH7
59	LOCK#	PCI Bus Lock	IO-3,3	PU 8k2 3,3V	-
60	DEVSEL#	PCI Bus Device Select	IO-3,3	PU 8k2 3,3V	-
61	TRDY#	PCI Bus Target Ready	IO-3,3	PU 8k2 3,3V	-
62	USB3#	USB Data- , Port3	IO-3,3	-	int. PD 15k in ICH7
63	IRDY#	PCI Bus Initiator Ready	IO-3,3	PU 8k2 3,3V	-
64	STOP#	PCI Bus Stop	IO-3,3	PU 8k2 3,3V	-
65	FRAME#	PCI Bus Cycle Frame	IO-3,3	PU 8k2 3,3V	-
66	USB2	USB Data+ , Port2	IO-3,3	-	int. PD 15k in ICH7
67	GND	Ground	PWR	-	-
68	GND	Ground	PWR	-	-
69	AD16	PCI Adress & Data Bus line	IO-3,3	-	-
70	CBE2#	PCI Bus Command and Byte enables 2	IO-3,3	-	-
71	AD17	PCI Adress & Data Bus line	IO-3,3	-	-
72	USB3	USB Data+ , Port3	IO-3,3	-	int. PD 15k in ICH7
73	AD19	PCI Adress & Data Bus line	IO-3,3	-	-
74	AD18	PCI Adress & Data Bus line	IO-3,3	-	-
75	AD20	PCI Adress & Data Bus line	IO-3,3	-	-
76	USB0#	USB Data- , Port0	IO-3,3	-	int. PD 15k in ICH7
77	AD22	PCI Adress & Data Bus line	IO-3,3	-	-
78	AD21	PCI Adress & Data Bus line	IO-3,3	-	-
79	AD23	PCI Adress & Data Bus line	IO-3,3	-	-
80	USB1#	USB Data- , Port1	IO-3,3	-	int. PD 15k in ICH7
81	AD24	PCI Adress & Data Bus line	IO-3,3	-	-
82	CBE3#	PCI Command and Byte enables 3	IO-3,3	-	-
83	VCC	Power +5V	PWR	-	-
84	VCC	Power +5V	PWR	-	-
85	AD25	PCI Adress & Data Bus line	IO-3,3	-	-
86	AD26	PCI Adress & Data Bus line	IO-3,3	-	-
87	AD28	PCI Adress & Data Bus line	IO-3,3	-	-
88	USB0	USB Data+ , Port0	IO-3,3	-	int. PD 15k in ICH7
89	AD27	PCI Adress & Data Bus line	IO-3,3	-	-
90	AD29	PCI Adress & Data Bus line	IO-3,3	-	-
91	AD30	PCI Adress & Data Bus line	IO-3,3	-	-
92	USB1	USB Data+ , Port1	IO-3,3	-	int. PD 15k in ICH7
93	PCIRST#	PCI Bus Reset	O-3,3	-	PD 100k
94	AD31	PCI Adress & Data Bus line	IO-3,3	-	-
95	INTC#	PCI BUS Interrupt Request C	I-3,3	PU 8k2 3,3V	-
96	INTD#	PCI BUS Interrupt Request D	I-3,3	PU 8k2 3,3V	-
97	INTA#	PCI BUS Interrupt Request A	I-3,3	PU 8k2 3,3V	-
98	INTB#	PCI BUS Interrupt Request B	I-3,3	PU 8k2 3,3V	-
99	GND	Ground	PWR	-	-
100	GND	Ground	PWR	-	-

Note: The termination resistors in this table are already mounted on the ETX® board. Please refer to the design guide for information about additional termination resistors.

4.3.2 Connector X1 Signal Description

PCI Bus

The implementation of this subsystem complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information. The PCI bus with its signals: AD[31:0], C/BE[3:0]#, DEVSEL#, FRAME#, IRDY#, PAR, GPERR#, REQ[3:0]#, SERR#, STOP#, TRDY#, INT[D:A]# is 5V tolerant.

USB

Three USB host controllers (two 1.1 UHCI and one EHCI high-speed 2.0 controller) are on the Intel® 82801GB south bridge device. The USB controllers comply with both versions 1.1 and 2.0 of the USB standard and are backward compatible. The three controllers implement a root hub, which have two USB ports each.

Configuration

The USB controllers are PCI bus devices. The BIOS allocates required system resources during configuration of the PCI bus.

Audio

The ETX®-DC PCI audio controller is integrated in the Intel® 82801GB southbridge. The audio codec is compatible with AC97.

Configuration

The audio controller is a PCI bus device. The BIOS allocates required system resources during configuration of the PCI device.

Serial IRQ

The serial IRQ pin offers a standardized interface to link interrupt request lines to a single wire.

Configuration

The serial IRQ machine is in “Continuous Mode” per default and can be changed in the BIOS setup, the frame size is 21 frames and the start frame pulse width is 4 clocks.

3.3V Power Supply for External Components

The ETX®-DC offers the ability to connect external 3.3V devices to the onboard-generated supply voltage. Pin 12 and Pin 16 of Connector X1 are used to connect to the +3.3V $\pm 5\%$ power supply. The maximum external load is 500mA. Contact Kontron Embedded Systems Technical Support for help with this feature.

Warning: Do not connect 3.3 V pins to external 3.3 V supply.

For additional information, refer to the ETX® Design Guide, I2C application notes, and JIDA specifications, all of which are available on the Kontron Embedded Systems Web site.

4.4 Connector X2 (ISA Bus)

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	GND	2	GND	51	VCC *	52	VCC *
3	SD14	4	SD15	53	SA6	54	IRQ5
5	SD13	6	MASTER#	55	SA7	56	IRQ6
7	SD12	8	DREQ7	57	SA8	58	IRQ7
9	SD11	10	DACK7#	59	SA9	60	SYSCLK
11	SD10	12	DREQ6	61	SA10	62	REFSH#
13	SD9	14	DACK6#	63	SA11	64	DREQ1
15	SD8	16	DREQ5	65	SA12	66	DACK1#
17	MEMW#	18	DACK5#	67	GND	68	GND
19	MEMR#	20	DREQ0	69	SA13	70	DREQ3
21	LA17	22	DACK0#	71	SA14	72	DACK3#
23	LA18	24	IRQ14	73	SA15	74	IOR#
25	LA19	26	IRQ15	75	SA16	76	IOW#
27	LA20	28	IRQ12	77	SA18	78	SA17
29	LA21	30	IRQ11	79	SA19	80	SMEMR#
31	LA22	32	IRQ10	81	IOCHRDY	82	AEN
33	LA23	34	IO16#	83	VCC *	84	VCC *
35	GND	36	GND	85	SD0	86	SMEMW#
37	SBHE#	38	M16#	87	SD2	88	SD1
39	SA0	40	OSC	89	SD3	90	NOWS#
41	SA1	42	BALE	91	DREQ2	92	SD4
43	SA2	44	TC	93	SD5	94	IRQ9**
45	SA3	46	DACK2#	95	SD6	96	SD7
47	SA4	48	IRQ3	97	IOCHK#	98	RSTDRV
49	SA5	50	IRQ4	99	GND	100	GND

Notes: *To protect external power lines of peripheral devices, make sure that:

- The wires have the right diameter to withstand the maximum available current.
- The enclosure of the peripheral device fulfils the fire-protection requirements of IEC/EN60950

** IRQ9 is used for SCI in ACPI mode. Do not use for legacy ISA devices.

4.4.1 Connector X2 Signal Levels

Pin 1–50: [Power | ISA]

Pin	Signal	Description	Type	Termination	Comment
1	GND	Ground	PWR	-	-
2	GND	Ground	PWR	-	-
3	SD14	ISA Data Bus	IO-5	PU 8k2 5V	-
4	SD15	ISA Data Bus	IO-5	PU 8k2 5V	-
5	SD13	ISA Data Bus	IO-5	PU 8k2 5V	-
6	MASTER#	ISA 16-Bit Master	I-5	PU 330R 5V	-
7	SD12	ISA Data Bus	IO-5	PU 8k2 5V	-
8	DREQ7	ISA DMA Request 7	I-5	PU 8k2 5V	-
9	SD11	ISA Data Bus	IO-5	PU 8k2 5V	-
10	DACK7#	ISA DMA Acknowledge 7	IO-5	-	24mA source cap.
11	SD10	ISA Data Bus	IO-5	PU 8k2 5V	-
12	DREQ6	ISA DMA Request 6	I-5	PU 8k2 5V	-
13	SD9	ISA Data Bus	IO-5	PU 8k2 5V	-
14	DACK6#	ISA DMA Acknowledge 6	IO-5	-	24mA source cap.
15	SD8	ISA Data Bus	IO-5	PU 8k2 5V	-
16	DREQ5	ISA DMA Request 5	I-5	PU 8k2 5V	-
17	MEMW#	ISA Memory Write	IO-5	PU 8k2 5V	-
18	DACK5#	ISA DMA Acknowledge 5	IO-5	-	24mA source cap.
19	MEMR#	ISA Memory Read	IO-5	PU 8k2 5V	-
20	DREQ0	ISA DMA Request 0	I-5	PU 8k2 5V	-
21	LA17	ISA Address Bus (SA17)	O-5	-	-
22	DACK0#	ISA DMA Acknowledge 0	IO-5	-	24mA source cap.
23	LA18	ISA Address Bus (SA18)	O-5	-	-
24	IRQ14	ISA Interrupt Request 14 / ROM Chip Select	IO-5	PU 8k2 5V	-
25	LA19	ISA Address Bus (SA19)	O-5	-	-
26	IRQ15	ISA Interrupt Request 15	I-5	PU 8k2 5V	-
27	LA20	ISA Latchable Address Bus	O-5	-	-
28	IRQ12	ISA Interrupt Request 12	I-5	PU 8k2 5V	-
29	LA21	ISA Latchable Address Bus	O-5	-	-
30	IRQ11	ISA Interrupt Request 11	I-5	PU 8k2 5V	-
31	LA22	ISA Latchable Address Bus	O-5	-	-
32	IRQ10	ISA Interrupt Request 10	I-5	PU 8k2 5V	-
33	LA23	ISA Latchable Address Bus	O-5	-	-
34	IO16#	ISA 16-Bit I/O Access	I-5	PU 330R 5V	-
35	GND	Ground	PWR	-	-
36	GND	Ground	PWR	-	-
37	SBHE#	ISA System Byte High Enable	IO-5	-	PU 8k2
38	M16#	ISA 16-Bit Memory Access	IO-5	PU 330R 5V	-
39	SA0	ISA Address Bus	O-5	PU 8k2 5V	-
40	OSC	ISA Oscillator (CLK_ISA14#)	O-3,3	-	-
41	SA1	ISA Address Bus	O-5	PU 8k2 5V	-
42	BALE	ISA Buffer Address Latch Enable	IO-5	-	PD 4k7 (Strap)
43	SA2	ISA Address Bus	O-5	PU 8k2 5V	-
44	TC	ISA Terminal Count	IO-5	-	PD 4k7 (Strap)
45	SA3	ISA Address Bus	O-5	PU 8k2 5V	-
46	DACK2#	ISA DMA Acknowledge 2	IO-5	-	-
47	SA4	ISA Address Bus	O-5	PU 8k2 5V	-
48	IRQ3	ISA Interrupt Request 3	I-5	PU 8k2 5V	-
49	SA5	ISA Address Bus	O-5	PU 8k2 5V	-
50	IRQ4	ISA Interrupt Request 4	I-5	PU 8k2 5V	-

Note: The termination resistors in this table are already mounted on the ETX® board. Please refer to the design guide for information about additional termination resistors.

Pin 51-100: [Power | ISA]

Pin	Signal	Description	Type	Termination	Comment
51	VCC	Power +5V	PWR	-	-
52	VCC	Power +5V	PWR	-	-
53	SA6	ISA Address Bus	0-3,3	PU 8k2 5V	-
54	IRQ5	ISA Interrupt Request 5	I-3,3	PU 8k2 5V	-
55	SA7	ISA Address Bus	0-3,3	PU 8k2 5V	-
56	IRQ6	ISA Interrupt Request 6	I-3,3	PU 8k2 5V	-
57	SA8	ISA Address Bus	0-3,3	PU 8k2 5V	-
58	IRQ7	ISA Interrupt Request 7	I-3,3	PU 8k2 5V	-
59	SA9	ISA Address Bus	0-3,3	PU 8k2 5V	-
60	SYSCLK	ISA Bus Clock (CLK_SYS_ISA)	0-3,3	-	-
61	SA10	ISA Address Bus	0-3,3	PU 8k2 5V	-
62	REFSH#	ISA System Refresh Control	IO-3,3	PU 1k 5V	-
63	SA11	ISA Address Bus	0-3,3	PU 8k2 5V	-
64	DREQ1	ISA DMA Request 1	I-3,3	PU 8k2 5V	-
65	SA12	ISA Address Bus	0-3,3	PU 8k2 5V	-
66	DACK1#	ISA DMA Acknowledge 1	IO-3,3	-	-
67	GND	Ground	PWR	-	-
68	GND	Ground	PWR	-	-
69	SA13	ISA Address Bus	0-3,3	PU 8k2 5V	-
70	DREQ3	ISA DMA Request 3	I-3,3	PU 8k2 5V	-
71	SA14	ISA Address Bus	0-3,3	PU 8k2 5V	-
72	DACK3#	ISA DMA Acknowledge 3	IO-3,3	-	-
73	SA15	ISA Address Bus	0-3,3	PU 8k2 5V	-
74	IOR#	ISA I/O Read	IO-3,3	PU 8k2 5V	-
75	SA16	ISA Address Bus	0-3,3	PU 8k2 5V	-
76	IOW#	ISA I/O Write	IO-3,3	PU 8k2 5V	-
77	SA18	ISA Address Bus	0-3,3	PU 8k2 5V	-
78	SA17	ISA Address Bus	0-3,3	PU 8k2 5V	-
79	SA19	ISA Address Bus	0-3,3	PU 8k2 5V	-
80	SMEMR#	ISA System Memory Read	IO-3,3	PU 8k2 5V	-
81	IOCHRDY	ISA I/O Channel Ready	IO-3,3	PU 1k 5V	-
82	AEN	ISA Address Enable	IO-3,3	-	-
83	VCC	Power +5V	PWR	-	-
84	VCC	Power +5V	PWR	-	-
85	SD0	ISA Data Bus	IO-3,3	PU 8k2 5V	-
86	SMEMW#	ISA System Memory Write	IO-3,3	PU 8k2 5V	-
87	SD2	ISA Data Bus	IO-3,3	PU 8k2 5V	-
88	SD1	ISA Data Bus	IO-3,3	PU 8k2 5V	-
89	SD3	ISA Data Bus	IO-3,3	PU 8k2 5V	-
90	NOWS#	ISA No Wait Staits	I-3,3	PU 330R 5V	-
91	DREQ2	ISA DMA Request 2	I-3,3	PU 8k2 5V	-
92	SD4	ISA Data Bus	IO-3,3	PU 8k2 5V	-
93	SD5	ISA Data Bus	IO-3,3	PU 8k2 5V	-
94	IRQ9	ISA Interrupt Request 9	I-3,3	PU 8k2 5V	-
95	SD6	ISA Data Bus	IO-3,3	PU 8k2 5V	-
96	SD7	ISA Data Bus	IO-3,3	PU 8k2 5V	-
97	IOCHK#	ISA I/O Channel Check	I-3,3	PU 8k2 5V	-
98	RSTDRV	ISA Reset	0-3,3	-	-
99	GND	Ground	PWR	-	-
100	GND	Ground	PWR	-	-

Note: The termination resistors in this table are already mounted on the ETX® board. Please refer to the design guide for information about additional termination resistors.

4.4.2 Connector X2 Signal Description

ISA Bus Slot

The implementation of this subsystem complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

Restrictions:

DMA Transfer: According to the used PCI 2 ISA solution DMA Transfer is not possible.

4.5 Connector X3 (VGA, LCD, Video, COM1 and COM2, LPT/Floppy, Mouse, Keyboard)

4.5.1 Alternative pinning

Flat-Panel Interfaces

ETX®-DC modules can implement an LVDS flat-panel interface called JUMPtec Intelligent LVDS Interface (JILI). These modules do not implement a parallel digital flat-panel interface called JUMPtec Intelligent Digital Interface (JIDI).

LVDS Interface Pinout (JILI)			
Pin	Signal	Pin	Signal
1	GND	2	GND
3	R	4	B
5	HSY	6	G
7	VSY	8	DDCK
9	DETECT#**	10	DDDA
11	LCDD016	12	LCDD018
13	LCDD017	14	LCDD019
15	GND	16	GND
17	LCDD013	18	LCDD015
19	LCDD012	20	LCDD014
21	GND	22	GND
23	LCDD08	24	LCDD011
25	LCDD09	26	LCDD010
27	GND	28	GND
29	LCDD04	30	LCDD07
31	LCDD05	32	LCDD06
33	GND	34	GND
35	LCDD01	36	LCDD03
37	LCDD00	38	LCDD02
39	VCC *	40	VCC *
41	JILI_DAT	42	LTGI00**
43	JILI_CLK	44	BLON#
45	BIASON**	46	DIGON
47	COMP**	48	Y**
49	SYNC**	50	C**

Notes: *To protect external power lines of peripheral devices, make sure that:

- the wires have the right diameter to withstand the maximum available current
- the enclosure of the peripheral device fulfils the fire-protection requirements of IEC/EN60950.

**This signal is not supported on the ETX®-DC.

Parallel Port / Floppy Interfaces

You can configure ETX®-DC's parallel port interfaces as conventional PC parallel ports or as an interface for a floppy-disk drive. You can select the operating mode in the BIOS settings and by a hardware mode-select pin.

If Pin X3-51 (LPT/FLPY#) is grounded at boot time, the floppy support mode is selected. If the pin is left floating or is held high, parallel-port mode is selected. The mode selection is determined at boot time. It cannot be changed until the next boot cycle.

Parallel Port Mode Pinout				Floppy Support Mode Pinout			
Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
51	LPT/FLPY#	52	RESERVED	51	LPT/FLPY#	52	RESERVED
53	VCC *	54	GND	53	VCC *	54	GND
55	STB#	56	AFD#	55	RESERVED	56	DENSEL
57	RESERVED	58	PD7	57	RESERVED	58	RESERVED
59	IRRX	60	ERR#	59	IRRX	60	HDSEL#
61	IRTX	62	PD6	61	IRTX	62	RESERVED
63	RXD2	64	INIT#	63	RXD2	64	DIR#
65	GND	66	GND	65	GND	66	GND
67	RTS2#	68	PD5	67	RTS2#	68	RESERVED
69	DTR2#	70	SLIN#	69	DTR2#	70	STEP#
71	DCD2#	72	PD4	71	DCD2#	72	DSKCHG#
73	DSR2#	74	PD3	73	DSR2#	74	RDATA#
75	CTS2#	76	PD2	75	CTS2#	76	WP#
77	TXD2	78	PD1	77	TXD2	78	TRK0#
79	RI2#	80	PD0	79	RI2#	80	INDEX#
81	VCC *	82	VCC*	81	VCC *	82	VCC *
83	RXD1	84	ACK#	83	RXD1	84	DRV
85	RTS1#	86	BUSY	85	RTS1#	86	MOT
87	DTR1#	88	PE	87	DTR1#	88	WDATA#
89	DCD1#	90	SLCT#	89	DCD1#	90	WGATE#
91	DSR1#	92	MSCLK	91	DSR1#	92	MSCLK
93	CTS1#	94	MSDAT	93	CTS1#	94	MSDAT
95	TXD1	96	KBCLK	95	TXD1	96	KBCLK
97	RI1#	98	KBDAT	97	RI1#	98	KBDAT
99	GND	100	GND	99	GND	100	GND

Notes: *To protect external power lines of peripheral devices, make sure that:

- the wires have the right diameter to withstand the maximum available current
- the enclosure of the peripheral device fulfils the fire-protection requirements of IEC/EN60950

4.5.2 Connector X3 (Signal Levels)

Pin 1–50: [Power | VGA | LCD | TV]

Pin	Signal	Description	Type	Termination	Comment
1	GND	Ground	PWR	-	-
2	GND	Ground	PWR	-	-
3	R	Analog Video Out RGB - Red Channel	0	-	-
4	B	Analog Video Out RGB - Blue Channel	0	-	-
5	HSY	Horizontal Synchronization Pulse	0-3,3	-	-
6	G	Analog Video Out RGB - Green Channel	0	-	-
7	VSX	Vertical Synchronization Pulse	0-3,3	-	-
8	DDCK	Display Data Channel Clock	IO-5	PU 2k2 5V	-
9	DETECT#	Panel Hot-Plug Detection	IO	-	ICHGPIO 10
10	DDDA	Display Data Channel Data	IO-5	PU 2k2 5V	-
11	LCDD016	LVDS Channel Data	0	-	-
12	LCDD018	LVDS Channel Data	0	-	Only available on -4
13	LCDD017	LVDS Channel Data	0	-	-
14	LCDD019	LVDS Channel Data	0	-	Only available on -4
15	GND	Ground	PWR	-	-
16	GND	Ground	PWR	-	-
17	LCDD013	LVDS Channel Data	0	-	-
18	LCDD015	LVDS Channel Data	0	-	-
19	LCDD012	LVDS Channel Data	0	-	-
20	LCDD014	LVDS Channel Data	0	-	-
21	GND	Ground	PWR	-	-
22	GND	Ground	PWR	-	-
23	LCDD008	LVDS Channel Data	0	-	Only available on -4
24	LCDD011	LVDS Channel Data	0	-	-
25	LCDD009	LVDS Channel Data	0	-	Only available on -4
26	LCDD010	LVDS Channel Data	0	-	-
27	GND	Ground	PWR	-	-
28	GND	Ground	PWR	-	-
29	LCDD004	LVDS Channel Data	0	-	-
30	LCDD007	LVDS Channel Data	0	-	-
31	LCDD005	LVDS Channel Data	0	-	-
32	LCDD006	LVDS Channel Data	0	-	-
33	GND	Ground	PWR	-	-
34	GND	Ground	PWR	-	-
35	LCDD001	LVDS Channel Data	0	-	-
36	LCDD003	LVDS Channel Data	0	-	-
37	LCDD000	LVDS Channel Data	0	-	-
38	LCDD002	LVDS Channel Data	0	-	-
39	VCC	Power +5V	PWR	-	-
40	VCC	Power +5V	PWR	-	-
41	JILI_DAT	JILI I2C Data Signal	IO-3,3	PU 2k2 3,3V	-
42	LTGIO0	PWM Brightness control for LCD	0-3,3	-	-
43	JILI_CLK	JILI I2C Clock Signal	IO-3,3	PU 2k2 3,3V	-
44	BLON#	Display Backlight On	0-3,3	-	-
45	BIASON	Display Contrast	IO	-	SIO_GP35
46	DIGON	Display Power On	0-3,3	-	-
47	COMP	Composite Video / SCART Blue	0	-	-
48	Y	S-Video Luminance / SCART Red	0	-	-
49	SYNC	-	nc	-	Not supported
50	C	S-Video Chrominance / SCART Green	0	-	-

Note: The termination resistors in this table are already mounted on the ETX® board. Please refer to the design guide for information about additional termination resistors.

Pin 51–100: [Power | COM | LPT | Floppy | KB/MS/IR]

Pin	Signal	Description	Type	Termination	Comment
51	LPT FLPY#	LPT / Floppy Interface Configuration Input	I-5	PU 10K 3V	H: LPT, L: Floppy
52	nc	-	nc	-	Reserved
53	VCC	Power +5V	PWR	-	-
54	GND	Ground	PWR	-	-
55	STB# nc	LPT Strobe Signal	O-5	-	-
56	AFD# DENSEL	LPT Automatic Feed / Floppy Density Select	O-5	-	-
57	nc	-	nc	-	Reserved
58	PD7 nc	LPT Data Bus D7	IO-5	-	-
59	IRRX	Infrared Receive	I-5	-	-
60	ERR# HDSEL#	LPT Error / Floppy Head Select	IO-5	-	-
61	IRTX	Infrared Transmit	O-5	-	-
62	PD6 nc	LPT Data Bus D6	IO-5	-	-
63	RXD2	Data Receive COM2	I-5	-	-
64	INIT# DIR#	LPT Initiate / Floppy Direction	O-5	-	-
65	GND	Ground	PWR	-	-
66	GND	Ground	PWR	-	-
67	RTS2#	Request to Send COM2	O-5	PU 100k 3,3V	-
68	PD5 nc	LPT Data Bus D5	IO-5	-	-
69	DTR2#	Data Terminal Ready COM2	O-5	PU 100k 3,3V	-
70	SLIN# STEP#	LPT Select / Floppy Motor Step	O-5	-	-
71	DCD2#	Data Carrier Detect COM2	I-5	PU 4k7 5V	-
72	PD4 DSKCHG#	LPT Data Bus D4 / Floppy Disk Change	IO-5	-	-
73	DSR2#	Data Set Ready COM2	I-5	PU 4k7 5V	-
74	PD3 RDATA#	LPT Data Bus D3 / Floppy Raw Data Read	IO-5	-	-
75	CTS2#	Clear to Send COM2	I-5	PU 4k7 5V	-
76	PD2 WP#	LPT Data Bus D2 / Floppy Write Protect Signal	IO-5	-	-
77	TXD2	Data Transmit COM2	O-5	-	-
78	PD1 TRK0#	LPT Data Bus D1 / Floppy Track Signal	IO-5	-	-
79	RI2#	Ring Indicator COM2	I-5	PU 4k7 5V	-
80	PD0 INDEX#	LPT Data Bus D0 / Floppy Index Signal	IO-5	-	-
81	VCC	Power +5V	PWR	-	-
82	VCC	Power +5V	PWR	-	-
83	RXD1	Data Receive COM1	O-5	PU 100k 3,3V	-
84	ACK# DRV	LPT Acknowledge / Floppy Drive Select	IO-5	-	-
85	RTS1#	Request to Send COM1	O-5	PU 1k 3,3V	Bootstrap
86	BUSY# MOT	LPT Busy / Floppy Motor Select	IO-5	-	-
87	DTR1#	Data Terminal Ready COM1	O-5	PU 1k 3,3V	Bootstrap
88	PE WDATA#	LPT Paper Empty / Floppy Raw Write Data	IO-5	-	-
89	DCD1#	Data Carrier Detect COM1	I-5	PU 100k 3,3V	-
90	SLCT# WGATE#	LPT Power On / Floppy Write Enable	IO-5	-	-
91	DSR1#	Data Set Ready COM1	I-5	PU 100k 3,3V	-
92	MSCLK	Mouse Clock	O-5	PU 4k7 3,3V	-
93	CTS1#	Clear to Send COM1	I-5	PU 100k 3,3V	-
94	MSDAT	Mouse Data	IO-5	PU 4k7 3,3V	-
95	TXD1	Data Transmit COM1	O-5	PU 1k 3,3V	Bootstrap
96	KBCLK	Keyboard Clock	O-5	PU 4k7 3,3V	-
97	RI1#	Ring Indicator COM1	I-5	PU 100k 3,3V	-
98	KBDAT	Keyboard Data	IO-5	PU 4k7 3,3V	-
99	GND	Ground	PWR	-	-
100	GND	Ground	PWR	-	-

Note: The termination resistors in this table are already mounted on the ETX® board. Please refer to the design guide for information about additional termination resistors.

4.6 Connector X3 Signal Description

VGA Output

LVDS Flat Panel Interface (JILI)

The user interface for flat panels is the JUMPttec Intelligent LVDS Interface (JILI). The implementation of this subsystem complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

Digital Flat Panel Interface (JIDI)

The ETX®-DC does not support the JUMPttec Intelligent Digital Interface (JIDI).

Serial Ports (1 and 2)

The ETX®-DC supports two serial interfaces (TTL). You can use COM2 for IrDA SIR operation. This feature is implemented in the super I/O device, which is a Winbond 83627HF.

The implementation of the serial interface complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

Configuration:

The serial-communication interface uses I/O and IRQ resources. The resources are allocated by the BIOS during POST configuration and are set to be compatible with common PC/AT settings. Use the BIOS setup to change some parameters that relate to the serial-communication interface.

PS/2 Keyboard

The implementation of the keyboard interface complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

Configuration:

The keyboard uses I/O and IRQ resources. The BIOS allocates the resources during POST configuration. The resources are set to be compatible with common PC/AT settings. Use the BIOS setup to change some keyboard-related parameters.

PS/2 Mouse

The implementation of the mouse interface complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

Configuration:

The mouse uses I/O and IRQ resources. The BIOS allocates the resources during POST configuration. The resources are set to be compatible with common PC/AT settings. You can change some mouse-related parameters from the BIOS setup.

IrDA

The ETX®-DC is capable of IrDA SIR operation. This feature is implemented in the Winbond 83627HF. Contact Kontron Embedded Modules for help with this feature.

Parallel Port

The parallel-communication interface shares signals with the floppy-disk interface. The implementation of this parallel port complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

Configuration:

The parallel-communication interface uses I/O, IRQ, and DMA resources. The resources are allocated by the BIOS during POST configuration and are set to be compatible with common PC/AT settings. You can change some parameters of the parallel-communication interface through the BIOS setup.

Floppy

The floppy-disk interface shares signals with the parallel-communication interface. The floppy interface is limited to one drive (drive_1). A standard floppy cable has two connectors for floppy drives. One connector has a non-twisted cable leading to it, the other has a twisted cable leading to it. When using the floppy interface you must connect the floppy drive to the connector (drive_1) that has the non-twisted cable leading to it.

The implementation of this subsystem complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

Configuration:

The floppy-disk controller uses I/O, IRQ, and direct memory access (DMA) resources. These resources are allocated by BIOS during POST configuration and are compatible with common PC/AT settings. You can change some parameters of the parallel-communication interface through the BIOS setup.

4.7 Connector X4 Subsystems

4.7.1 Connector X4 (IDE 1, IDE 2, Ethernet, Miscellaneous)

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	GND	2	GND	51	SIDE_IOW#	52	PIDE_IOR#
3	5V_SB	4	PWGIN	53	SIDE_DRQ	54	PIDE_IOW#
5	PS_ON	6	SPEAKER	55	SIDE_D15	56	PIDE_DRQ
7	PWRBTN#	8	BATT	57	SIDE_D0	58	PIDE_D15
9	KBINH#	10	LILED#	59	SIDE_D14	60	PIDE_D0
11	RSMRST#	12	ACTLED#	61	SIDE_D1	62	PIDE_D14
13	ROMKBCS#	14	SPEEDLED#	63	SIDE_D13	64	PIDE_D1
15	EXT_PRG	16	I2CLK	65	GND	66	GND
17	VCC*	18	VCC*	67	SIDE_D2	68	PIDE_D13
19	OVCR#	20	GPCS#	69	SIDE_D12	70	PIDE_D2
21	EXTSMI#	22	I2DAT	71	SIDE_D3	72	PIDE_D12
23	SMBCLK	24	SMBDATA	73	SIDE_D11	74	PIDE_D3
25	SIDE_CS3#	26	RESERVED	75	SIDE_D4	76	PIDE_D11
27	SIDE_CS1#	28	DASP_S	77	SIDE_D10	78	PIDE_D4
29	SIDE_A2	30	PIDE_CS3#	79	SIDE_D5	80	PIDE_D10
31	SIDE_A0	32	PIDE_CS1#	81	VCC	82	VCC
33	GND	34	GND	83	SIDE_D9	84	PIDE_D5
35	PDIAG_S	36	PIDE_A2	85	SIDE_D6	86	PIDE_D9
37	SIDE_A1	38	PIDE_A0	87	SIDE_D8	88	PIDE_D6
39	SIDE_INTRQ	40	PIDE_A1	89	GPE2#	90	CBLID_P#
41	RESERVED	42	RESERVED	91	RXD#	92	PIDE_D8
43	SIDE_AK#	44	PIDE_INTRQ	93	RXD	94	SIDE_D7
45	SIDE_RDY	46	PIDE_AK#	95	TXD#	96	PIDE_D7
47	SIDE_IOR#	48	PIDE_RDY	97	TXD	98	HDRST#
49	VCC*	50	VCC*	99	GND	100	GND

Notes: *To protect external power lines of peripheral devices, make sure that:

- the wires have the right diameter to withstand the maximum available current
- the enclosure of the peripheral device fulfils the fire-protection requirements of IEC/EN60950

4.7.2 Connector X4 (Signal Levels)

Pin 1–50: [Power | IDE | Ethernet | Power control | Misc]

Pin	Signal	Description	Type	Termination	Comment
1	GND	Ground	PWR	-	-
2	GND	Ground	PWR	-	-
3	5V_SB	Supply of internal suspend Circuit	PWR	-	5V_SB ≤ VCC
4	PWGIN	Power Good / Reset Input	I	-	-
5	PS_ON	Power Supply On	0-5V	-	-
6	SPEAKER	Speaker Output	0-3,3	-	int. PD 20k (ICH7-M)
7	PWRBTN#	Power Button	I-5V	PU 10k 5V	-
8	BATT	Battery Supply	I	-	3V
9	KBINH	Keyboard Inhibit Control Input	I-5	-	not used
10	LILED	Ethernet Link LED	0-3,3	-	-
11	RSMRST#	Resume Reset	nc	PU 10k 3,3V	Not supported
12	ACTLED	Ethernet Activity LED	0-3,3	-	-
13	ROMKBCS#	-	0	-	PATA LED
14	SPEEDLED	Ethernet Speed LED	0-3,3	-	on at 100Mb/s
15	EXT_PRG	-	nc	-	not supported
16	I2CLK	I2C Bus Clock	0-5	PU 2k2 5V	-
17	VCC	Power +5V	PWR	-	-
18	VCC	Power +5V	PWR	-	-
19	OVCR#	Over Current Detect for USB	I-3,3	PU 10k 3,3V	-
20	GPCS#	-	nc	-	not supported
21	EXTSMI#	System Management Interrupt Input	I-3,3	PU 10k 3,3V	-
22	I2DAT	I2C Bus Data	IO-5	PU 2k2 5V	-
23	SMBCLK	SM Bus Clock	0-3,3	PU 2k2 3,3V	-
24	SMBDATA	SM Bus Data	IO-3,3	PU 2k2 3,3V	-
25	SIDE_CS3#	Secondary IDE Chip Select Channel 1	0-3,3	-	-
26	SMBALERT	SMB Alert	I-3,3	PU 10k 3,3V	-
27	SIDE_CS1#	Secondary IDE Chip Select Channel 0	0-3,3	-	-
28	DASP_S	-	nc	-	not supported
29	SIDE_A2	Secondary IDE Address Bus	0-3,3	-	-
30	PIDE_CS3#	Primary IDE Chip Select Channel 1	0-3,3	-	-
31	SIDE_A0	Secondary IDE Address Bus	0-3,3	-	-
32	PIDE_CS1#	Primary IDE Chip Select Channel 0	0-3,3	-	-
33	GND	Ground	PWR	-	-
34	GND	Ground	PWR	-	-
35	PDIAG_S	Secondary IDE Diagnosis Signal	I-3,3	PD 10k	-
36	PIDE_A2	Primary IDE Address Bus	0-3,3	-	-
37	SIDE_A1	Secondary IDE Address Bus	0-3,3	-	-
38	PIDE_A0	Primary IDE Address Bus	0-3,3	-	-
39	SIDE_INTRQ	Secondary IDE Interrupt Reqeuest	I-3,3	PD 10k	-
40	PIDE_A1	Primary IDE Address Bus	0-3,3	-	-
41	PM_BATLOW#	Battery Low	I-3,3	PU 8k2 3,3V	-
42	GPE1#	General Purpose Power Event 1	I-3,3	PU 10k 3,3V	GPI015 on ICH7-M
43	SIDE_AK#	Secondary IDE DMA Acknowledge	0-3,3	-	-
44	PIDE_INTRQ	Primary IDE Interrupt Reqeuest	I-3,3	PU 8k2 3,3V	-
45	SIDE_RDY	Secondary IDE Ready	I-3,3	PU 4k7,3V	-
46	PIDE_AK#	Primary IDE DMA Acknowledge	0-3,3	-	-
47	SIDE_IOR#	Secondary IDE IO Read	0-3,3	-	-
48	PIDE_RDY	Primary IDE Ready	I-3,3	PU 4k7,3V	-
49	VCC	Power +5V	PWR	-	-
50	VCC	Power +5V	PWR	-	-

Note: The termination resistors in this table are already mounted on the ETX® board. Please refer to the design guide for information about additional termination resistors.

Pin 51–100: [Power | IDE | Ethernet | Misc]

Pin	Signal	Description	Type	Termination	Comment
51	SIDE_IOW#	Secondary IDE IO Write	0-3,3	-	-
52	PIDE_IOR#	Primary IDE IO Read	0-3,3	-	-
53	SIDE_DRQ	Secondary IDE DMA Request	I-3,3	PD 5k6	-
54	PIDE_IOW#	Primary IDE IO Write	0-3,3	-	-
55	SIDE_D15	Secondary IDE Data Bus	IO	-	-
56	PIDE_DRQ	Primary IDE DMA Request	I-3,3	-	-
57	SIDE_D0	Secondary IDE Data Bus	IO	-	-
58	PIDE_D15	Primary IDE Data Bus	IO	-	-
59	SIDE_D14	Secondary IDE Data Bus	IO	-	-
60	PIDE_D0	Primary IDE Data Bus	IO	-	-
61	SIDE_D1	Secondary IDE Data Bus	IO	-	-
62	PIDE_D14	Primary IDE Data Bus	IO	-	-
63	SIDE_D13	Secondary IDE Data Bus	IO	-	-
64	PIDE_D1	Primary IDE Data Bus	IO	-	-
65	GND	Ground	PWR	-	-
66	GND	Ground	PWR	-	-
67	SIDE_D2	Secondary IDE Data Bus	IO	-	-
68	PIDE_D13	Primary IDE Data Bus	IO	-	-
69	SIDE_D12	Secondary IDE Data Bus	IO	-	-
70	PIDE_D2	Primary IDE Data Bus	IO	-	-
71	SIDE_D3	Secondary IDE Data Bus	IO	-	-
72	PIDE_D12	Primary IDE Data Bus	IO	-	-
73	SIDE_D11	Secondary IDE Data Bus	IO	-	-
74	PIDE_D3	Primary IDE Data Bus	IO	-	-
75	SIDE_D4	Secondary IDE Data Bus	IO	-	-
76	PIDE_D11	Primary IDE Data Bus	IO	-	-
77	SIDE_D10	Secondary IDE Data Bus	IO	-	-
78	PIDE_D4	Primary IDE Data Bus	IO	-	-
79	SIDE_D5	Secondary IDE Data Bus	IO	-	-
80	PIDE_D10	Primary IDE Data Bus	IO	-	-
81	VCC	Power +5V	PWR	-	-
82	VCC	Power +5V	PWR	-	-
83	SIDE_D9	Secondary IDE Data Bus	IO	-	-
84	PIDE_D5	Primary IDE Data Bus	IO	-	-
85	SIDE_D6	Secondary IDE Data Bus	IO	-	-
86	PIDE_D9	Primary IDE Data Bus	IO	-	-
87	SIDE_D8	Secondary IDE Data Bus	IO	-	-
88	PIDE_D6	Primary IDE Data Bus	IO	-	-
89	GPE2#	General Purpose Power Event 1	I-3,3	PU 10k 3,3V	RI of ICH7M
90	CBLID_P#	80-conductor IDE cable Channel 0	I-3,3	PD 10k	-
91	RXD#	Ethernet Receive Differential Signal (RXD-)	I	-	121R between RXD+/-
92	PIDE_D8	Primary IDE Data Bus	IO	-	-
93	RXD	Ethernet Receive Differential Signal (RXD+)	I	-	121R between RXD+/-
94	SIDE_D7	Secondary IDE Data Bus	IO	-	-
95	TXD#	Ethernet Transmit Differential Signal (TXD-)	O	-	100R/C10p between
96	PIDE_D7	Primary IDE Data Bus	IO	-	int. PD 11k5 ICH7-M
97	TXD	Ethernet Transmit Differential Signal (TXD+)	O	-	100R/C10p between
98	HDRST#	Hard Drive Reset	0-5	-	-
99	GND	Ground	PWR	-	-
100	GND	Ground	PWR	-	-

Note: The termination resistors in this table are already mounted on the ETX® board. Please refer to the design guide for information about additional termination resistors.

4.7.3 Connector X4 Signal Description

IDE Ports

The IDE host adapter is capable of DMA-100 operation and supports only one single IDE channel which is connected to the primary channel of the ETX® connector X4. Per default it is set to DMA-33, to achieve the best compatibility to most baseboard implementations. Implementation information is provided in the ETX® Design Guide. Refer to those documents for additional information.

Configuration:

The IDE host adapter is a PCI bus device. It is configured by the BIOS during PCI device configuration. You can disable it in setup. Resources used by the primary IDE host adapter are compatible with the PC/AT.

Ethernet

The Ethernet interface is based on the Intel® 82562 Fast Ethernet PCI controller. This 32-bit PCI controller is a fully integrated 10/100BASE-TX LAN solution.

The Ethernet interface requires an external transformer. See the ETX® Design Guide for suggestions on transformer selection.

Configuration:

The Ethernet interface is a PCI device. The BIOS setup automatically configures it during configuration of the PCI device.

Note: Implementation and limitation information is provided in the ETX® Design Guide from document revision 2.1. Refer to the documentation for additional information.

Power Control

Power Good / Reset Input:

The ETX®-DC provides an external input for a power-good signal or a manual- reset pushbutton. The implementation of this subsystem complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

Power Management

ATX PS Control:

The ETX®-DC can control the main power output of an ATX-style power supply. The implementation of this subsystem complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

External SMI Interrupt:

Contact Kontron Embedded Modules GmbH technical support for information on this feature.

Miscellaneous Circuits**Speaker**

The implementation of the speaker output complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

Battery

The implementation of the battery input complies with the ETX® Specification. Implementation information is provided in the ETX® Design Guide. Refer to the documentation for additional information.

In compliance with EN60950, there are at least two current-limiting devices (resistor and diode) between the battery and the consuming component.

I2C Bus

The external I2C provided via GPIOs on ETX® Connector Pin 16 and 22 on X4 offers full MultiMaster and Clock Stretching support. See the tables below for measured values on ETX®-DC with BIOS MNP1R112.

BIOS Setup Selection	Measured I2C Speed
Very High	125 kHz
High	62.5 kHz
Medium	31.25 kHz
Slow	8 kHz
Very Slow	1.25 kHz
Ultra Slow	530 Hz

You can access the I2C Bus via JUMPtec's Intelligent Device Architecture (JIDA) BIOS functions.


For additional information, refer to the ETX® Design Guide, I2C application notes and JIDA specification which are available at the Kontron Web site.

SM Bus

System Management (SM) bus signals are connected to the SM bus controller, which is located in the southbridge (Intel 82801GBM) device. For more information about the SM bus, please see the System Management (SM) Bus section in the Appendix A: System Resources chapter.

4.8 SDVO Connector J9

4.8.1 Location of the connector

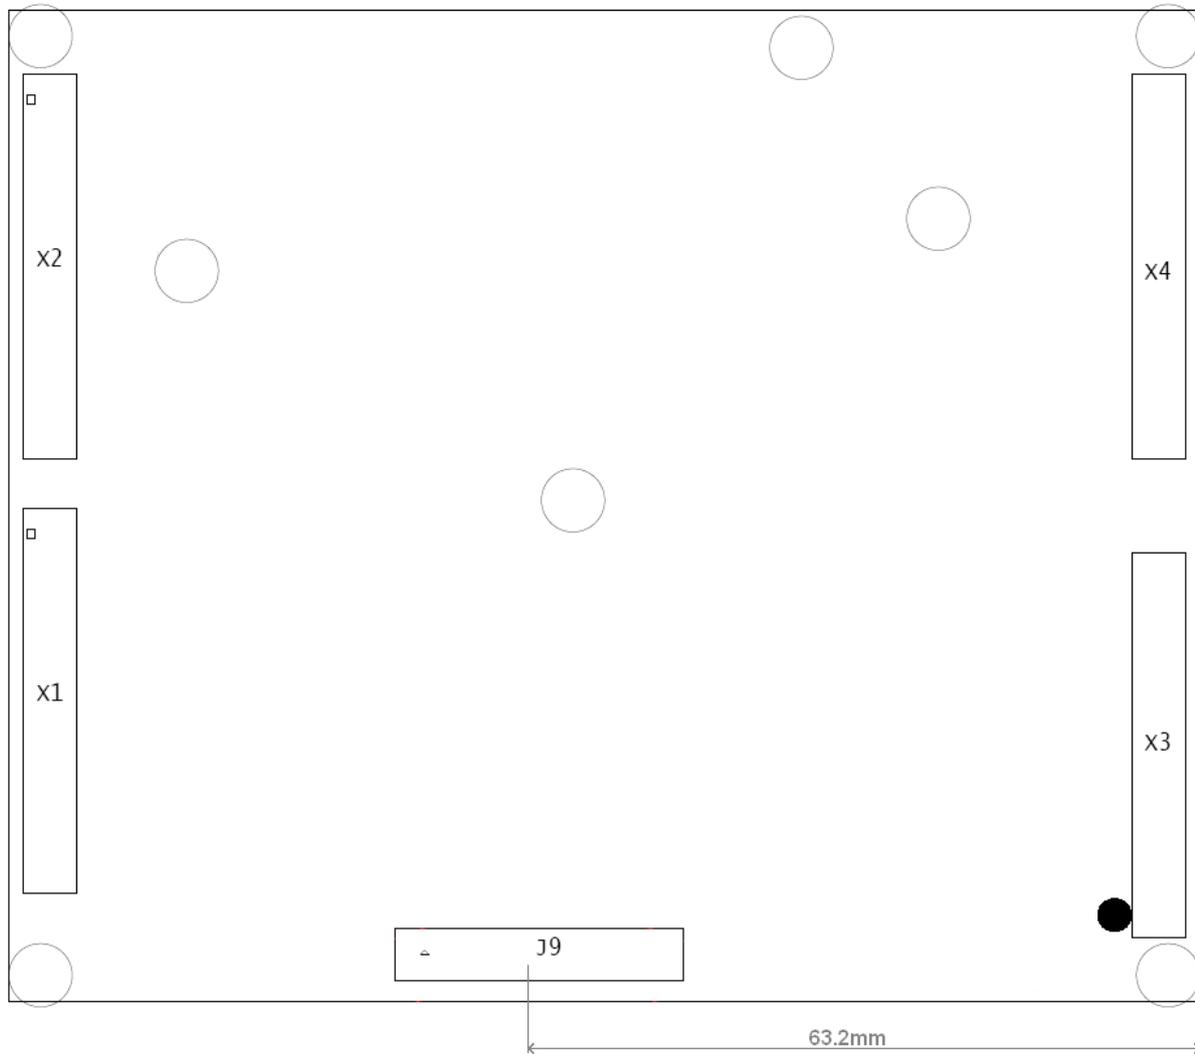

The feature connector J9 is on the bottom side of the module on the edge.

4.8.2 SDVO Output

The ETX®-DC Serial Digital Video Out port is integrated in the Intel® 945GSE northbridge. It has the following features:

- » Serial Digital Video Out Port (SDVOB only) support
- » One 12-bit channel
- » The SDVO B port can drive a variety of SDVO devices (TV-Out Encoders, TMDS and LVDS transmitters, etc.)

4.8.3 Connector and Flat Foil Cable

Connector and flat foil cable information for the SDVO connector (J9) located on the bottom side.

Flat Foil Cable

- » YOUNGSHIN MCAB45x150B05
- » 45pos,150 mm length, 0.5mm pitch, both ends opposite sides

Connector

- » Hirose - FH12-45S-0.5SH
- » 0.50mm (.020") Pitch FFC/FPC Connector, Horizontal Right Angle, SMT, 45 Circuits

4.8.4 Software Requirements

SDVO Output during bootup

The BIOS must be set to enable the SDVO output during boot-up. Please enter the BIOS setup tool by pressing the button during boot-up and go into the menu

Chipset Control -> North Bridge Configuration -> Display Control



Please change the setting Boot Display Device to either "SDVO" or "CRT + SDVO".

SDVO Output during runtime

The regarding driver must enable the interface. This does not need an enabled boot up display set to SDVO.

When you have as boot display device SDVO enabled and you have installed a windows operating system then after the graphic driver installation your SDVO interface is disabled. You can enable it in blind mode by pressing the key combination <CTRL><ALT><F4>.

4.8.5 Pinout Feature Connector J9

Pin	Pin on ETX®-CD	Description
1	GND1	Ground
2	SDVOC_CLKN	nc
3	SDVOC_CLKN	nc
4	GND2	Ground
5	SDVOC_GREENN	nc
6	SDVOC_GREENP	nc
7	GND3	Ground
8	SDVOB_CLKN	Channel B; Clock negative
9	SDVOB_CLKN	Channel B; Clock positive
10	GND4	Ground
11	SDVOB_GREENN	Channel B; Green negative
12	SDVOB_GREENP	Channel B; Green positive
13	GND5	Ground
14	SDVOC_INTN	nc
15	SDVOC_INTP	nc
16	GND6	Ground
17	SDVOB_INTN	Channel B; Interrupt negative
18	SDVOB_INTP	Channel B; Interrupt positive
19	GND7	Ground
20	SDVOC_BLUEN	nc
21	SDVOC_BLUEP	nc
22	GND8	Ground
23	SDVOC_REDN	nc
24	SDVOC_REDP	nc
25	GND9	Ground
26	SDVOB_BLUEN	Channel B; Blue negative
27	SDVOB_BLUEP	Channel B; Blue positive
28	GND10	Ground
29	SDVOB_REDN	Channel B; Red negative
30	SDVOB_REDP	Channel B; Red positive
31	GND11	Ground
32	SDVO_FLDSTALLN	Field Stall negative
33	SDVO_FLDSTALLP	Field Stall positive
34	GND12	Ground
35	SDVO_TVCLKINN	TV Clock Input negative
36	SDVO_TVCLKINP	TV Clock Input positive
37	GND13	Ground
38	SDVO_CTRLCLK	I2C based control signal for SDVO devices; clock
39	SDVO_CTRLDATA	I2C based control signal for SDVO devices; data
40	RESET#	Reset signal
41	VCC	5V power
42	VCC	5V power
43	VCC	5V power
44	Reserved	Nc
45	Reserved	Nc

5 Special Features

5.1 Watchdog Timer

The watchdog timer is implemented within the Winbond W83627HG. The WDT can also be controlled by the JIDA BIOS support. The application software should strobe the WDT to prevent its timeout. Upon timeout, the WDT resets and restarts the system. This provides a way to recover from program crashes or lockups.

Configuration

You can program the timeout period for the watchdog timer in two ranges:

- » 1-second increments from 1 to 255 seconds
- » 1-minute increments from 1 to 255 minutes

The watchdog can release a NMI or a reset.

Contact Kontron Embedded Modules technical support for information on programming and operating the WDT.

5.2 SATA Support

The ETX®-DC supports two SATA ports compliant to the ETX® 3.0 specification

5.3 Restrictions

The ETX-DC® has following restrictions compared to some other ETX® products:

5.3.1 ISA Bus

The ETX-DC® is usually equipped with a PCI2ISA bridge which does not support DMA transfers; therefore e.g. the floppy interface of an external SuperI/O controller is not supported.

Optionally a LPC2ISA bridge can be equipped as a customized version of the product, but then there is only very limited memory access on ISA bus possible.

5.3.2 ISA VGA

There is no support for ISA graphic cards on ETCX-DC®.

5.3.3 LVDS

The ETX-DC® supports only 18bit LVDS panels, because only 3 LVDS data pairs are supported by the chipset.

6 Design Considerations

6.1 Thermal Management

A heat-spreader plate assembly is available from Kontron Embedded Modules GmbH for the ETX®-DC. The heat-spreader plate on top of this assembly is NOT a heat sink. It works as an ETX®-standard thermal interface to use with a heat sink or other cooling device.

External cooling must be provided to maintain the heat-spreader plate at proper operating temperatures. Under worst-case conditions, the cooling mechanism must maintain an ambient air and heat-spreader plate temperature of 60° C or less.

The aluminum slugs and thermal pads on the underside of the heat-spreader assembly implement thermal interfaces between the heat spreader plate and the major heat-generating components on the ETX®-DC. About 80 percent of the power dissipated within the module is conducted to the heatspreader plate and can be removed by the cooling solution.

The heat dissipated into the plate ranges from 12 watts. Design a cooling solution to dissipate the heat load on a heat-spreader plate at a minimum of 25 watts to accommodate all ETX® modules.

You can use many thermal-management solutions with the heat-spreader plates, including active and passive approaches. The optimum cooling solution varies, depending on the ETX® application and environmental conditions. Please see the ETX® Design Guide for further information on thermal management.

7 Important Technology Information

The following technological information is designed to give the reader a better understanding of some of features of the ETX®-DC. This information can be referenced when reading the System Resources and BIOS Operation sections that follow. There are also references to additional documentation that will help to develop a better understanding of the technical information described herein.

7.1 I/O APIC vs 8259 PIC Interrupt mode

The I/O APIC (Advanced Programmable Interrupt Controller) handles interrupts differently than the 8259 PIC. The following information explains these differences.

7.1.1 Method of interrupts transmission

The I/O APIC transmits interrupts through the system bus and interrupts are handled without the need for the processor to run an interrupt acknowledge cycle.

7.1.2 Interrupt priority

The priority of interrupts in the I/O APIC is independent of the interrupt number.

7.1.3 More interrupts

The I/O APIC in the chipset of the ETX®-DC supports a total of 24 interrupts. The APIC is not supported by all operating systems. The APIC mode must be enabled in the BIOS setup before the OS installation. APIC only works in ACPI mode.

Note: Enable the APIC mode if your OS supports it.

7.2 Thermal Monitor and Catastrophic Thermal Protection

The Thermal Monitor within the Intel® processor helps to control the processor temperature.

7.3 ACPI Suspend Modes and Resume Events

The ETX®-DC, supports the S1 (POS=Power On Suspend) state and S3 state (=Save to Ram). S4 (=Save to Disk) is not supported by the BIOS (S4_BIOS) but it is supported by the following operating systems:

- » WinME
- » Win2k
- » WinXP
- » Vista

The following events resume the system from S1:

- » Power Button
- » USB Wake Events
- » PCI Bus signal PME#
- » LAN WOL

The following event resumes the system from S3:

- » Power Button
- » PCI Bus signal PME#
- » LAN WOL

The following event resumes the system from S5:

- » Power Button
- » WOL

Note: LAN WOL must be enabled in the driver.

8 System Resources

8.1 Interrupt Request (IRQ) Lines

8.1.1 In 8259 PIC mode

IRQ #	Used For	Available	Comment
0	Timer0	No	
1	Keyboard	No	
2	Slave 8259	No	
3	COM2	No	Note (1)
4	COM1	No	Note (1)
5	LPT2	Yes	Note (2)
6	Floppy Drive Controller	No	Note (1)
7	LPT1	No	Note (1)
8	RTC	No	
9	SCI	No	Note (3)
10	COM3	Yes	Note (2)
11	COM4	Yes	Note (2)
12	PS/2 Mouse	No	Note (1)
13	FPU	No	
14	IDE0	No	Note (1)
15	IDE1	No	Note (1)

Note: 1 If the "Used For" device is disabled in setup, the corresponding interrupt is available for other devices.
 2 Unavailable if baseboard is equipped with an I/O controller SMC FDC37C669, and the device is enabled in setup.
 3 Unavailable in Advanced Configuration and Power Interface (ACPI) mode. Used as System Control Interrupt (SCI) in ACPI mode. Currently not free in Non-ACPI mode.

8.1.2 In APIC mode

IRQ #	Used For	Available	Comment
0	Timer0	No	
1	Keyboard	No	
2	Slave 8259	No	
3	COM2	No	Note (1)
4	COM1	No	Note (1)
5	PCI/LPT2	Yes	Note (2)
6	Floppy Drive Controller	No	Note (1)
7	LPT1	No	Note (1)
8	RTC	No	
9	SCI	No	System Control Interrupt (3)
10	COM3	Yes	Note (2)
11	COM4	Yes	Note (2)
12	PS/2 Mouse	No	Note (1)
13	FPU	No	
14	IDE0	No	Note (4)
15	IDE1	No	Note (4)
16	PIRQ[A]	For PCI	PCI IRQ line 1 + Graphics controller + HD Audio Controller + secondary IDE
17	PIRQ[B]	For PCI	PCI IRQ line 2 + AC97 Audio controller
18	PIRQ[C]	For PCI	PCI IRQ line 3 + USB UCHI controller #3 + SATA (native mode)
19	PIRQ[D]	For PCI	PCI IRQ line 4 + USB UCHI controller #2 + IDE (native mode)
20	PIRQ[E]	No	Lan Controller
21	PIRQ[F]	No	
22	PIRQ[G]	No	
23	PIRQ[H]	No	USB EHCI controller, USB UCHI controller #1

Note: 1 If the “Used For” device is disabled in setup, the corresponding interrupt is available for other devices.
 2 Unavailable if baseboard is equipped with an I/O controller SMC FDC37C669, and the device is enabled in setup.
 3 Unavailable in Advanced Configuration and Power Interface (ACPI) mode. Used as System Control Interrupt (SCI) in ACPI mode. Currently not free in Non-ACPI mode.
 4 IRQs are available if IDE controller is either disabled in setup or if in Native IDE mode.

8.1.3 Direct Memory Access (DMA) Channels

DMA #	Used for	Available	Comment
0		No	
1		No	
2	FDC	No	If the “used-for” device is disabled in setup, the corresponding DMA channel is available for other devices.
3	LPT	No	Unavailable if LPT is used in ECP mode.
4	Cascade	No	
5		No	
6		No	
7		No	

8.2 Memory Area

Upper Memory	Used for	Available	Comment
C0000h – CFFFFh	VGA BIOS	No	
D0000h – DFFFFh		Yes	ISA bus or shadow RAM
E0000h – FFFFFh	System BIOS	No	

8.3 I/O Address Map

The I/O-port addresses of the ETX®-DC are functionally identical with a standard PC/AT.

The following I/O ports are used:

I/O Address	Used for	Available	Comment
2E8-2Efh	COM4	No	Available if external I/O controller not used.
370-371h	Configuration space for SMC controller	No	Available if external I/O controller not used.
3E8-3Efh	COM3	No	Available if external I/O controller not used.
480-4BFh	Chipset	No	Always used by chipset.
800-87Fh	Chipset	No	Always used by chipset.
A00-A10h	Chipset	No	Always used by chipset.
1000h >	PCI	No	I/O ports 1000h and above might be allocated by PCI devices or onboard hardware.

8.4 Peripheral Component Interconnect (PCI) Devices

PCI Device	Busmaster	PCI Interrupt	Comment
Audio, USB and Ethernet		See IRQ resource tables above	Integrated in the Intel chipset. No REQx/GNTx pair needed.

You can use REQ0/GNT0, REQ1/GNT1, REQ2/GNT2, and REQ3/GNT3 pairs for external PCI devices.

8.5 Inter-IC (I2C) Bus

I2C Address	Used For	Available	Comment
A0h	JIDA-EEPROM	No	EEPROM for CMOS data.
A2h	JIDA-EEPROM	No	

8.6 System Management (SM) Bus

Following SM bus addresses are reserved.

SM Bus Address	SM Device	Comment
10h	SMB Host	Do not use under any circumstances.
12h	SMART_CHARGER	Not to be used with any SM bus device except a charger
14h	SMART_SELECTOR	Not to be used with any SM bus device except a selector
16h	SMART_BATTERY	Not to be used with any SM bus device except a battery
A0h	SPD	SDRAM EEPROM
D2h	Clock generator	Do not use under any circumstances.

The standard ETX®-DC Power management BIOS does support MARS (Mobile Application platform for Rechargeable Systems). Further details about MARS are available at [Embedded Modules Division - Kontron](#).

8.7 JILI-I2C Bus

I2C Address	Used For	Available	Comment
A0h	JILI-EEPROM	No	EEPROM for JILI-Data

8.8 K-Station / JIDA32 resources

8.8.1 I2C

BUS	Function
I2C 0	Internal / JIDA I2C
I2C 1	SM-Bus
I2C 2	JILI I2C
I2C 3	SDVO I2C
I2C 4	CRT I2C

8.8.2 Storage

Device	Function
EEPROM 0	JIDA EEPROM Area1 with 32 Bytes free
EEPROM 1	JIDA EEPROM Area 2 with 33 Bytes (reserved)

8.8.3 GPIO

Port	Function

GPIOs are not supported on ETX-DC®.

8.8.4 Hardware Monitor

Sensor	Function
Temp 0	CPU diode via onboard Winbond W83627
Temp 1	CPU DTS via onboard Winbond W83627
FAN 0	Onboard fan connector via Winbond W83627
Voltage 0	onboard Winbond W83627: CoreA
Voltage 1	onboard Winbond W83627: +3.3V
Voltage 2	onboard Winbond W83627: +5V

9 BIOS Operation

The module is equipped with AMI® BIOS, which is located in an onboard SPI serial flash memory. You can update the BIOS using a Flash utility.

9.1 Determining the BIOS Version

To determine the AMI® BIOS version, immediately press the Pause key on your keyboard as soon as you see the following text display in the upper left corner of your screen:

```
AMIBIOS © 2006 American Megatrends, Inc.
```

```
BIOS Date: 06/16/08 10:52:49 Ver: 08.00.14
```

```
Kontron® BIOS Version <MNP1RXXX>
```

```
© Copyright 2002-2009 Kontron Embedded Modules GmbH
```

9.2 Setup Guide

The AMIBIOS Setup Utility changes system behavior by modifying the BIOS configuration. The setup program uses a number of menus to make changes and turn features on or off.

Note: Selecting incorrect values may cause system boot failure. Load setup default values to recover by pressing <F9>.

Start AMI® BIOS Setup Utility

To start the AMI® BIOS setup utility, press when the following string appears during bootup.

Press to enter Setup

The Info Menu then appears.

The Setup Screen is composed of several sections:

Setup Screen	Location	Function
Menu Bar	Top	Lists and selects all top level menus.
Legend Bar	Right side Bottom	Lists setup navigation keys.
Item Specific Help Window	Right side Top	Help for selected item.
Menu Window	Left Center	Selection fields for current menu.
General Help Window	Overlay (center)	Help for selected menu.

Menu Bar

The menu bar at the top of the window lists different menus. Use the left/right arrow keys to make a selection.

Legend Bar

Use the keys listed in the legend bar on the bottom to make your selections or exit the current menu. The table below describes the legend keys and their alternates.

Key	Function
<F1> or <Alt-H>	General Help window.
<Esc>	Exit menu.
← or → Arrow key	Select a menu.
↑ or ↓ Arrow key	Select fields in current menu.
<Home> or <End>	Move cursor to top or bottom of current window.
<PgUp> or <PgDn>	Move cursor to next or previous page.
<F9>	Load the default configuration values for this menu.
<F10>	Save and exit.
<Enter>	Execute command or select submenu.
<Alt-R>	Refresh screen.

Selecting an Item

Use the ↑ or ↓ key to move the cursor to the field you want. Then use the + and – keys to select a value for that field. The Save Value commands in the Exit menu save the values displayed in all the menus.

Displaying Submenus

Use the ← or → key to move the cursor to the submenu you want. Then press <Enter>. A pointer (▶) marks all submenus.

Item Specific Help Window

The Help window on the right side of each menu displays the Help text for the selected item. It updates as you move the cursor to each field.

General Help Window

Pressing <F1> or <Alt-F1> on a menu brings up the General Help window that describes the legend keys and their alternates. Press <Esc> to exit the General Help window.

9.3 BIOS Setup Menus

9.3.1 Main Menu

```

BIOS SETUP UTILITY
Main  Advanced  PCIPnP  Boot  Security  Chipset  Exit
-----
System Overview
-----
Bios Info
Bios Version      : MNP1R114
AMI Core8 Version : 08.00.15
Build Date       : 05/11/10

▶ Module Info

System Time      [03:34:17]
System Date     [Sat 09/05/2009]

Displays Module Info

←  Select Screen
↑↓ Select Item
Enter Go to Sub Screen
F1  General Help
F10 Save and Exit
ESC  Exit

v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.
    
```

Feature	Option	Description
System Time	[hh:mm:ss]	<Tab>, <Shift-Tab>, or <Enter> selects field
System Date	[mm-dd-yyyy]	<Tab>, <Shift-Tab>, or <Enter> selects field

9.3.2 Module Info

```

Main
-----
Module Info
Board Name      : ETX-DC
Board Class     : CPU
Serial Number   : MNP1ZQD020119
Manufacturing Date : 3/6/2009
Hardware Revision : 3.1
Boot Counter    : 480

Processor
Intel(R) Atom(TM) CPU N270 @ 1.60GHz
Speed          : 1600MHz
Count          : 1

System Memory
Size           : 2040MB

▶ Module Component Steppings
▶ Module Software Revisions
▶ Current LUDS Configuration

Displays Module Component Steppings

←  Select Screen
↑↓ Select Item
Enter Go to Sub Screen
F1  General Help
F10 Save and Exit
ESC  Exit

v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.
    
```

Module Component Steppings

```

Module Component Steppings
Main
CPU Stepping      : <0x327842> C0
NB Stepping       : <0x03> A3
SB Stepping       : <0x02>

                                     ←   Select Screen
                                     ↑↓  Select Item
                                     F1   General Help
                                     F10  Save and Exit
                                     ESC  Exit

v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.

```

Module Software Revisions

```

Module Software Revisions
Main
Bios Version      : MNP1R114
Bios Build ID     : 114
CPU Microcode Rev : 4<0x04>
JDA Revision      : 1.11
UBIOS Revision    : 1585
JILL Core Revision : 1.1.1


JRC Revision      : 132

                                     ←   Select Screen
                                     ↑↓  Select Item
                                     F1   General Help
                                     F10  Save and Exit
                                     ESC  Exit


v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.

```


Current LVDS Configuration

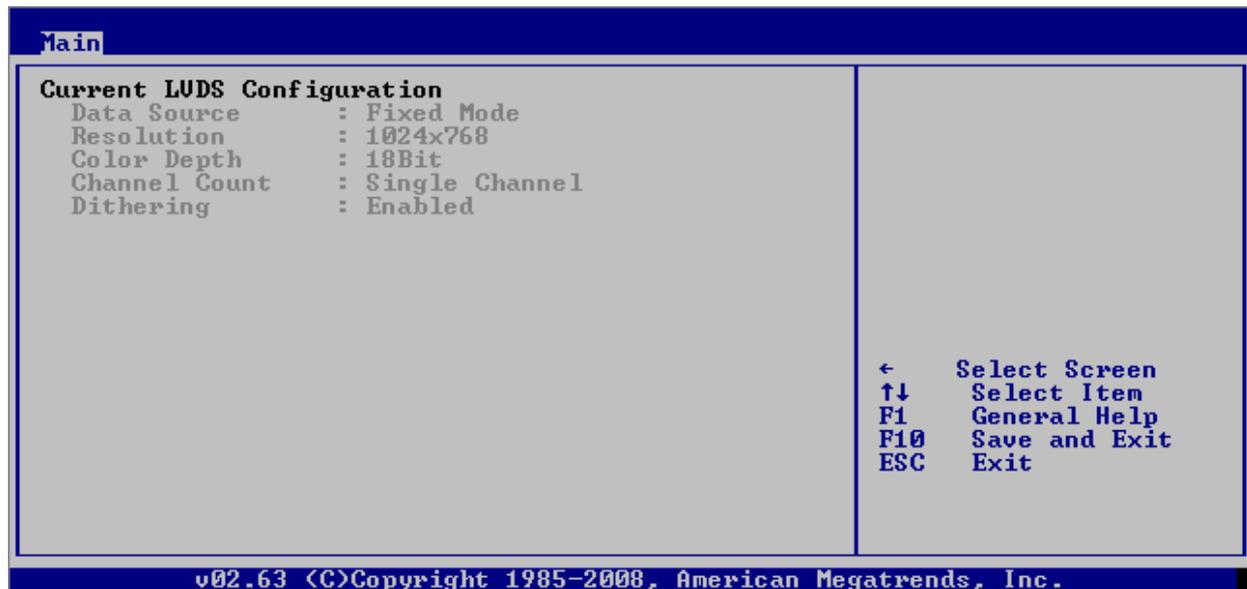

9.3.3 Advanced Menu

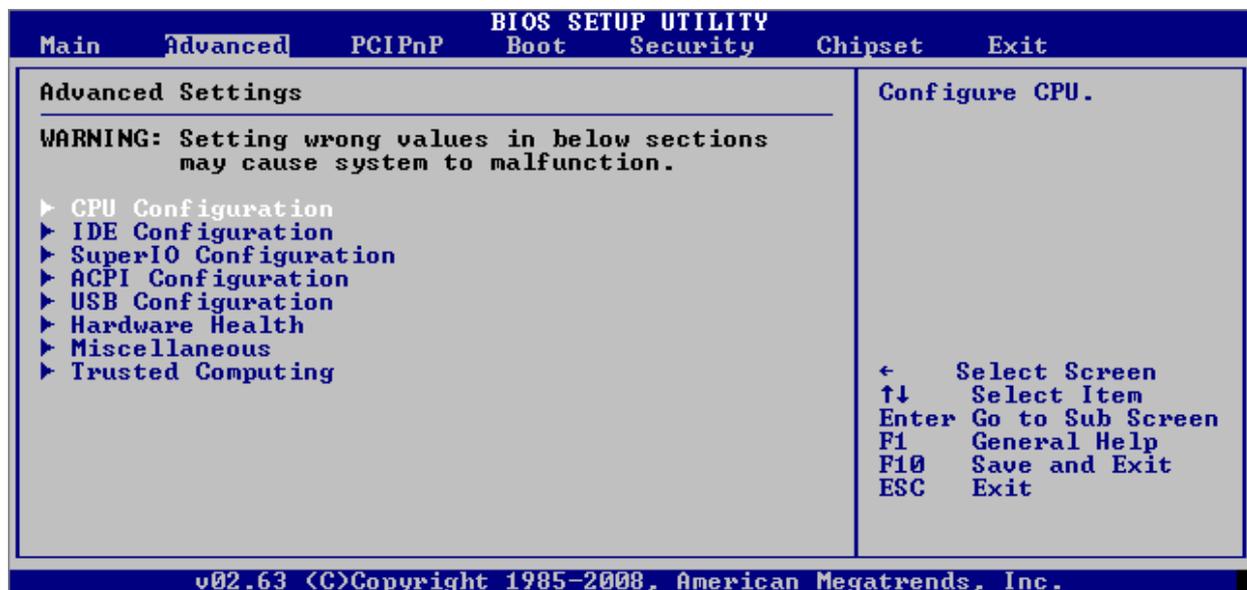


CPU Configuration Menu

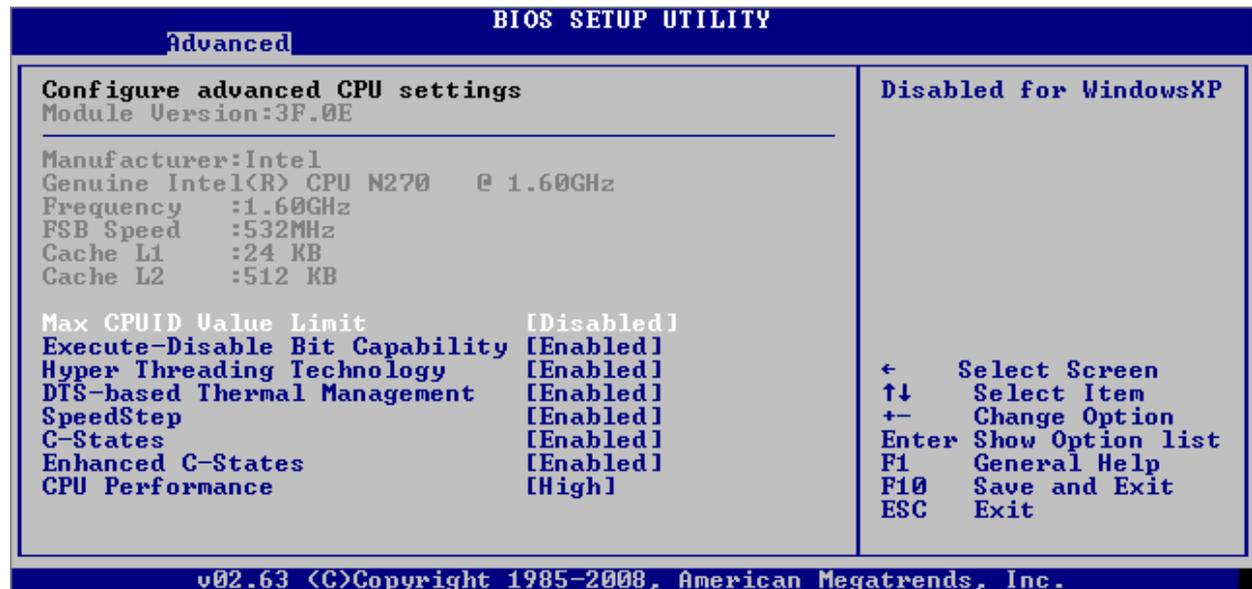


Feature	Option	Description
MAX CPUID Value Limit	Enabled Disabled	Enables the MAX CPUID Value Limit. Should be disabled for Windows XP
Execute-Disable Bit Capability	Enabled Disabled	Enables and Disables the Execute-Disable Bit Capability
Hyper Threading Technology	Enabled Disabled	Enables and Disables the Hyper Threading Feature
DTS-based Thermal Management	Enabled Disabled	Enables and Disables the DTS-based Thermal Management
SpeedStep	Enabled Disabled	Enables and Disables the Speed Stepping Feature
C-States	Enabled Disabled	Enables and Disables the C - States
Enhanced C-States	Enabled Disabled	Enables and Disables the enhanced C - States
CPU Performance	High Middle Low	High: The processor works up to 1600MHz (Speedstep enabled) Middle: 1200 MHz (Speedstep setting removed and disabled) Low: 800MHz (Speedstep setting removed and disabled)

IDE Configuration Menu

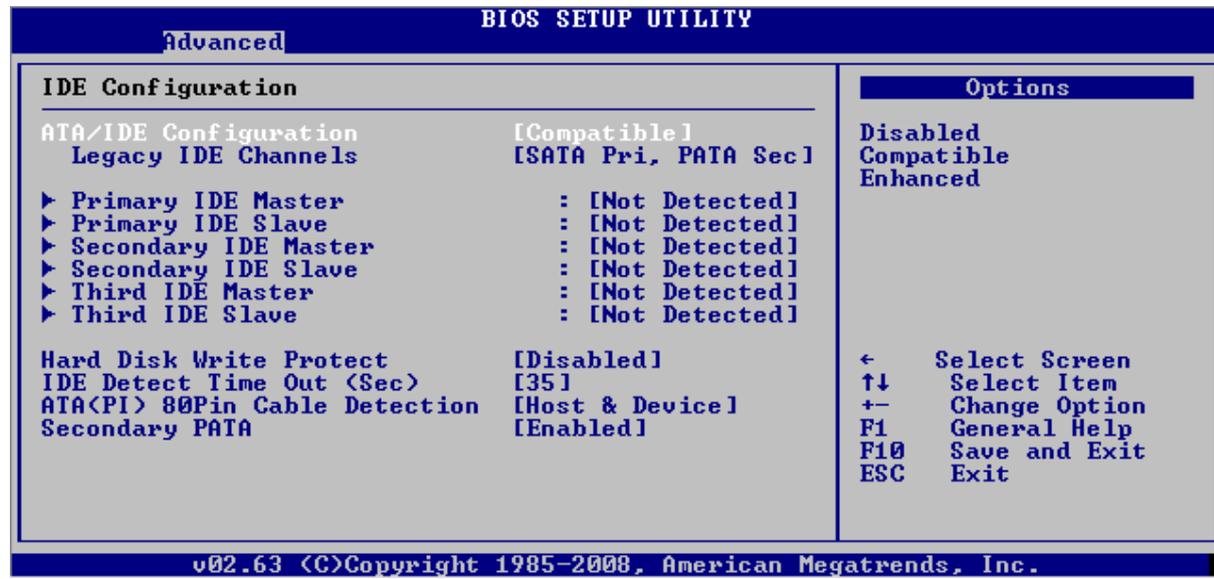

Feature	Option	Description
ATA/IDE Configuration	Disabled Compatible Enhanced	Disables or selects the mode for the ATA/IDE interface
Legacy IDE Channels (Only when Compatible)	SATA only Reserved SATA Pri, PATA Sec PATA only	Selects the IDE channel behavior in compatible mode
Configure SATA as (Only when Enhanced)	IDE AHCI	Selects the SATA mode in compatible IDE mode
Configure SATA channels (Only when Enhanced)	Before PATA Behind PATA	Configures when the SATA controller is initialised
Hard Disk Write Protect	Disabled Enabled	Enables and Disables the Hard Disk Write Protection which only works, when the HDD is accessed through BIOS
SpeedStep	Enabled Disabled	Enables and Disables the Speed Stepping Feature
IDE Detect Time Out (Sec)	0 5 .. 35	Selects the time for the IDE Detect Time Out in seconds
ATA(PI) 80 Pin Cable Detection	Host & Device Host Device	Selects the mechanism for detecting ATA(PI) 80 pin cable
Secondary PATA	Enabled Disabled	Enables and Disables the secondary IDE channel

IDE Device Configuration Menu

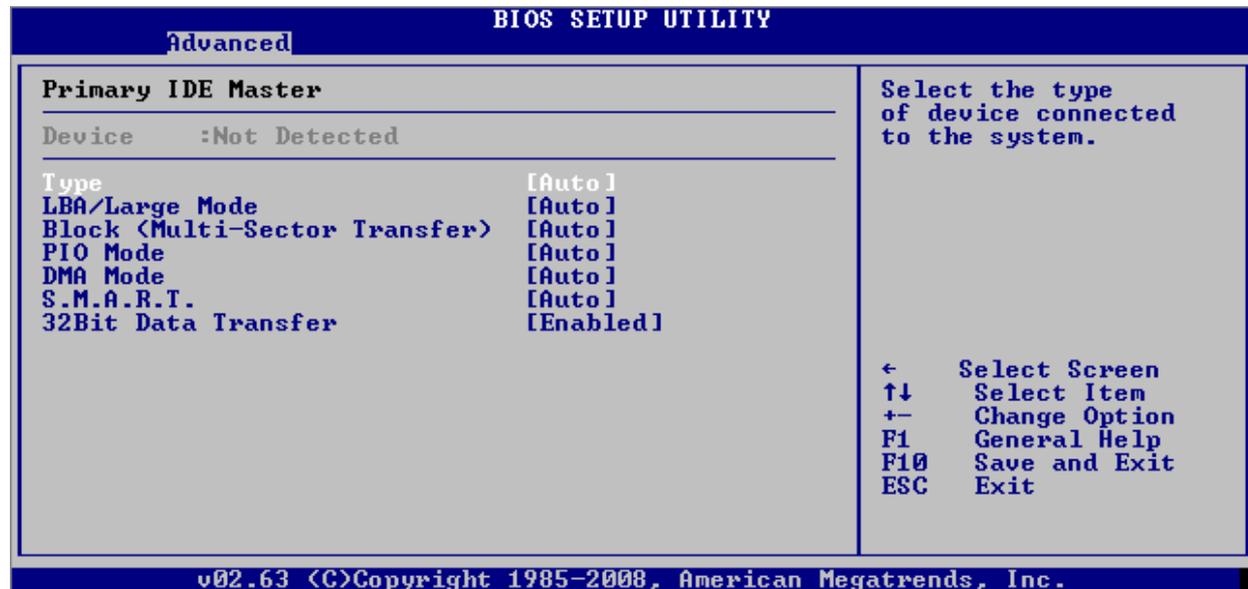

Feature	Option	Description
Type	Not Installed Auto CD/DVD ARMD	Selects the type of the IDE Device
LBA/Large Mode	Disabled Auto	Disables the LBA mode or enables it, when a device supports it
Block (Multi-Sector Transfer)	Disabled Auto	Disables the Block mode or enables it, when a device supports it
PIO Mode	Auto 0 1 2 3 4	(Auto) Configures the PIO Mode
DMA Mode	Auto SWDMA MWDMA UDMA	SWDMA: Single Word DMA MWDMA: Multi Word DMA UDMA: Ultra DMA
S.M.A.R.T.	Auto Enabled Disabled	Disables, Enables or automatically enables the S.M.A.R.T feature
32Bit Data Transfer	Enabled Disabled	Disables and Enables the 32Bit Data Transfer Mode

SuperIO Configuration Menu

BIOS SETUP UTILITY	
Advanced	
Configure Super IO Devices	
OnBoard Floppy Controller	[N/A]
Serial Port1 Address	[3F8/IRQ4]
Serial Port2 Address	[2F8/IRQ3]
Serial Port2 Mode	[Normal]
Parallel Port Address	[378]
Parallel Port Mode	[Normal]
Parallel Port IRQ	[IRQ7]
▶ External SIO	
Allows BIOS to Select Serial Port1 Base Addresses.	
← Select Screen ↑↓ Select Item +- Change Option Enter Show Option list F1 General Help F10 Save and Exit ESC Exit	
v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.	

Feature	Option	Description
OnBoard Floppy Controller	Disabled Enabled N/A	Enables / Disables floppy controller. Only accessible when jumpered to use floppy
Serial Port1 Address	Disabled 3F8/IRQ4 2F8/IRQ3 3D8/IRQ4 2E8/IRQ3	Selects the COM1 base address and interrupt request line.
Serial Port2 Address	Disabled 2F8/IRQ3 3D8/IRQ4 2E8/IRQ3	Selects the COM1 base address and interrupt request line.
Parallel Port Address	Disabled 378 279 3BC N/A	Selects the base address of the onboard parallel port. Only accessible when jumpered to parallel port
Parallel Port Mode	Normal Bidirectional ECP EPP ECP + EPP	Selects the mode of the onboard parallel port. Only accessible when jumpered to parallel port
EPP Version	1.9 1.7	
ECP Mode DMA Channel	DMA0 DMA1 DMA3	Selects the DMA Channel for ECP Mode (only available when ECP mode is selected)
Parallel Port IRQ	IRQ7 IRQ5	Selects the interrupt request line of the onboard parallel port. Only accessible when jumpered to parallel port


External SIO

Advanced		External SuperIO FDC37C669	
Configure External FDC37C669 SuperIO			
External COMA	[Disabled]	Options Disabled 3F8h/IRQ10 3F8h/IRQ11 2F8h/IRQ10 2F8h/IRQ11 3E8h/IRQ10 3E8h/IRQ11 2E8h/IRQ10 2E8h/IRQ11 ← Select Screen ↑↓ Select Item +- Change Option Enter Show Option list F1 General Help F10 Save and Exit ESC Exit	
External COMB	[Disabled]		
External LPT Address	[Disabled]		
v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.			

Feature	Option	Description
External COMA	Disabled 3F8h/IRQ10 3F8h/IRQ11 2F8h/IRQ10 2F8h/IRQ11 3E8h/IRQ10 3E8h/IRQ11 2E8h/IRQ10 2E8h/IRQ11	Selects the base address and interrupt request line of the external COM port A.
External COMB	Disabled 3F8h/IRQ10 3F8h/IRQ11 2F8h/IRQ10 2F8h/IRQ11 3E8h/IRQ10 3E8h/IRQ11 2E8h/IRQ10 2E8h/IRQ11	Selects the base address and interrupt request line of the external COM port B.
External LPT Address	Disabled 378 279 3BC	Selects the base address of the external parallel port.
Parallel Port Mode	Normal	Selects the mode of the external parallel port.
Parallel Port IRQ	Bidirectional IRQ7 IRQ5	Selects the interrupt request line of the external parallel port.


Note: There is no floppy interface of the external SuperI/O controller supported, because there is no DMA possible on ISA bus.

ACPI Configuration Menu

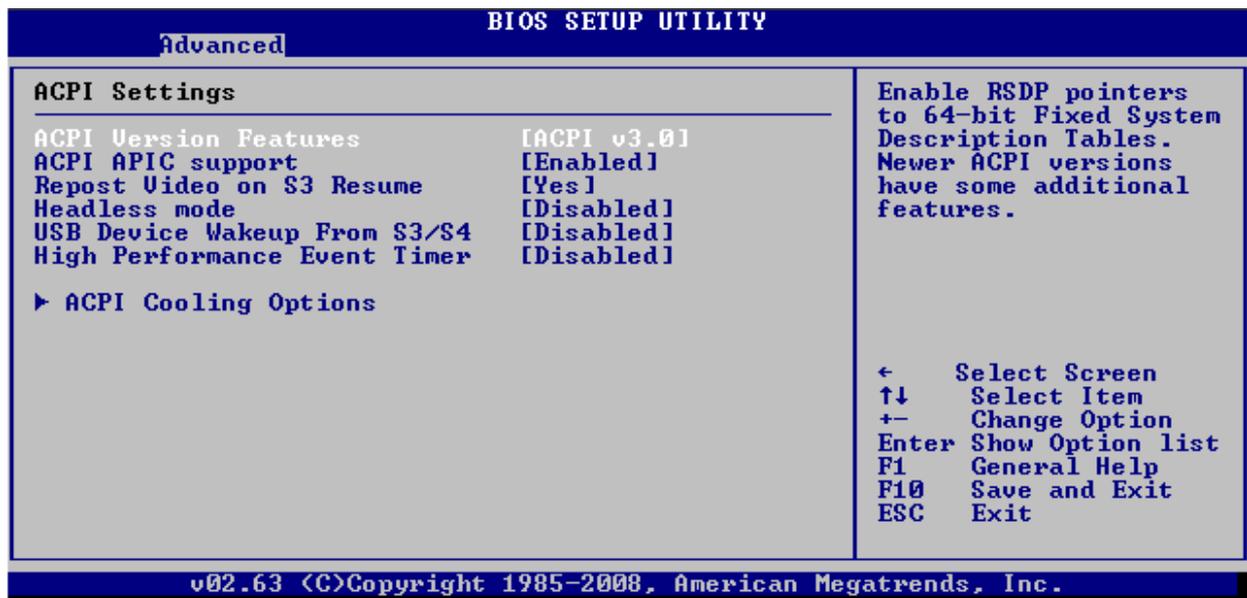

Feature	Option	Description
ACPI Version Features	ACPI v1.0 ACPI v2.0 ACPI v3.0	Selects the ACPI version features
ACPI APIC support	Enabled Disabled	Enables Disables ACPI APIC support
Repost Video on S3 Resume	Yes No	Selects, if the Video engine is initialized again after wake up
Headless mode	Disabled Enabled	Enable / Disable headless operation mode through ACPI
High Performance Event Timer	Disabled Enabled	Disables or enables the high performance event timer
HPET Memory Address	FED00000h FED01000h FED02000h FED03000h	Selects the memory address for the High Performance Event Timer (only available when High Performance Event Timer is enabled)

ACPI Cooling Options Menu

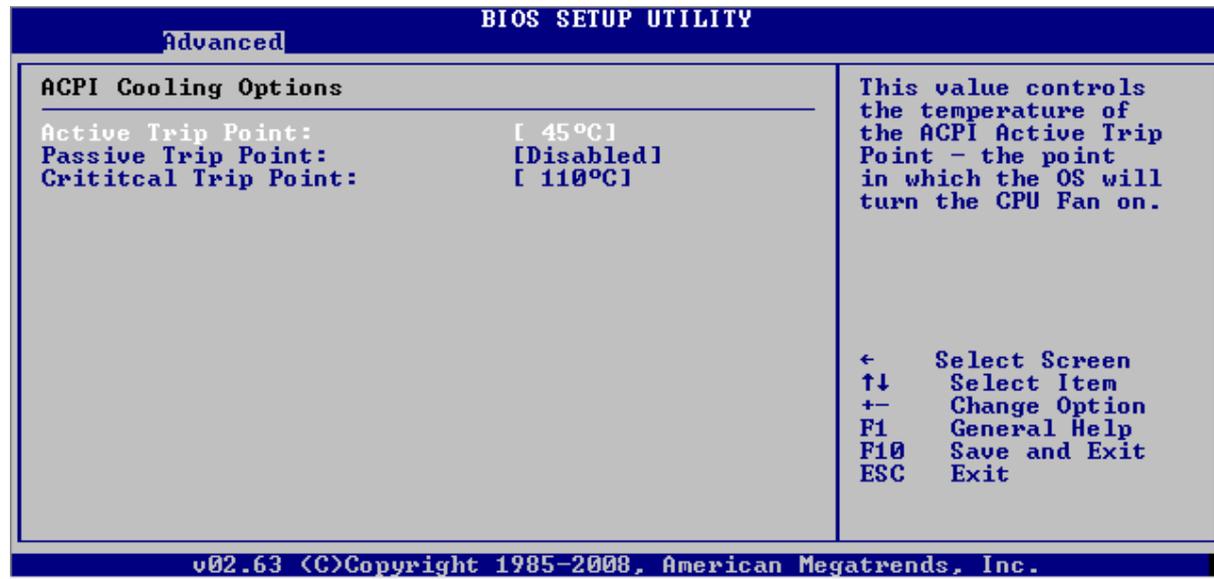

Feature	Option	Description
Active Trip Point	Disabled 40°C 45°C 50°C 55°C ... 110°C	Set the active trip point temperature, where the fan is activated
Passive Trip Point	Disabled 40°C 45°C 50°C 55°C ... 110°C	Disables or enables the APIC SCI IRQ
Passive TC1 Value	1 2 3 ... 16	This value sets the TC1 value for the ACPI Passive Cooling Formula. (only available when Passive Trip Point is enabled)
Passive TC2 Value	1 ... 5 ... 16	This value sets the TC2 value for the ACPI Passive Cooling Formula. (only available when Passive Trip Point is enabled)
Passive TSP Value	2 4 ... 10 ... 30	This item sets the TSP value of the ACPI Passive Cooling Formula. It represents in tenths of a second how often the OS will read the temperature when Passive Cooling is enabled.
Critical Trip Point	Disabled 40°C	Set the critical trip point temperature, where the fan is activated

	45°C	
	50°C	
	55°C	
	...	
	110°C	

USB Configuration Menu

```

BIOS SETUP UTILITY
-----
Advanced

USB Configuration
-----
Module Version - 2.24.5-13.4

USB Devices Enabled :
  1 Keyboard

Legacy USB Support          [Enabled]
Port 64/60 Emulation       [Enabled]
USB 2.0 Controller Mode    [HiSpeed]
BIOS EHCI Hand-Off        [Enabled]

USB reset delay            [Disabled]

+-----+
| Enable extra delay |
| after reset during |
| USB initialization. |
| This will give slow |
| devices more time  |
| to get ready after |
| they have been     |
| reset.             |
+-----+

← Select Screen
↑↓ Select Item
+- Change Option
Enter Show Option list
F1 General Help
F10 Save and Exit
ESC Exit

v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.
  
```

Feature	Option	Description
Legacy USB Support	Enabled Disabled Auto	Enables and Disables the USB legacy support
Port 64/60 Emulation	Enabled Disabled	Enables and Disables the USB legacy port 64/60h port emulation. Should be enabled for non USB aware OSs.
USB 2.0 Controller Mode	FullSpeed HiSpeed	Selects the SUB 2.0 Controller Mode
BIOS EHCI Hand-Off	Enabled Disabled	This is a workaround for OSs without EHCI hand-off support.
USB reset delay	Enabled Disabled	Enable extra delay after reset during USB initialization. This will give slow devices more time to get ready after they have been reset.

USB Mass Storage Device Configuration




Feature	Option	Description
USB Mass Storage Reset Delay	10 Sec 20 Sec 30 Sec 40 Sec	Number of seconds POST waits for the USB mass storage device after start unit command.
Emulation Type	Auto Floppy Forced FDD Hard Disk CDROM	If Auto USB devices less than 530MB will be emulated as floppy and remaining as hard drive. Forced FDD option can be used to force a HDD formatted drive to boot as FDD (excl. ZIP drive).

Hardware Health Configuration Menu

Advanced		BIOS SETUP UTILITY	
Hardware Health Configuration		Enables Hardware Health Monitoring Device.	
H/W Health Function	[Enabled]		
Hardware Health Event Monitoring		← Select Screen ↑↓ Select Item +− Change Option Enter Show Option list F1 General Help F10 Save and Exit ESC Exit	
CPU Temperature	:31°C/96°F		
Fan Speed Divisor	[1]		
Fan2 Speed	:No Function		
VcoreA	:1.168 V		
VcoreB	:1.136 V		
+3.3Vin	:3.408 V		
+5Vin	:5.184 V		
v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.			


Feature	Option	Description
H/W Health Function	Disabled Enabled	Enables and Disables the hardware health function in BIOS setup
Fan Speed Divisor	1 2 4 6 18 32 64 128	Selects the register setting for the Fan Speed Divisor

Miscellaneous menu

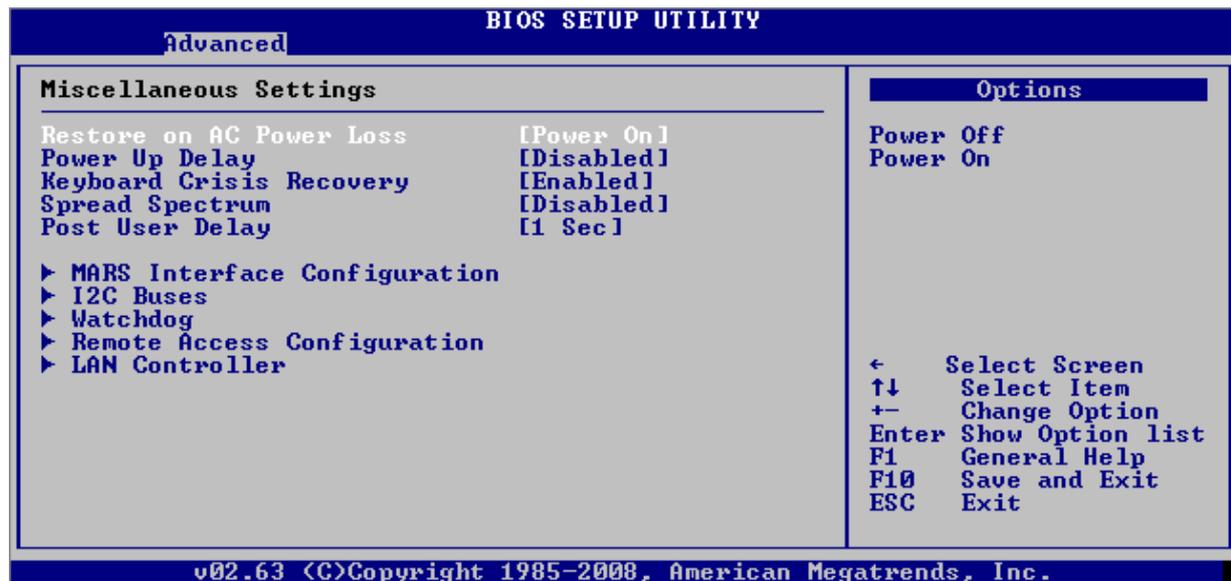


Feature	Option	Description
Restore on AC Power Loss	Power On Power Off	Selects the behavior after a power loss
Power Up Delay	Disabled 4 to 5 seconds 3 to 4 seconds 2 to 3 seconds 1 to 2 seconds	Selects the delay before the power is attached
Keyboard Crisis Recovery	Disabled Enabled	Enables and disables the keyboard crisis recovery to enable the <CTRL> <HOME> function to start a crisis during boot up
Spread Spectrum	Disabled PCI CPU Both	Disables or enables the spread spectrum (clock jitter to reduce EMR)
Post User Delay	None 1 Sec 2 Sec 5 Sec ... 10 Min	Adds a delay in the POST to reserve more time to USB devices during detection.

MARS Interface Configuration Menu

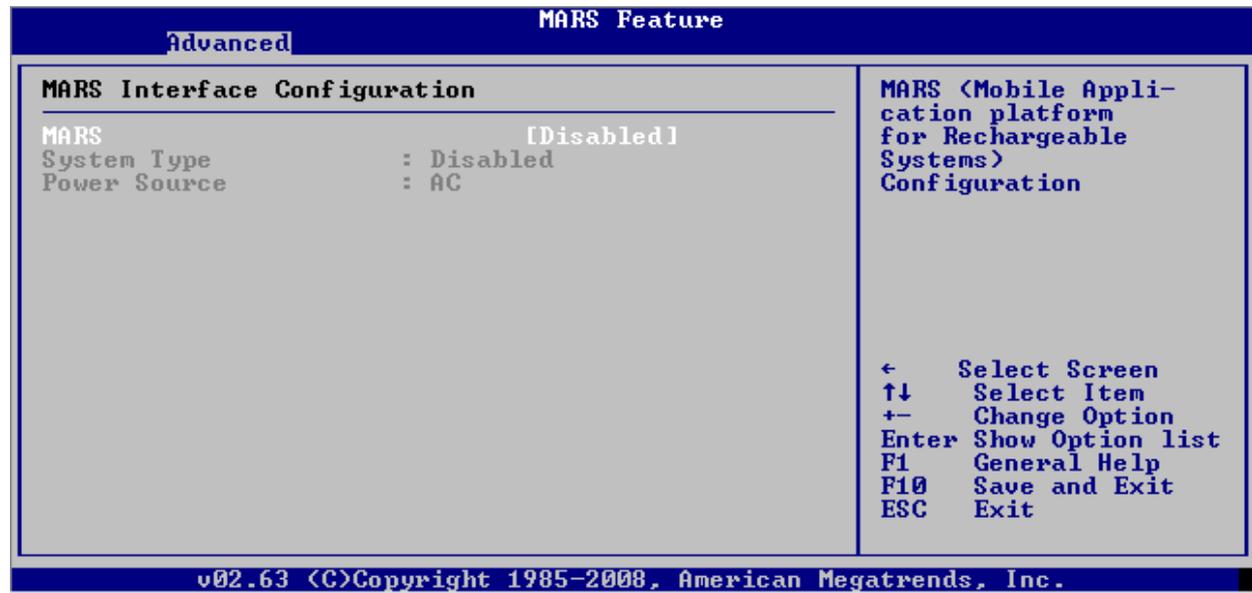


Feature	Option	Description
MARS	Disabled	Autodetect and disables the MARS support or selects a single SMB Charger or SMB Selector
	Auto	
	SMB Charger	
	SMB Selector	

I2C Busses Configuration Menu

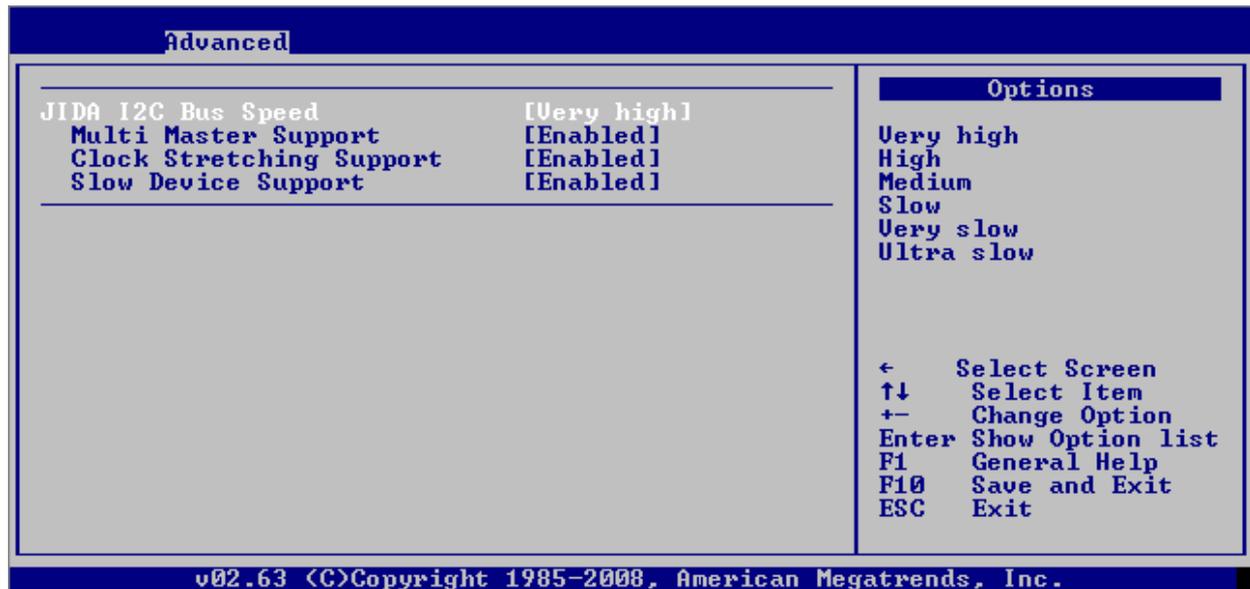


Feature	Option	Description
JIDA I2C Bus Speed	Very high High Medium Slow Very slow Ultra slow	Selects the speed of the I2C bus. The regarding bus speed is mention in chapter 4.7.3
Multi Master Support	Enabled Disabled	Disables and enables the Multi Master Support
Clock Stretching Support	Enabled Disabled	Disables and enables the Clock Stretching Support
Slow Device Support	Enabled Disabled	Disables and enables the Slow Device Support

Watchdog menu

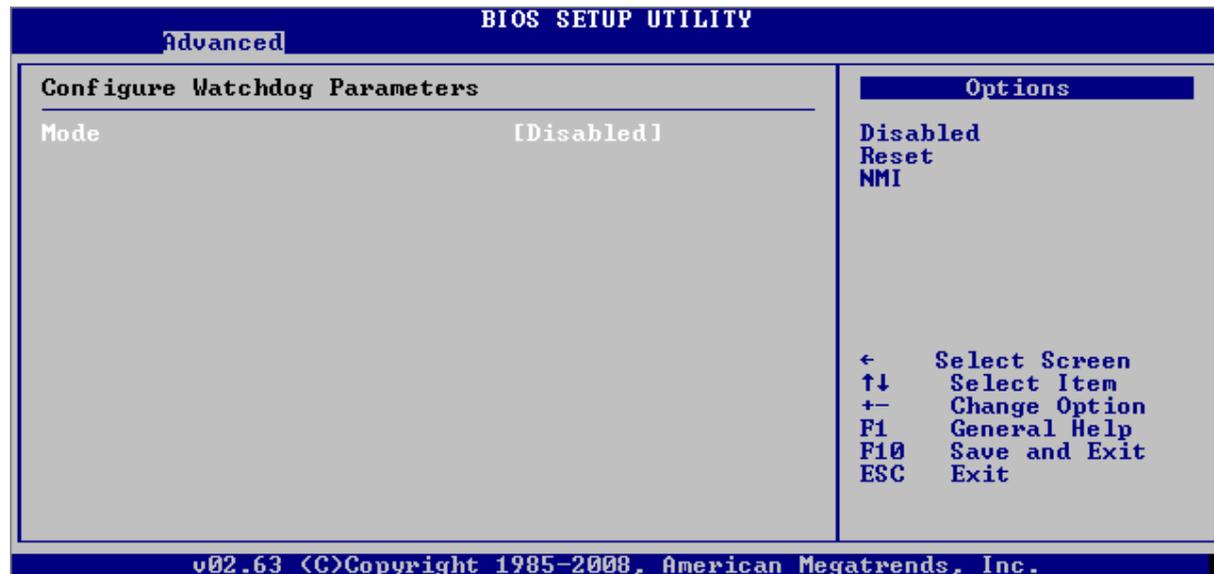


Feature	Option	Description
Active Trip Point	Disabled Reset NMI	Selects the Mode of the Watchdog behaviour
Delay	Disabled 1s 5s 10s ... 30:30m	Sets the delay, when the watchdog starts the 1st time. When you have an operating systems which needs long time to start set here an appropriate value.
Timeout	Disabled 1s 5s 10s ... 30:30m	Sets the timeout, when the watchdog must be triggered within that time.

Remote Access Configuration Menu

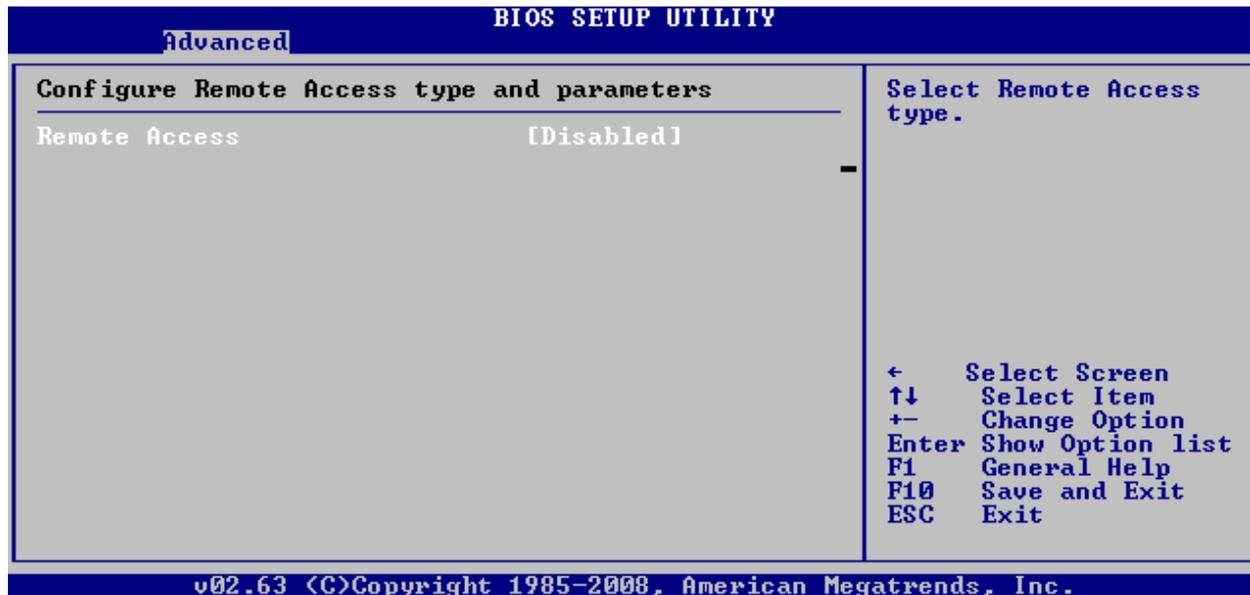


Feature	Option	Description
Remote Access	Enabled Disabled	Disables and Enables the AMI Remote Access feature. It has no influence in JRC connection.
Serial port number	COM1 COM2	Only enabled COMports while bootup are supported
Serial Port Mode	115200 8,n,1 57600 8,n,1 38400 8,n,1 19200 8,n,1 09600 8,n,1	Selects the speed of the connection
Flow Control	None Hardware Software	Selects the flow control mode
Redirection After BIOS Post	Disabled Boot Loader Always	Turns off redirection after POST Active during POST and boot loader It is always active
Terminal Type	ANSI VT100 VT-UTF8	Selects the target terminal type
VT-UTF8 Combo Key Support	Enabled Disabled	Enable/Disable VT-UTF8 Combination Key Support for ANSI/VT100 terminals
Sredir Memory Display Delay	No Delay Delay 1 Sec Delay 2 Sec Delay 4 Sec	Selects the delay to display memory information
Terminal Size	80x24 80x25	Selects terminal size type

LAN Controller

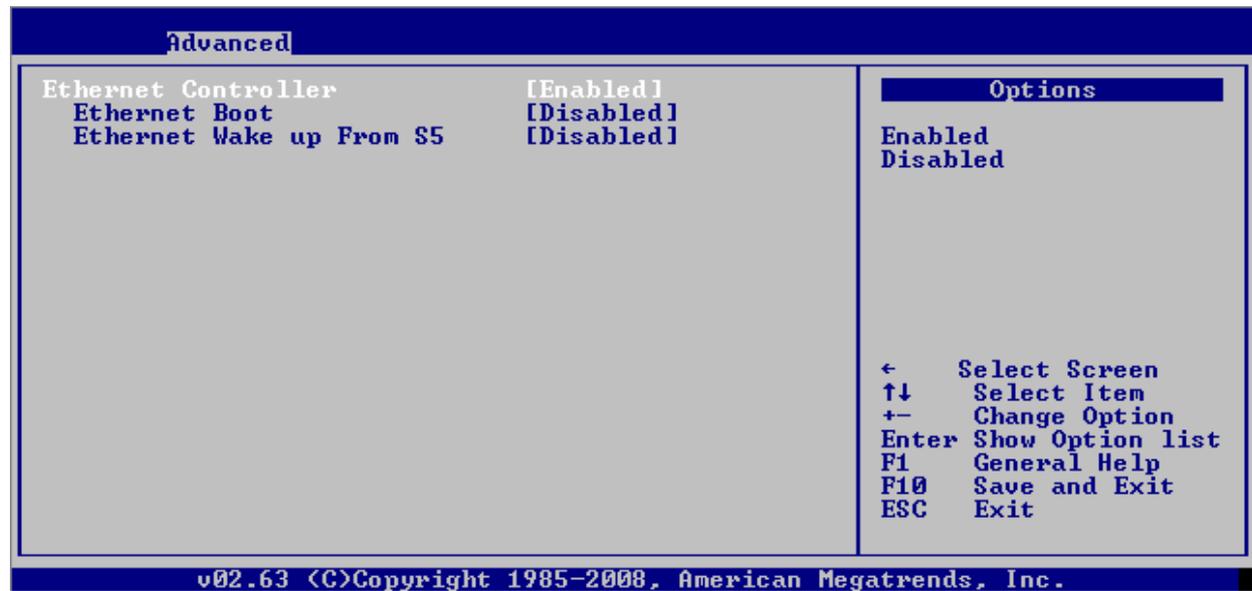

Feature	Option	Description
Ethernet Controller	Enabled Disabled	Disable and Enables the onboard ethernet controller
Ethernet Boot	Enabled Disabled	Disable and Enable the PXE boot ROM
Ethernet Wake up From S5	Enabled Disabled	Disable and Enable the WOL feature for S5

Trusted Computing

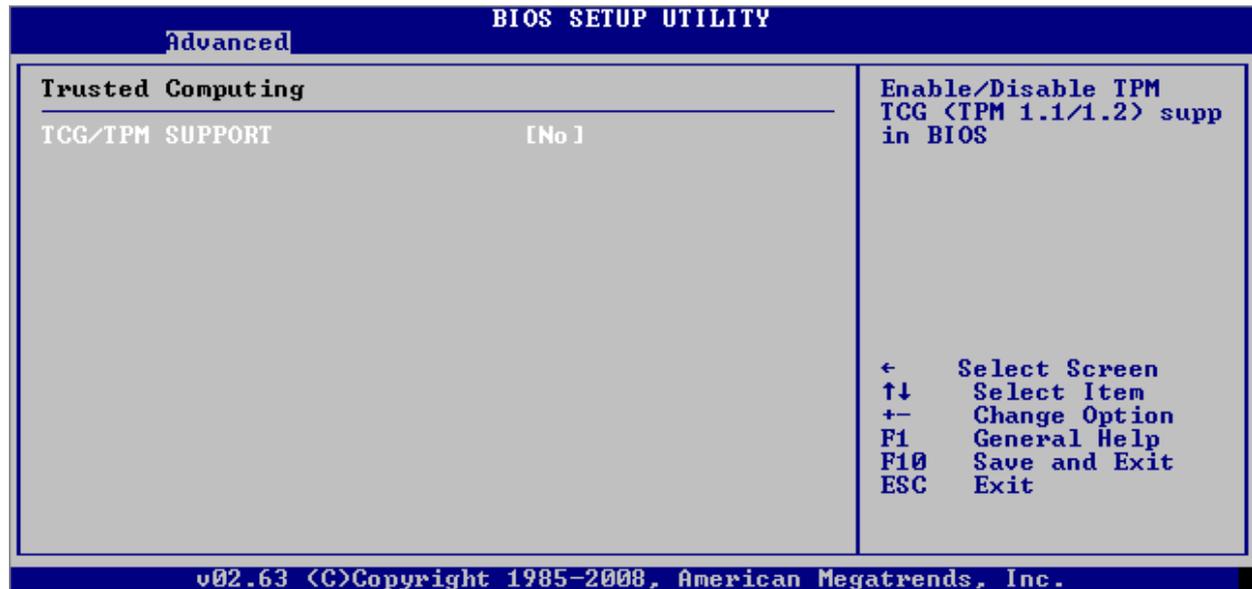


Feature	Option	Description
TCG/TPM SUPPORT	Yes	Enable /Disable TPM TCG support in BIOS
	No	

PCIPnP Menu

BIOS SETUP UTILITY		
Main	Advanced	PCIPnP
Advanced PCI/PnP Settings WARNING: Setting wrong values in below sections may cause system to malfunction. Plug & Play O/S [No] PCI Latency Timer [64] Allocate IRQ to PCI VGA [Yes] PCI IDE BusMaster [Enabled] OffBoard PCI/ISA IDE Card [Auto] IRQ3 [Available] IRQ4 [Available] IRQ5 [Available] IRQ7 [Available] IRQ9 [Available] IRQ10 [Available] IRQ11 [Available] IRQ14 [Available] IRQ15 [Available] Reserved Memory Size [Disabled]		Clear NURAM during System Boot. ← Select Screen ↑↓ Select Item +- Change Option F1 General Help F10 Save and Exit ESC Exit
v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.		


Feature	Option	Description
Plug & Play O/S	No Yes	No: all devices are initialized by BIOS Yes: OS has to initialize some devices
PCI Latency Timer	32 64 ... 248	Value in units of PCI clocks for PCI device latency register
Allocate IRQ to PCI VGA	Yes No	Decided if PCI VGA card does get an IRQ assigned if requested
Palette Snooping	Disabled Enabled	Disables and enables Palette Snooping
PCI IDE BusMaster	Disabled Enabled	Disables and enables PCI IDE Busmaster
OffBoard PCI/ISA IDE Card	Auto PCISlot 1 PCISlot 2 ... PCISlot 6	Some IDE Cards needs this , with set to Auto it works with most cards
IRQ3 ... IRQ15	Available Reserved	Available: IRQ useable by PCI/PnP devices Reserved: IRQ is reserved for ISA devices
DMA Channel 0 ... DMA Channel 7	Available Reserved	Available: DMA useable by PCI/PnP devices Reserved: IRQ is reserved for ISA devices
Reserved Memory Size	Disabled 16k 32k 64k	Size of memory block to reserve for legacy ISA devices

9.3.4 Boot Menu

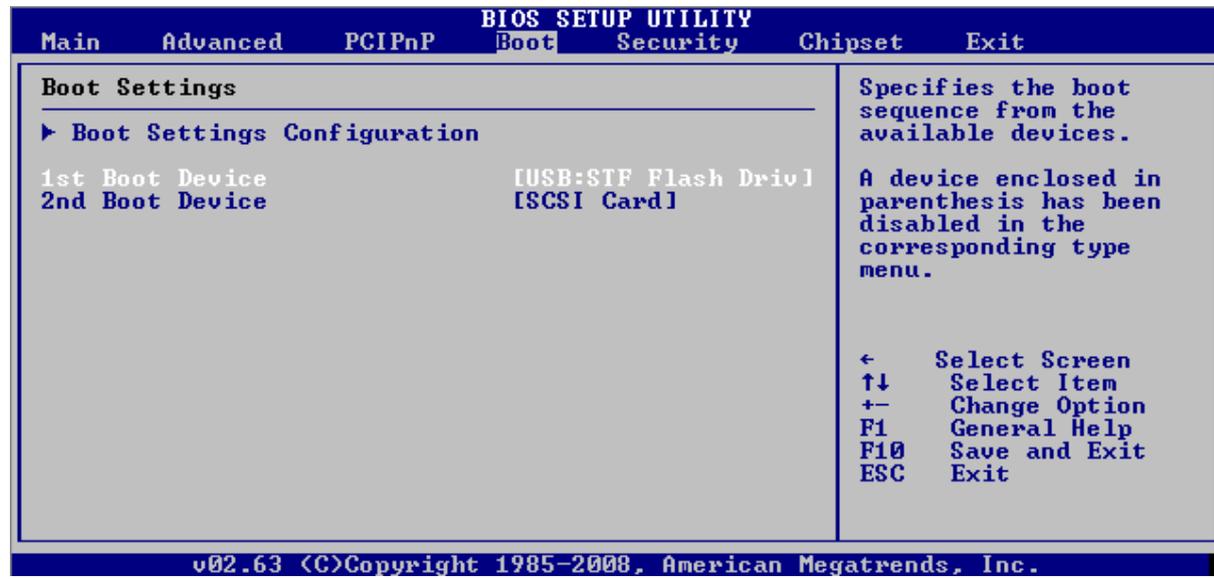


Feature	Option	Description
1st Boot Device	Selects detected devices	
2nd Boot Device	Selects detected devices	

Boot Settings Configuration Menu

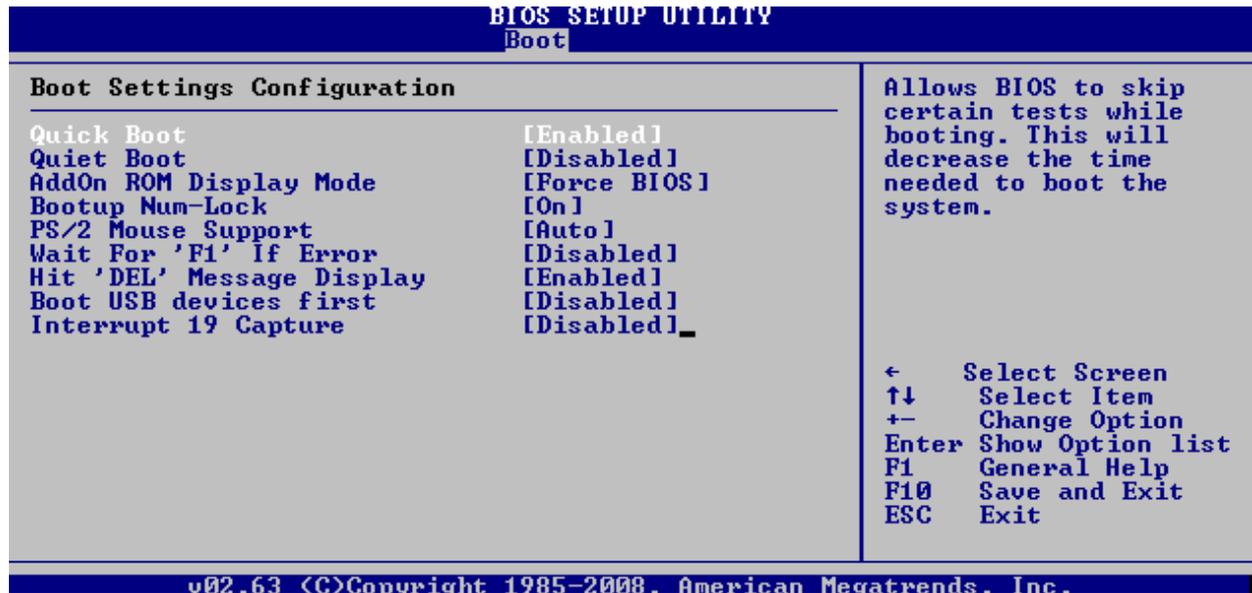


Feature	Option	Description
Quick Boot	Enabled Disabled	Disables or enables the quick boot feature
Quiet Boot	Disabled Enabled	Disabled: Shows normal POST messages Enabled: Shows OEM Logo during boot up
AddOn ROM Display Mode	Force BIOS Keep Current	Set Display Mode for Option ROM
Bootup Num-Lock	On Off	Select Power-On state for Num-Lock
PS/2 Mouse Support	Auto Disabled Enabled	Disables and enables or auto selects PS/2 Mouse Support
Wait For 'F1' If Error	Disabled Enabled	Wait for F1 key to be pressed, if error
Hit 'DEL' Message Display	Enabled Disabled	Displays: "Hit 'DEL' to run setup" during POST, if enabled
Boot USB devices first	Disabled Enabled	If enabled newly inserted USB devices will be added on top of the boot device list, if disabled in the end of the list.
Interrupt 19 Capture	Disabled Enabled	Allows option ROMs to trap INT19h if enabled

9.3.5 Security Menu

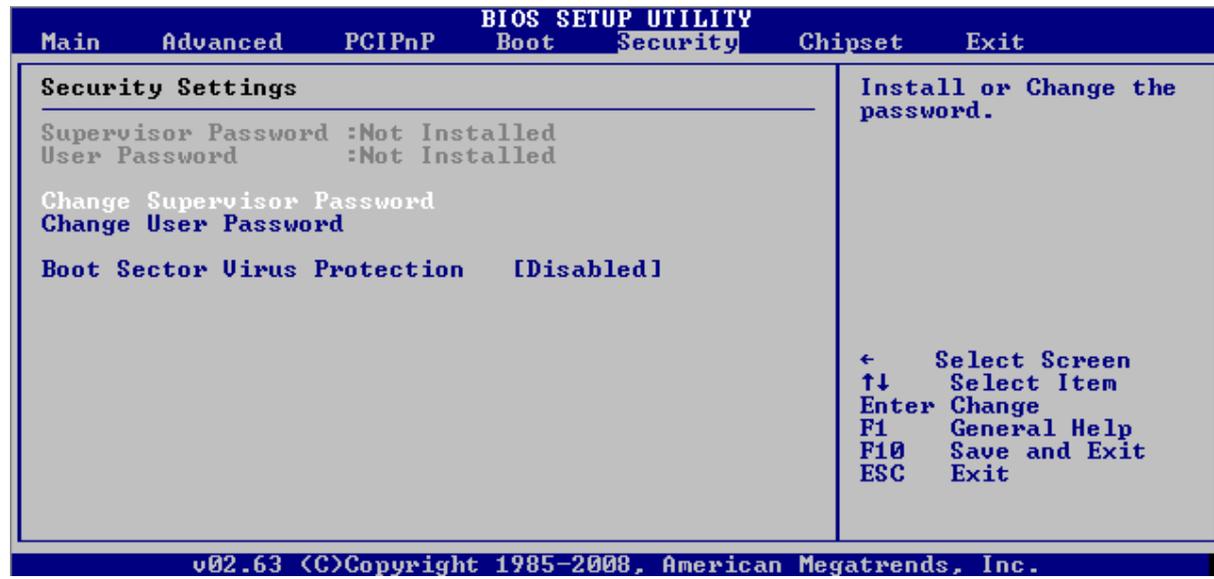

Feature	Option	Description
Change Supervisor Password	Type in	
Change User Password	Type in	
Boot Sector Virus Protection	Disabled Enabled	Enables or disables boot sector virus protection.

9.3.6 Chipset Configuration Menu

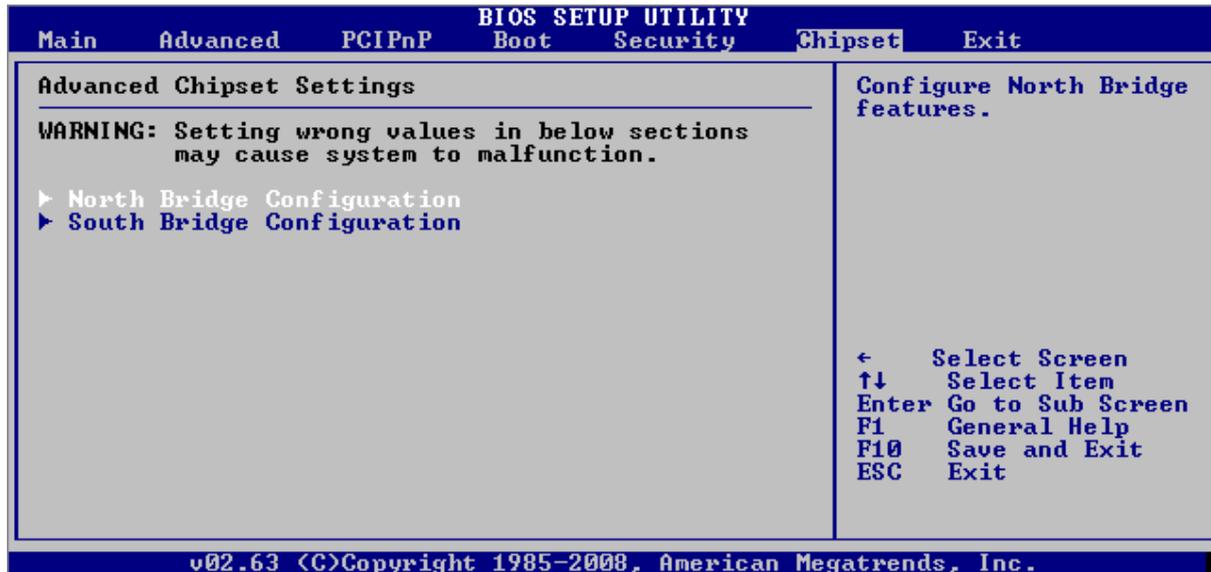


North Bridge Configuration

BIOS SETUP UTILITY		Chipset
North Bridge Chipset Configuration		Options
DRAM Frequency	[Auto]	Auto
Configure DRAM Timing by SPD	[Enabled]	400 MHz
Memory Hole	[Disabled]	533 MHz
Graphic Device Priority	[PCI/IGD]	
Internal Graphics Mode Select	[Enabled, 8MB]	
Chipset Thermal Throttling	[Disabled]	
DT in SPD	[Disabled]	
TS on DIMM	[Disabled]	
▶ Display Control		← Select Screen
DMI PM	[Enabled]	↑↓ Select Item
		+− Change Option
		Enter Show Option list
		F1 General Help
		F10 Save and Exit
		ESC Exit
v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.		

Feature	Option	Description
DRAM Frequency	AUTO 400MHz 500 MHz	Selects the DRAM Frequency
Configure DRAM Timing by SPD	Disabled Enabled	Enables or disables the SPD EEPROM DRAM configuration
Memory Hole	Disabled 15MB-16MB	Disables or enables the extended memory hole on ISA bus
Graphic Device Priority	PCI/IGD IGD	Selects the graphic device priority
Internal Graphics Mode Select	Enabled 8MB Disabled Enabled 1MB	Selects the amount of system memory used by the internal graphics device
Chipset Thermal Throttling	Disabled Enabled	Disables or enables chipset thermal throttling
DT in SPD	Disabled Enabled	Disables or enables the delta temperature in SPD thermal management algorithm as specified by JEDEC
TS on DIMM	Disabled Enabled	Disables or enables the thermal sensor on DIMM thermal management functionality as specified by JEDEC
DMI PM	Disabled Enabled	Disables or Enables DMI/FSB power management. If disabled, PCI performance will improve slightly.

Display Control Menu

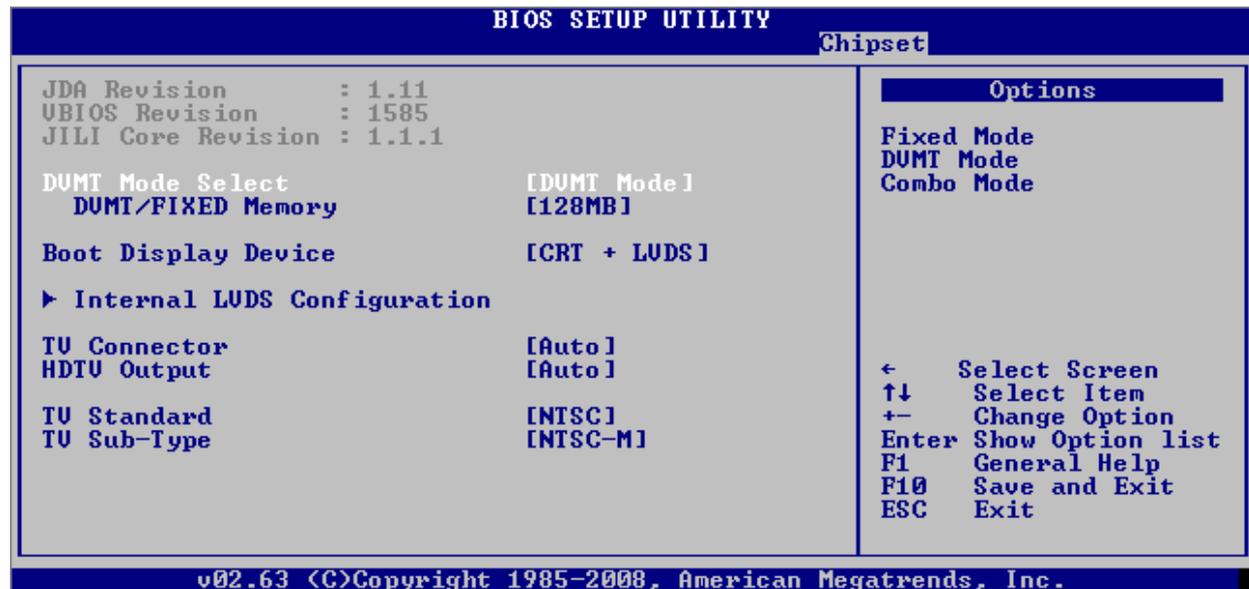

Feature	Option	Description
DVMT Mode Select	DVMT Mode Fixed Mode Combo Mode	Selects the DVMT Mode
DVMT/Fixed Memory	64MB 128MB Maximum DVMT	Selects the used memory for DVMT
Boot Display Device	CRT TV SDVO CRT + SDVO LVDS CRT + LVDS	Selects the graphic device which is present during boot up
TV Connector	Auto Composite Component Composite & RGB S-Video SCART Composite SCART Comp. & RGB SCART Comp. & S-Video SMPTE253 Compon. RGB	Selects the TV Connector signal mode
HDTV Output	Auto 480i60 480p60 576i50 576p60 720i60 1080i50 1080i60 1080p24	Selects the HDTV output mode


	1080p25 1080p30 1080p50 1080p60	
TV standard	NTSC PAL SECAM SMPTE240M ITU-R television SMPTE295M SMPTE296M EIA-770.2 EIA-770.3	Selects the TV standard
TV subtype	Depends on TVstandard	Selects the TV standard subtype

Internal LVDS Configuration

Chipset	
Current LVDS Configuration Data Source : NONE Resolution : N/A Channel Count : N/A Dithering : N/A Flat Panel Mode [Auto] Auto Fallback [Disabled] PAID/FPID [5] Local Flat Panel Scaling [Stretched] LVDS -> DVI ID [8] Backlight Control Type [I2C] Backlight Brightness [128]	Options Auto Fixed Mode PAID FPID ← Select Screen ↑↓ Select Item +- Change Option Enter Show Option list F1 General Help F10 Save and Exit ESC Exit
v02.63 (C)Copyright 1985-2008, American Megatrends, Inc.	


Feature	Option	Description
Flat Panel Mode	Auto Fixed Mode PAID FPID	Auto: checks if there is an external JILI EEPROM, if not see Auto Fallback Fixed Mode: uses Flat Panel Type PAID/FPID: uses the PAID/FPID
Auto Fallback	Fixed Mode Disabled	Select what happens, when no valid EEPROM content is found
Flat Panel Type (is only valid in Fixed Mode and when set to Auto and no valid JILI EEPROM content was found)	VGA 640x480 SVGA 800x600 XGA 1024x768 SXGA 1280x1024 ... WXGA 1366x768 WXGA 1280x800	Select the flat panel resolution
PAID/FPID (only valid in PAID or FPID mode)	Enter ID	Enter the PAID or the FPID
Channels	Single Channel Dual Channel	Selects the number of channels to drive the display
Local Flat Panel Scaling	Stretched Centered Disabled	Selects the scaling mode of the LVDS interface
LVDS -> DVI ID	8 5	2x18 1x18
Backlight Control Type	None/External I2C PWM	Selects the mode of backlight control
Backlight Brightness	0-255	Selects the Backlight default brightness

Southbridge Configuration Menu

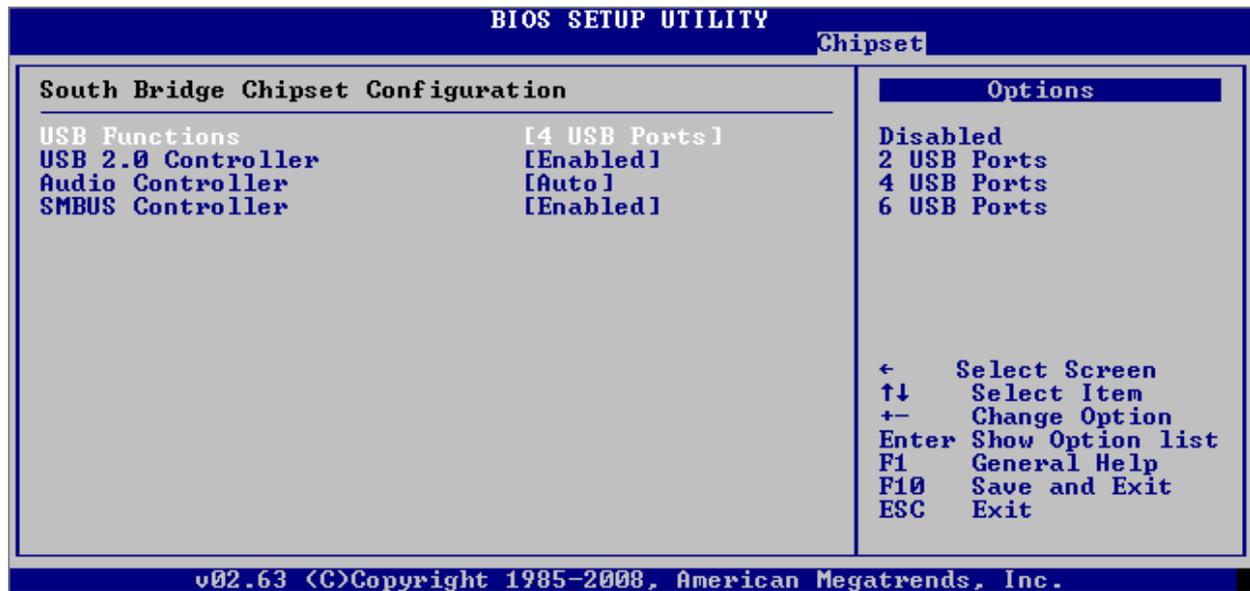

Feature	Option	Description
USB Function	Disabled 2 USB Ports 4 USB Ports 6 USB Ports	Selects the number of enabled USB ports
USB 2.0 Controller	Enabled Disabled	Enables or disables the USB 2.0 EHCI controller
Audio Controller	Auto Azalia AC'97 Audio or Modem All Disabled	Selects the mode of the used audio controller
SMBUS Controller	Enabled Disabled	Enables or disables the SMBUS controller

9.3.7 Exit Menu

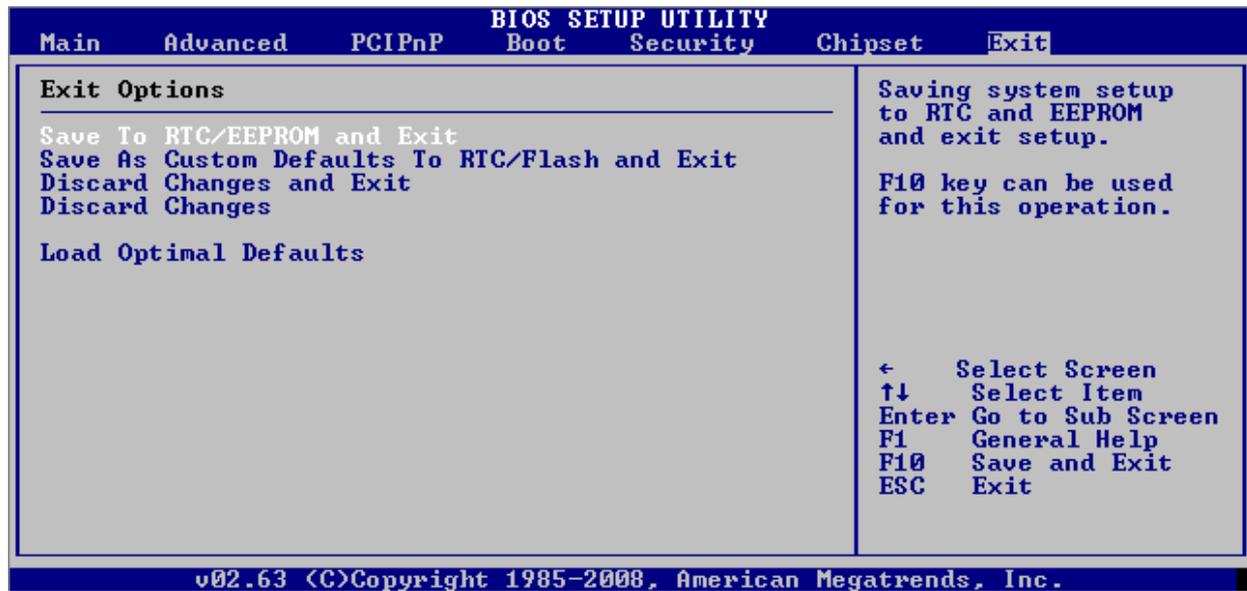

Corporate Offices

Europe, Middle East & Africa

Oskar-von-Miller-Str. 1
85386 Eching/Munich
Germany
Tel.: +49 (0)8165/ 77 777
Fax: +49 (0)8165/ 77 219
info@kontron.com

North America

14118 Stowe Drive
Poway, CA 92064-7147
USA
Tel.: +1 888 294 4558
Fax: +1 858 677 0898
info@us.kontron.com

Asia Pacific

17 Building, Block #1, ABP.
188 Southern West 4th Ring
Beijing 100070, P.R.China
Tel.: + 86 10 63751188
Fax: + 86 10 83682438
info@kontron.cn

